PREMIUMCARE COVERS MORE THAN 1,000 KEY COMPONENTS

 Hose - Power Steering Pressure
 Insulator St Hose - Power Steering Insulator St Reservoir Top Insulator/M · Hose and Filter - Power Intake Mani Steering Line Intake Mani Hose Assembly - A/C Vacuum
 Inter Clutch Hose Assembly - Power Intercooler Steering Pressure Interior/External Hose Assembly - Power Handle/Leve Steering Return Intermediate Hose Exhaust Air Pump Intermediat Hose Front/Rear Seat B/Pad Internal Ser Hose Fuel Vapor Return Inverter Svs Housing - Steering Gear Housing and Bearing Joint Assemble Assembly Clutch Front Susper Housing and Ins Joint Assemble Assembly Transaxle Front Susper Housing Assembly Joint Assemble Housing Assembly - Rear Axle
 Joint Assembly Housing Assembly Roof Slide Rear Suspe Housing Cover - Gearshift
 Joint Assem Hub - Differential Gear Clutch
 Kingpins and Hub - Direct Clutch Knock Sens Hub - Intermediate Clutch Knuckle Ass Hub - Synchronizer Hub /Knuckle Assembly
 Knuckle- Re Hub Assembly - Clutch Release
 Lamp - Inte Hub Crankshaft Pulley Lamp Asser Hub Synchronizer Hybrid Battery Cooler Assembly
 Lamp Outag Hybrid Battery Fan Lane Depar Hybrid Battery Fan Motor
 Latch - Fron Hybrid DC to DC Converter
 Latch Front/ Hybrid High Voltage Disconnect
 Latch Rear Hybrid Information Display
 Latch Rear Hybrid Traction/Electric Motor
 LED (Light F Hydraulic Actuator Assembly Lighting - I Hvdraulic Piston Level Rever Idler Assembly - Timing Belt
 Lever - Brake Ignition Cylinder Lock Lever - Park Impeller - Water Pump Lever - Powe Indicator - Rear Bracket Lever Assem Indicator Assembly - Oil Level
 Lever Assembly - Oil Level Indicator Assembly - Radio Lever Brake Receiver Control Lever Lumb Indicator Control Selector Lever Trans Inertia Switch Lift Assembl Inflatable Seat Belts Link Assem Insert - Oil Pump Drive Gear Linkage and Insert - Synchronizer Hub Load Levele Insulator - Alternator Lock Assem Insulator - Front Radius Arm Lock Assem Insulator - Front Spring Locking Hul

Insulator - Rear Axle Differential
 Lockout Hull

Master Cylinder

Insulator - Rear Spring

Insulator A/C Cond

Insulator EGR Tube

Insulator Front Spring

Insulator Rear Spring

	 Insulator Stabilizer Assembly 		Lower Ball Joint - Fro
	Insulator Steering Gear		Lower Piston Seal
	Insulator/Mount - Engine Block		Macpherson Strut Fr
	Intake Manifold Run		Macpherson Strut Re
	Intake Manifold Support		Magnet Case Cerami
	 Inter Clutch Cylinder Assembly 		Main Bearing Thrust
	Intercooler		Manifold - Vacuum C
	Interior/Exterior Door		Manifold Absolute
	Handle/Lever		Pressure Sensor
	Intermediate Clutch - Piston	•	
	Intermediate Clutch - Piston Sea		Manifold and Tube A
	Internal Seperator Plate		Manifold and Valve A
	Inverter System		Manifold Assembly -
	Controller (ISC) (Hybrid)		Mass Air Flow Sensor
	 Joint Assembly - 	•	Mass Air Flow/Intake
	Front Suspension		Temp Sensor
	 Joint Assembly - 	•	Master Assembly - P
	Front Suspension Lower		Brake Control
	• Joint Assembly - Rear Axle Shaft	•	Master Cylinder
	 Joint Assembly - 		Master Cylinder Asse
	Rear Suspension Lower		Master Cylinder Spri
	 Joint Assembly - Shifter Rod Fron 		Metering Valve Asser
	 Kingpins and Bushings 	•	
	 Knock Sensor 	•	Mobile Phone Contro
	 Knuckle Assembly - 	•	Module - Brake Anti
	Universal Joint	•	Module - Engine Con
t	 Knuckle- Front Wheel 	•	Module - Fuel Pump
	 Knuckle- Rear Wheel 	•	Module - Glow Plug (
	 Lamp - Interior Pillar 	•	Module - Parking Aid
	 Lamp Assembly - 		Module - Passive Res
	Transmission Control		Module - Water Deter
	 Lamp Outage Module 	•	Module and Control I
	 Lane Depart Warning System 		Brake Anti-Lock
	 Latch - Front/Rear Door 		Module Assembly - A
	 Latch Front/Rear Seat Back 		Module Assembly - Ig
	Latch Rear Seat		Module Assembly - N
	Latch Rear Seat Cushion	•	Module Assembly -
	LED (Light Emitting Diode)		Transmission Case
	Lighting - Factory Installed		Module Instrument C
	Level Reverse Gear shaft		Motor - Adjustable P
	Lever - Brake Shoe Adjuster Desking Braker		Motor and Drive Asse
	Lever - Parking Brake Lever - Parking Brake	•	Motor Assembly - Blo
	Lever - Power Diff Lever Assembly Down Shift		Motor Assembly - Ele
	Lever Assembly - Down Shift Lever Assembly - Fleet Shift	•	Motor Assembly - Ste
	Lever Assembly - Elect Shift Lever Broke Shee Adjuster		Column Release Motor Assembly - Va
	Lever Brake Shoe AdjusterLever Lumbar Support	•	Controller
	Lever Transfer Case Control	•	
	Lift Assembly Hood		Navigation Antenna
	Link Assembly - Stabilizer Bar		Noise Insulator
	Linkage and Bushings		Nox Sensor
	 Load Leveler Suspension System 		Nozzle - Defroster
	Lock Assembly - Steering		Nozzle - Windshield \
	Lock Assembly Rear Seat Back		Nozzle and Duct Hear
	Locking Hub Assembly		Nozzle Assembly - Fu
	Lockout Hub Actuator Cam	•	
	Lockout Hub Plate		Nut Assembly Front V
	Lockout Hub Retainer	•	Nut Steering Gear
	Logic Module Brake -	•	Odometer Assembly
	M I O I' I		014114

Oil Actuator Assembly

Oil Cooler Transmission

''' I.U	UU	
Ball Joint - Front Axle Piston Seal erson Strut Front erson Strut Rear t Case Ceramic earing Thrust Washer Id - Vacuum Outlet Id Absolute re Sensor Id and Thermostat Id and Tube Assembly Id and Valve Assembly Id Assembly - Fuel Supply iir Flow Sensor iir Flow/Intake Air sensor Assembly - Parking Control Cylinder Cylinder Spring Ig Valve Assembly hone Assembly Phone Control Assembly e- Brake Anti e- Engine Control Relay e- Fuel Pump Driver e- Glow Plug Control e- Parking Aid Control e- Passive Restraint e- Water Detection e- Assembly - Multi Function e- Assembly - Multi Function e- Assembly - Ignition e- Assembly - Multi Function e- Assembly - Ignition e- Assembly - Steering in Selease assembly - Blower Heater Adjustable Pedal and Drive Assembly assembly - Blower Heater Assembly - Steering n Release assembly - Vacuum lier ler - Defroster	Oil Level Sensor Oil Pan Oil Pressure Sender Oil Pump Oil Pump Gear Oil Pump Gear Oil Pump Housing Oil Seal - Output Seal Oil Seals - All Internal and External Oil Seals - All Internal and External Oil Seals - Output Seal Oring - Locking Hub Oring - Did Cooler Oring - Oil Cooler Oring - Suspension Air Spring Dryer Conn Oring Solenoid Output Flange Ret Nut Output Shaft Bearing Output Flange Ret Nut Output Shaft Seal Oxygen Sensor Pad - Brake and Clutch Pedal Panel Assembly Roof Parking Pawl Pawl Front/Rear Seat Back Latch Pawl Overdrive Shift PCM (Powertrain Control Module) PCV and Elbow Assembly PCV Tube/Hose Pedal Adjuster Assembly Pedal Assembly - Accelerator Pedal Assembly - Brake Pilot Assembly Pin - Differential Pinion Shaft Pin - Door Hinge Pin - Piston Pin - Planetary Gear Pin - Steering Column Pin Lock - Rear Spring Shackle Pin Plate Pinion - Diff Spider Pipe Brake Antilock Piston - Front Servo Piston Assembly - Brake Cylinder Piston Assembly - Transmission	Plenum EGR - Signal Con Plug - Oil Pan Plug Sasembly Trailer Lamp Plunger - Interlock Plunger - Oil Pump Valve Plunger - Transmission Shift Plunger/Sleeve - Shifter Positive Crankcase Ventilation (PCV) Valve Potentiometer A/C Potentiometer Assembly Potentiometer Assembly Potentiometer Position Sensor Power Antenna Power Brake Booster Valve Power Brake Vacuum Motor Power Door Lock Actuator Power Door Lock Actuator Power Door Lock Actuator Power Running Board bracket Power Regulator Rear Door Power Regulator Rear Door Power Steering Fluid Reservoir Power Steering Hose Power Steering Module and Bracket Power Steering Pressure Switch Power Steering Pump Assembly Power Steering Pump Valve Pressure Relief Valve Cap Pressure Transducer Primary Sun Gear Processor Assembly Processor Assembly Processor Assembly Processor Assembly Processor Assembly
- Defroster - Windshield Washer	Reverse Clutch • Piston Pin - Front Band	Pulley - Alternator Pulley - Belt Idler
and Duct Heater Dems	 Piston Ring 	 Pulley - Water Pump
Assembly - Fuel Injector Window Defogger	Pivot - Front/Rear Seat BackPivot Rear Seat Back	Pulley and Bracket - FanPulley and Bracket
window Delogger sembly Front Wheel Bearing		Assembly - Fan
eering Gear	Transmission Rear	Pulley Assembly - Belt Idler
tou Accombly	Dianatary Front	Dulloy Assambly Proka

Planetary Front

Plate - Camshaft Thrust

Plate - Coupling Shaft

Pulley Assembly - Brake

Pulley Assembly - Fan belt

Vacuum Pump

al Clutch	Pulley Fan	Relay Assembly H
Clutch	Pump - Front/Rear/Seat	Relay Assembly So
Arm	Pad Adjuster Pump Windshield Washer	Vacuum ValveRelay Assembly W
ed Clutch	Pump - Windshield WasherPump and Regulator Assembly	 Relay Assembly W Relay Assembly/Ti
affle	Pump Assembly - Brake Vacuum	Relay Battery Sav
sion	Pump Assembly Ex Air Supply	Electronic Module
Clutch Release	Purge Regulation Valve	 Relay Bracket
Diff Gear Clutch		 Relay Control
Engine Rear	Rack Assembly - Steering Gear	Remote Control as
Trans Oil Pump	Radiator Assembly Padiator Tank Inlet Assembly	Assembly
g Clip Broke Book	Radiator Tank Inlet Assembly Pail Poof Sliding Panel	Reservoir - Brake Reservoir - Brake
Brake Back	Rail Roof Sliding PanelRear Antilock Braking Valve	Reservoir - BrakeReservoir Air Horn
g Clip mp Mounting	Rear Axle Bearing	Reservoir and Out
gnal Con	Rear Axle Seal	Assembly
J	Rear Brake Lever	Reservoir Assemb
ailer Lamp	Rear Brake Shoe Pin	 Reservoir Assemb
ck	Rear Crankshaft Seal	 Reservoir Brake -
np Valve	Rear Disc Brake Seal Rear Hub Assembly	Restrictor Fuel Va
iission Shift	Rear Hub Assembly Poor Loof Spring Shookles	Ret Door Window
Shifter	Rear Leaf Spring ShacklesRear Spring Air Suspension	Retainer - ClutchRetainer - Clutch
se Valve	Rear Stab Bar Axle Meeting	Retainer - Gear St
C	Rear Stabilizer Bar	Retainer - Power I
sembly	Rear Tube Assembly -	Retainer - Rear Av
sition Sensor	Brake Master	 Retainer - Transm
	Rear Wheel Bearing	 Retainer and Spri
ster Valve	Rear Wheel Bearing	Retainer Drive Pin
uum Motor	Lockout Washer	Retainer Front Spi
Actuator	 Rear Wheel Bearing Seal Assembly 	 Retainer Plate - A Retainer Rear Axle
and	Rear Wheel Retainer	Retainer Rear Spr
or and Gears	Receiver Remote/Control	Return Assembly -
Rear Door	Receiver Tire Pressure	Cable Bracket
oard bracket	 Rectifier Assembly - Alternator 	Ride Control Modu
luid Reservoir	 Rectifier Engine Warning 	 Ring - Speed Sens
ose	Reductant Injector	Ring - Transmissi
lodule	Reductant Lines Reductant Dump Assembly	Rod - Clip/Slave (
rocouro Cuitab	 Reductant Pump Assembly Reductant/Urea Tank 	Rod - Transmissio Rod Assembly Free
ressure Switch ump Assembly	Reductant/orea rank Refrigerant Line	 Rod Assembly - Fr Rod Assembly - Ro
ump Seals	Register Assembly - Heater	Rod Assembly - Tr
ump Valve	Regulator - Front Door	Roll Stability Cont
alve Cap	Regulator - Front Door L	Roller - Reverse lo
icer	Window - Power	 Rotor and Plate -
r 	Regulator - Front Door R	Steering Pump
bly	Window - Power	Running Board Mo
bly -	Regulator - Front Door Vent Pagulator Assembly	Screen - Oil Pump Screen Accombine
	Regulator AssemblyRegulator Assembly - EGR	Screen Assembly Screw Modulator
or	Relay - A/C Clutch	Screw - ModulatorSeal - A/C Conder
n ſ	Relay - Air Heater (Diesel)	Seal - A/C Door
mp	Relay - Alternator Field	Seal - A/C Inlet Do
et - Fan	Relay - Antiskid	Seal - Brake Boos
et	 Relay - Engine Cooling Fan 	 Seal - Camshaft F
	Relay - Purge Valve	Seal - Crankcase

1	Relay Assembly Headlamp Relay Assembly Solenoid Vacuum Valve Relay Assembly Window Heater Relay Assembly Window Heater Relay Assembly Window Heater Relay Battery Saver - General Electronic Module Relay Battery Saver - General Electronic Module Relay Bracket Relay Control Remote Control and Latch Assembly Reservoir - Brake M/C Reservoir - Brake Master Cylinder Reservoir Assembly - EGR Valve Reservoir Assembly - EGR Valve Reservoir Assembly - EGR Valve Reservoir Assembly Vacuum Reservoir Assembly Vacuum Reservoir Farke - Master Cylinder Restrictor Fuel Vapor Ret Door Window Glass Retainer - Clutch Piston Retainer - Clutch Piston Spring Retainer - Clutch Piston Spring Retainer - Gear Shift Retainer - Power Brake Booster Retainer - Rear Akle Shaft Retainer - Transmission Output Retainer and Spring Assembly Retainer Drive Pinion Retainer Front Spring Lower Retainer Plate - Auxiliary Shaft Retainer Rear Spring Lower Retainer Retai	Seal - Rear Wheel Drive Inboard Seal - Rocker Arm Shaft Seal - Sector Shaft Seal - Steering Gear Valve Seal - Water Pump Seal - Window Regulator Switch Seal Assembly - Steering Column Seals - Integral Power Steering Gear Seals and Gaskets Seat Back Reclining Mechanism Seat Belt and Buckle Rear Seat Seat Position Center Seat Track Support Assembly Sender - Fuel Tank Sender - Oil Pressure Sender - Water Temp Sensor - ABS Sensor - Air Temperature Sensor - Crank Timing Sensor - Front Suspension Level	Sensor Asse Center Sensor Asse Sensor Asse Sensor Asse Sensor Asse Sensor Asse Separator A Servo Assen Temperature Shackle Ass Shaft - A/CC Shaft - Actu Shaft - Bral Shaft - Diffe Shaft - Gear Shaft - Diffe Shaft - Gear Shaft - Diffe Shaft - Gear Shaft - Diffe Shaft - Pow Pump Rotor Shaft - Shaft - Shaft - Shaft Shaft - Shaft Shaft - Shaft Shaft and B Water Pump Shaft and B Shaft and C Shaft and R Assembly Si Shaft Assen Shaft Assen Shaft Assen Shaft Assen Shaft Assen Shaft Assen Transmissio Shaft Bushi Shell - Trans Shield - Fen Shield - For Shield - Por S
	Seal - A/C Inlet Door Seal - Brake Booster	Front/Rear	Sleeve/RingSlide - Door
	0 1 0 1 0 5	- C A	a Clida Frank

Seal - Front Wheel Drive Inboard Cooler Temp

Misfire Detector

Relay Assembly - Brake Warning
 Seal - Front, Wheel Hub

Relay Assembly A/C Blower Motor
 Seal - Front/Rear Brake Hub

Relay Assembly

ler	Sensor Assembly - Message	SNS and Transmission	Steering Column Lock Asset
	Center	Assembly - Tire Press	 Steering Stop
on		Socket - Instrument Panel Light	Steering Wheel Controls
ald	 Sensor Assembly - RR Bracket Anti-Lock 	Socket and Wire - Rear Left Socket Assembly Applicant	Steering Worm Bearing Cul Stem A/C Clutch Switch
old	Sensor Assembly - Tire Pressure	 Socket Assembly - Auxiliary Electric Power 	 Stem A/C Clutch Switch Stop Assembly Rear Seat B
L	Sensor Assembly - Yaw Control	Solenoid - Engine Timing	Striker Rear Seat Latch
dy	Separator Assembly - CC Vent	Solenoid - Engine	Strut - Front Suspension Lo
g g	 Separator Assembly - Fuel Vapor 		Subwoofer Assembly
ke Shaft	Servo Assembly - Automatic	Solenoid - Luggage Door	 Suction/Discharge Assemb
ng Gear	Temperature Control	 Solenoid - Press Regulator 	 Sunload Sensor
	Shackle Assembly Rear Spring	Solenoid - Regulator	 Support - Coupling Shaft B
	Shaft - A/C Door	Solenoid - Transmission	Support - Exhaust Pump
Orive Inboard	 Shaft - Actuating Level Shaft - Brake Pedal 	Downshift	Support - Front/Rear Seat
Shaft	Shaft - Differential	 Solenoid - Vacuum Modulator Solenoid and Manifold Actuator 	Support - Front/Rear Seat Polt Buckle
ır Valve	Shaft - Gear Shifter	Solenoid Assembly	Belt BuckleSupport - Rocker Arm
ii vaivo	Shaft - Manual Control	Solenoid Assembly - Fuel	Support - Turbocharger
	Shaft - Output	Solenoid Assembly - Trans	Support Arm Assembly
	Shaft - Power Steering	Sonic Plenum EGR Valve	Support Assembly - Drive
	Pump Rotor	 Spacer - Front Spring 	 Support Assembly - Transn
	Shaft - Shift Accumulator	 Spacer - Power Steering 	 Switch - A/C Comp Clutch
wer	Shaft - Steering To Column Chaft and Bassian	Spacer - Rear Spring	Switch - A/C Pressure
	Shaft and Bearing - Water Dump	Spacer - Transmission	Switch - A/C Temperature (
g Mechanism	Water PumpShaft and Bearing Assembly	Spare Wheel Carrier Lift Assembly	Switch - Back Up Light Switch - Broke Anti-Look
le Rear Seat	Shaft and CV Joint Assembly	Lift AssemblySpeaker - Assembly	 Switch - Brake Anti - Lock Switch - Brake Low Press
er	Shaft and Rack	Speaker - Parking Aid Control	Switch - Brake Pressure Wa
Assembly	Assembly Steering	Speedograph/Tachograph	Switch - Brake Traction
,	 Shaft Assembly - Coupling 	Speedometer Assembly	Lock Control
re	 Shaft Assembly - Front Axle 	Spindle - Nut and Bearing	 Switch - Coolant Temp
ıp	Shaft Assembly - Rear Brake	 Spindle and Spindle 	 Switch - Electrical Windshi
	Shaft Assembly -	Support Springs	Wiper
nsion Level	Transmission Input	Spindle Assembly	Switch - Fuel Filter
rature in a	Shaft Bushing Assembly - OuterShell - Transmission		Switch - Ignition Anti-Thef Switch - Braceura Warning
ing pension Level	Shield - Fender Splash	Spring - Camshaft PlungerSpring - Differential Clutch	Switch - Pressure WarningSwitch - Temp Control
or Pump	Shield - Front/Rear Disc Brake	• Spring - Door Latch	Switch - Temp Control Valv
nt	Shield - Modulator Heat	Spring - Front	Switch - Turn Indicator
rature	 Shield - Parking Brake 	Suspension Torsion	Switch - Vacuum Pump
aft	 Shift Solenoid and Screen 	Spring - Gear Tensioner	 Switch and Bracket
d System	Shifter - Transmission Gear	 Spring - Governor Valve 	Assembly - Tailgate
ension Level	Shift Control	Spring - Leaf Rear	Switch Assembly - Brake W
orhor	Shim A/C Compressor Skid Control Module Book	Spring - Overrunning Clip Spring - Doubling Power	Switch Assembly - Door Aja
orber rol	Skid Control Module RearSleeve - Bearing	Spring - Parking PawlSpring - Rear Suspension Torsion	 Switch Assembly - Door Loc Switch Assembly - Door Wa
or Actuator	Sleeve - Bearing Sleeve - Front Stabilizer Bar	Spring - Reverse Inhibitor	 Switch Assembly - Door Wa Switch Assembly - EGR
ke	Sleeve - Rear Stabilizer Bar	Spring - Shift Bias	Switch Assembly - Elect Sh
ter	Sleeve - Spacer Snap Ring	Spring - Tran G/Shift Lever	Switch Assembly - Fuel Tar
ant	Sleeve - Transmission Oil	 Spring Assembly - Front 	Switch Assembly - Gear
ion Oil	Pressure Boost	 Spring Assembly - Rear 	Shift Neutral
	Sleeve Assembly - Clutch Ad	Springs Slipper	 Switch Assembly - Lock Se
eed Aaaamblii	Sleeve Assembly - Rear Lube Sleeve (Ring Assembly Leelson)	Sprocket - Crankshaft Sprocket - Crankshaft	Switch Assembly - Parking
t Assembly	Sleeve/Ring Assembly Lockout Slide Deer Window Regulator	Sprocket - Lock Ring Stort/Stop Bush Button Switch	Switch Assembly - Pressure Switch Assembly - Pressure
Camabatt	Slide - Door Window Regulator Slide - Front/Page Soot Trook	Start/Stop Push Button Switch	Switch Assembly - Radio

	Pump - Windshield Washer	Relay Assembly Window Heater	Seal - Hub Grease	Sensor Assembly - RR Bracket	Socket and Wire - Rear Left	Steering Worm Bearing Cup	Tensioner - Timing Chain	Valve - A/C Compressor Pressure	Seat Control
	Pump and Regulator Assembly	Relay Assembly/Turn Signal	Seal - Intake Manifold	Anti-Lock	Socket Assembly - Auxiliary	Stem A/C Clutch Switch	Thermistor/Temperature	Valve - Arti Backfire	Wire Assembly -
	Pump Assembly - Brake Vacuum		Seal - Oil Pan Front	Sensor Assembly - Tire Pressure		Stop Assembly Rear Seat Back	Sensor Probe	Valve - Assembly H/L Cover	Neutral Switch
	Pump Assembly Ex Air Supply	Electronic Module	Seal - Oil Pan Rear	Sensor Assembly - Yaw Control	Solenoid - Engine Timing	Striker Rear Seat Latch	Thermostat Housing	Valve - Assembly 17/2 Gover Valve - Brake Pressure	Wire Assembly - RPM
	• Purge Regulation Valve		Seal - Oil Pump Body	Separator Assembly - CC Vent	Solenoid - Engine Solenoid - Engine	Striker Real Seat Later Strut - Front Suspension Lower	Throttle Valve Cable	Differential	Wire Harness - A/C F
	Race and Bushing Assembly	Relay Control	• Seal - Outlet Fitting	Separator Assembly - Fuel Vapo		Subwoofer Assembly	Thrust Bearing	Valve - Brake Pressure Meter	Wire Harness - Air Co
	Rack Assembly - Steering Gear	Remote Control and Latch	Seal - Parking Brake Shaft	Servo Assembly - Automatic	Solenoid - Luggage Door	Suction/Discharge Assembly	Tie Rods Inner/Outer	Valve - Brake Pressure Meter Valve - Brake Sensor	Wiring - A/C Clutch
	Radiator Assembly		Seal - Power Steering Gear	Temperature Control	Solenoid - Press Regulator	Suction/discharge Assembly Sunload Sensor	Timing Chain Tensioner	Valve - Drake Sellsol Valve - Covers	Wiring - A/C Control
	Radiator Tank Inlet Assembly	Reservoir - Brake M/C	Input Shaft	Shackle Assembly Rear Spring	Solenoid - Regulator		Timing Grant Tensioner Timing Gear Set	Valve - Door Vent	Wiring - Engine Loom
	Rail Roof Sliding Panel		Seal - Rear Axle	Shaft - A/C Door	· · · · · · · · · · · · · · · · · · ·	Support - Coupling Shaft Bearing Support - Support Burns	Torque Arm Assembly	Valve - Bool Vent Valve - EGR Vacuum Control	Wiring - Engine Loon Wiring - Exterior
	Rear Antilock Braking Valve	Reservoir Air Horn		Shaft - Actuating Level	Solenoid - Transmission Downshift	Support - Exhaust Pump Support - Exhaust Pump	Torque Converter Pressure Valve	Valve - Edit Vacuum Control Valve - Fuel Sender Check	Wiring - Exterior Wiring - Interior
	Rear Axle Bearing	Reservoir and Outlet Tube	 Seal - Rear Wheel Drive Inboard Seal - Rocker Arm Shaft 	Shaft - Actuating Level Shaft - Brake Pedal	Downshift Salanaid Vacuum Madulatar	Support - Front/Rear Seat	Torsion Bar - Front	Valve - ruer Sender Check Valve - Governor	Wiring - Interior Wiring - Radio Ampli
	Rear Axle Seal		Seal - Sector Shaft	Shaft - Differential	 Solenoid - Vacuum Modulator Solenoid and Manifold Actuator 	Support - Front/Rear Seat	Torsion Spring	Valve - Governor Valve - Guide	Wiring - Radio Ampir Wiring Assembly - A/
	Rear Brake Lever			Shaft - Gear Shifter		Belt Buckle	TPMS Sensor	Valve - Guide Valve - Lube Connector	Blower Motor Feed
	Rear Brake Shoe Pin		Seal - Steering Gear Valve Seal - Weber Burns		Solenoid Assembly Solenoid Assembly	Support - Rocker Arm			
			Seal - Water Pump Seal - Window	Shaft - Manual Control Shaft - Output	Solenoid Assembly - Fuel Solenoid Assembly - Trans	Support - Turbocharger	Track - Door Center Track Front/Book Soot Innov	Valve - Main Oil Pressure Valve - Throttle Content	Wiring Assembly - Br Wiring Assembly - Br
	Rear Crankshaft Seal	Reservoir Brake - Master Cylinder Reservoir Brake - Master Cylinder		Shaft - Output Shaft - Daylor Steering	Solenoid Assembly - Trans Sourie Plantage FOR Value	Support Arm Assembly	Track Front/Rear Seat Inner Track Front/Rear Seat Street	Valve - Throttle Center Valve - Throttle Procesure	Wiring Assembly - In
	Rear Disc Brake Seal	Restrictor Fuel Vapor	Regulator Switch	Shaft - Power Steering	Sonic Plenum EGR Valve	Support Assembly - Drive	Track Front/Rear Seat Strap Trackler Bracket Medical	Valve - Throttle Pressure	Engine/Exterior
	Rear Hub Assembly		Seal Assembly -	Pump Rotor	Spacer - Front Spring	 Support Assembly - Transmission 	Trailer Brake Module	Valve - Transmission	Wiring Assembly - Ra
	Rear Leaf Spring Shackles	Retainer - Clutch Piston	Steering Column	Shaft - Shift Accumulator	Spacer - Power Steering	Switch - A/C Comp Clutch	Transceiver - Passive Anti Theft	 Valve Assembly - Air Bypass 	Worm - Parking Brak
	Rear Spring Air Suspension		Seals - Integral Power	Shaft - Steering To Column	Spacer - Rear Spring	 Switch - A/C Pressure 	Transducer - EGR Transducer - EGR Transducer - EGR	Valve Assembly - Brake	Yoke - Driveshaft Cer
	Rear Stab Bar Axle Meeting	Retainer - Gear Shift	Steering Gear	Shaft and Bearing -	Spacer - Transmission	 Switch - A/C Temperature Control 	Transducer - EGR Back Pressure		 Yoke - Shaft Support
	Rear Stabilizer Bar	Retainer - Power Brake Booster	Seals and Gaskets	Water Pump	Spare Wheel Carrier	 Switch - Back Up Light 		Valve Assembly - Cooling Control	 Yoke - Universal
'	Rear Tube Assembly -	Retainer - Rear Axle Shaft	 Seat Back Reclining Mechanism 	 Shaft and Bearing Assembly 	Lift Assembly	 Switch - Brake Anti - Lock 	Transducer Assembly	 Valve Assembly - Exhaust Air Sup 	
	Brake Master		Seat Belt and Buckle Rear Seat	 Shaft and CV Joint Assembly 	 Speaker - Assembly 	 Switch - Brake Low Press 	Transfer Case Assembly	Valve Assembly - Fan	
	Rear Wheel Bearing		 Seat Position Center 	Shaft and Rack	 Speaker - Parking Aid Control 	 Switch - Brake Pressure Warning 	Transfer Case Encoder/	Thermostat Control	
,	Rear Wheel Bearing		 Seat Track Support Assembly 	Assembly Steering	 Speedograph/Tachograph 	 Switch - Brake Traction 	Shift Motor	 Valve Assembly - Fuel Selector 	
	Lockout Washer		Sender - Fuel Tank	 Shaft Assembly - Coupling 	 Speedometer Assembly 	Lock Control	Transmission - Actuator	 Valve Assembly - Fuel Tank Vent 	
,	Rear Wheel Bearing Seal		Sender - Oil Pressure	 Shaft Assembly - Front Axle 	 Spindle - Nut and Bearing 	 Switch - Coolant Temp 	Assembly	 Valve Assembly - Main Control 	
	Assembly	 Retainer Rear Axle 	 Sender - Water Temp 	 Shaft Assembly - Rear Brake 	 Spindle and Spindle 	 Switch - Electrical Windshield 	 Transmission - Bearing 	 Valve Assembly - Master 	
	 Rear Wheel Retainer 	 Retainer Rear Spring Lower 	Sensor - ABS	 Shaft Assembly - 	Support Springs	Wiper	 Transmission - Case Cover 	Cylinder Control	
	 Receiver Remote/Control 	 Return Assembly - Control 	 Sensor - Air Suspension Level 	Transmission Input	 Spindle Assembly 	 Switch - Fuel Filter 	 Transmission - Control Pivot 	 Valve Assembly - Power 	
	 Receiver Tire Pressure 	Cable Bracket	 Sensor - Air Temperature 	 Shaft Bushing Assembly - Outer 	 Spindle Nut Assembly 	 Switch - Ignition Anti-Theft 	 Transmission - Mount 	Steering Control	
,	 Rectifier Assembly - Alternator 	 Ride Control Module 	 Sensor - Crank Timing 	 Shell - Transmission 	 Spring - Camshaft Plunger 	 Switch - Pressure Warning 	 Transmission - Oil Cooler Line 	 Valve Assembly - Thermal Vent 	
	 Rectifier Engine Warning 	 Ring - Speed Sensor 	 Sensor - Front Suspension Level 	 Shield - Fender Splash 	 Spring - Differential Clutch 	Switch - Temp Control	 Transmission - Oil Pump 	 Valve Assembly - Trans Control 	
,	 Reductant Injector 	 Ring - Transmission Synchronizer 	 Sensor - Fuel Injector Pump 	 Shield - Front/Rear Disc Brake 	 Spring - Door Latch 	 Switch - Temp Control Valve 	 Transmission - Sun Gear 	 Valve Assembly - Vacuum Check 	
,	 Reductant Lines 	 Rod - Clip/Slave Cylinder 	 Sensor - Low Coolant 	 Shield - Modulator Heat 	 Spring - Front 	Switch - Turn Indicator	 Transmitter Remote Control 	 Valve/Switch Assembly - Brake 	
,	 Reductant Pump Assembly 	 Rod - Transmission 	 Sensor - Oil Temperature 	 Shield - Parking Brake 	Suspension Torsion	 Switch - Vacuum Pump 	 Trip Minder Assembly 	 Vane Sensor 	
h '	 Reductant/Urea Tank 	 Rod Assembly - Front Suspension 	Sensor - Output Shaft	 Shift Solenoid and Screen 	 Spring - Gear Tensioner 	Switch and Bracket	 Tube - Clutch and Governor 	 Variable Assist Power 	
y '	 Refrigerant Line 	 Rod Assembly - Rear Suspension 	 Sensor - Parking Aid System 	 Shifter - Transmission Gear 	Spring - Governor Valve	Assembly - Tailgate	 Tube - Fuel Injection 	Steering Module	
	 Register Assembly - Heater 	 Rod Assembly - Transmission 	Sensor - Rear Suspension Level	Shift Control	Spring - Leaf Rear	 Switch Assembly - Brake Warning 	 Tube - Oil Level Indicator 	 Variable Cam Timing Assembly 	
	 Regulator - Front Door 	 Roll Stability Control 	Sensor - Shock Abs	 Shim A/C Compressor 	Spring - Overrunning Clip	 Switch Assembly - Door Ajar 	 Tube - Turbo Air Outlet 	 Variable Camshaft 	
,	 Regulator - Front Door L 	Roller - Reverse Idler Gear	 Sensor - Shock Absorber 	 Skid Control Module Rear 	Spring - Parking Pawl	 Switch Assembly - Door Lock 	 Tube - Turbo Oil Return 	Timing (VCT) Phasers	
	Window - Power	 Rotor and Plate - Power 	Sensor - Skid Control	 Sleeve - Bearing 	 Spring - Rear Suspension Torsion 	Switch Assembly - Door Warning	 Tube - Turbo Oil Supply 	 Vehicle Emergency Messaging 	
	 Regulator - Front Door R 		 Sensor - Sliding Door Actuator 	Sleeve - Front Stabilizer Bar	 Spring - Reverse Inhibitor 	Switch Assembly - EGR	Tube Air Suspension	Module Assembly	
	Window - Power	 Running Board Motor 	Sensor - Speed Brake	Sleeve - Rear Stabilizer Bar	Spring - Shift Bias	Switch Assembly - Elect Shift	Tube Assembly - Oil Cooler	 Vent - Rear Axle Housing 	
	 Regulator - Front Door Vent 	Screen - Oil Pump	Sensor - Speedometer	 Sleeve - Spacer Snap Ring 	Spring - Tran G/Shift Lever	Switch Assembly - Fuel Tank	Tube Vacuum Heat Valve	 Venturi A/C Evaporator 	
	 Regulator Assembly 		Sensor - Temp Coolant	Sleeve - Transmission Oil	Spring Assembly - Front	Switch Assembly - Gear	 Turbo Boost Gauge 	 Venturi Assembly A/C 	
	 Regulator Assembly - EGR 		Sensor - Transmission Oil	Pressure Boost	Spring Assembly - Rear	Shift Neutral	 Turbo Discharge Pipe Gasket 	 Voltage Converter AC to DC 	
	Relay - A/C Clutch	Seal - A/C Condenser	Temperature	Sleeve Assembly - Clutch Ad	Springs Slipper	Switch Assembly - Lock Sensor	Turbocharger/Supercharger	Washer - Crankshaft Pulley	
	Relay - Air Heater (Diesel)	Seal - A/C Door	Sensor - Turbine Speed	Sleeve Assembly - Rear Lube	Sprocket - Crankshaft	Switch Assembly - Parking Brake	Unit - Factory-Installed	Washer - Front Suspension Lower	
	Relay - Alternator Field	Seal - A/C Inlet Door	Sensor and Bracket Assembly	Sleeve/Ring Assembly Lockout	Sprocket - Lock Ring	Switch Assembly - Pressure	Two Speed Shaft Repair	Water By-Pass Pipe	
	Relay - Antiskid	Seal - Brake Booster	Front/Rear	Slide - Door Window Regulator	Start/Stop Push Button Switch	Switch Assembly - Radio	U-bolt - Rear Spring	Water Outlet Connection	
	Relay - Engine Cooling Fan		Sensor Assembly - Camshaft	Slide - Front/Rear Seat Track	Starter Motor Assembly	Switch Assembly - Rear Axle	U-bolt - Universal Joint	Water Pump	
	Relay - Purge Valve	Seal - Crankcase Separator	Sensor Assembly - EGR Solenoid	Slinger - Front/Rear Hub Oil	Starter Motor Solenoid	Switch Assembly - Speedo	Underbody Linkages	Wheel Cylinders	
	Relay and Bracket Assembly		Sensor Assembly - Elect Control		Stationary Elevated Ride Control	Switch Assembly -	and Couplings	Wheel Steering Assembly	
	Polay Assambly	Cool Front Whool Drive Inhoord	Cooler Temp	• Chan Ding Countershaft	Ctooring Actuator Value	Window Downloton	Ilniversal leint	Window Crank Handle/Knob	

Universal Joint

Vacuum Pump Gasket

Window Regulator

Control Module)

Temperature Indicator

Snap Ring - Transmission
 Steering Column Lock Actuator
 Synchronizer Assembly

Snap Ring - Countershaft
 Steering Actuator Valve

Sensor Assembly - Engine
 Snap Ring - Synchronizer
 Steering Column Assembly
 SYNC Module

	Vacuum Selector - Air Conditioner Valve - A/C Comp Low Pressure Valve - A/C Compressor Pressure Valve - Anti Backfire Valve - Assembly H/L Cover Valve - Brake Pressure Differential	Wire - Power Steering Assist Wire - Speaker System Wire Assembly - Front/Rear Seat Control Wire Assembly - Neutral Switch Wire Assembly - RPM Sensor Wire Harness - A/C Fan
	 Valve - Brake Pressure Meter 	 Wire Harness - Air Conditions
	 Valve - Brake Sensor 	 Wiring - A/C Clutch
	 Valve - Covers 	 Wiring - A/C Control Switch
	 Valve - Door Vent 	 Wiring - Engine Loom
	 Valve - EGR Vacuum Control 	 Wiring - Exterior
alve		 Wiring - Interior
	 Valve - Governor 	 Wiring - Radio Amplifier
	 Valve - Guide 	 Wiring Assembly - A/C

Yoke - Driveshaft Center

Wiring Assembly - Brake Skid

Wiring Assembly - Interior/

Wiring Assembly - Radio

Windshield Wiper Motor

Window Crank Handle/Knob

Wiper Motor Connector Grommet

I OIG Extern	ded Service r	ICI	113				
PLAN	DESCRIPTION	FORD	COMPETITIVE- MAKE	TIME/MILEAGE/HOURS*	RENTAL	ROADSIDE ASSISTANCE	INTEREST- FREE FINANCING
PowertrainCARE	29 Critical Components Covered	-	•	New Plans: up to 8 years, 125,000 miles and 5,000 hours. Used Plans: up to 60 months and 75,000 miles.	Standard	•	•
BaseCARE	84 Major Components Covered	-	•	New Plans: up to 8 years, 125,000 miles and 5,000 hours. Used Plans: up to 60 months and 75,000 miles.	Standard	•	•
ExtraCARE	113 Key Components Covered	-	•	New Plans: up to 8 years, 125,000 miles and 5,000 hours. Used Plans: up to 60 months and 75,000 miles.	Standard	-	•
PremiumCARE	1,000+ Key Components Covered	F	•	New Plans: up to 8 years, 125,000 miles and 5,000 hours. Used Plans: up to 60 months and 75,000 miles.	Standard	•	•
Diesel EngineCARE	13 Covered Components for 6.7L Diesel Engines	•		A 7-year/200,000-mile/8,000-hour plan is available.	Standard	•	•
Diesel EngineCARE Plus	21 Covered Components for 6.7L Diesel Engines	-		A 7-year/200,000-mile/8,000-hour plan is available.	Standard	•	-
CPO Upgrades	Exclusive Ford Extended Service Plan Upgrades for Ford Certified Pre-Owned Vehicles	•		A variety of time and mileage options up to 9 years and 125,000 miles are available.	Standard	-	•

PLAN	DESCRIPTION	FORD	COMPETITIVE- MAKE	TIME/MILEAGE*	RENTAL	ROADSIDE ASSISTANCE	INTEREST- FREE
Premium Maintenance Plan	Premium Maintenance Schedule	-	-	Plans available from 2 to 8 years and up to 125,000 miles.	Optional		FINANCING
Limited Maintenance Plan	Limited Maintenance Schedule	-	•	A variety of time and mileage options from 1 to 6 years and up to 100,000 miles are available.			•
Basic Maintenance Plan	Basic Maintenance Schedule	-	•	A variety of time and mileage options from 1 to 6 years and up to 100,000 miles are available.			•
Engine Maintenance Plan	Engine Maintenance Schedule	-	•	A variety of time and mileage options from 1 to 6 years and up to 100,000 miles are available.			•

*See your Dealer for specific vehicle eligibility

Ford Extended Service Plans





An overview of available service plan coverage options

nure is intended to provide general information about Prices and plans are subject to change without notice. lability, benefits, coverage and provider may vary by state. Dealer for details.

, Ford ESP on Ford vehicles is a Service Contract from Ford mpany (License #12118). Ford ESP on competitive-make s a Service Contract from The American Road Insurance Dearborn. MI 48126 (Certificate of Authority #09079).

Ford ESP is a Service Contract from Ford Motor Service (License #SCP-165).

15FSP-POBRCH-F Printed in U.S.A.

October 2014

Extended Service Plan

Key Components Covered For New and Used Vehicles

PREMIUM MAINTENANCE

Our most comprehensive maintenance

plan covers: Engine Oil and Filter Changes Multipoint Inspections

 Tire Rotations Replacement of Brake Pads and Lining When Worn

 Shock Absorber Replacements Spark Plugs Clutch Discs

 Engine Belts Engine Coolant Hoses, Clamps and O-Ring Seals

 Wiper Blades · Diesel Exhaust Fluid Fill at the Time Scheduled Maintenance Is Performed a Dealership (If Necessary)

ESSENTIAL

Plan ahead now and protect yourself against rising maintenance costs with this affordable array of standard service items for your vehicle:

 Multipoint Inspections Includes a Complete Check of Vital Fluid

POWERTRAIN

COVERS 29 CRITICAL COMPONENTS

POWERTRAINCAR

COVERS 84 MAJOR COMPONENTS

EXTRACARE

Flywheel

Fuel Pump

· Flywheel Ring Gear

Metal Fuel Lines

Heater Blower Motor

Heater Core Asy

(Four-Wheel Drive)

• Idler Arm (Steering)

Ignition Module

Ignition Switch

Door Handles)

. Kingpins & Bushings

(Front Suspension)

• Linkage & Bushings

(Front Suspension)

Master Cylinder

Manifold & Bolts

Oil Pan

Oil Pump

Power Antenna

Lines & Fittings (Brakes

Fuel Tank and Metal Lines

Gas & Diesel Fuel Injectors &

Governor Asy (Transmission)

. Heated Back Glass (Electrical Only -

No Glass Damage or Breakage)

Hubs. Automatic Front Locking

Instrument Cluster, Electronic

and Visual Equipment)

(Excluding Dash Pad. Clock, Audio

• Keyless Entry System (Excluding

Linkages & Couplings (Steering)

· Locking Rings (Four-Wheel Drive)

MacPherson Struts (Front)

Manifold (Exhaust & Intake)

Metal Links & Fittings (Brakes)

· Parking Brake Linkage & Cables

Harmonic Balancer & Bolt

COVERS 113 KEY COMPONENTS

A/C Accumulator

A/C Compressor

A/C Condenser

Components)

(Transmission)

Alternator

A/C Clutch Bearings

A/C Compressor Head

A/C Compressor Seals

Adaptive Cruise Control

All Internally Lubricated Parts

All Internally Lubricated Parts

Anti-Lock Brake Module & Sensor

Automatic Temperature Control

Axle Shafts (Front- and

Backing Plates (Brakes)

Brake Booster (Power)

Column Lock (Tilt Wheel)

Combination Valve (Brakes)

Control Arms (Upper & Lower)

Control Arm Shafts & Bushing

Calipers (Brakes)

Driveshaft

Evaporator (A/C)

Field Coil (A/C)

Final Drive Housing & Rear Axle

Housing for AWD (Including All

Ball Joints (Upper & Lower)

Rear-Wheel-Drive Axles)

A/C Compressor Clutch Switch

Air Suspension, Electronic (Selected)

A/C Clutch

Retainers (Rear-Wheel-Drive Axle)

PREMIUMCARE

Bearing Assembly - Elect Shift

. Bearing Assembly - Rear Whee

Bearing Seal Front Suspension

Bearing Assembly - Spindle

Bearing Cup Front Wheel

Bearing Front Wheel

Lubricated

Blind Spot Sensor

Bearings - All Internally

Belt Assembly Center Pa

Blind Spot Sensor Bracket

Block Fuel Tube Support

Blower Motor Assembly

Blower Motor Resistor

Axle Damper

Bracket for Radius Arm

Body Assembly - Brake Boos

Block Assembly - Electrical W

Brake Shoe Hold Spring

Brake Wiring Assembly

Bumper - Front Axle

Bumper - Rear Axle

Brake Vacuum Booster Se.

Bushing - All Internal and

Bushing - Connecting Roc

Bushing - Front Lower Arn

Bushing - Front Suspension

Bushing - Front Suspension

Bushing - Rear Lower Arm

Bushing - Front/Rear Seat Track

Bushing - Brake Pedal

Bushing - Door Hinge

· Brush and Spring - Alternator

COVERS MORE THAN 1.000 KEY COMPONENTS

Ambient Sensor

Ammeter - Alternator

Amplifier Assembly A/C

Antenna Remote Contr

Anti - Lock Brake Sens

Anti - Slosh Module

Anti-Theft Alarm -

Anti Skid Brake Relay

Factory-Installed

Arm - Steering Pitmar

Front Suspension

Windshield Winer

Arm and Bushing Asser

Arm and Bushing Assem

Arm and Pivot Shaft Assemb

Arm Assembly - Selector Plate

Arm Bushing Front Suspension

Arm Bushing Rear Suspension

Arm Steering Assembly -

Auxiliary Heater Assembl

Axle Assembly - Clutch

Axle Assembly - Rear

Axle Shaft Assembly

Back-Up Siren/Alarm

Baffle - Output Shaft

Balance Shaft Assembly

Ball Joint Assembly - Upper/Lower

Arm Assembly - Windshield Winer

Amplifier Assembly EGR

Amplifier Assembly

Anchor Push Rod

 Brake Master Cylinder Seal Brake Master Cylinder Switch Brake Shoe Adjuster Nut Brake Shoe Anchor Pin Brake Shoe Hold Cup

Brake Pressure Accumulator

 Brake Master Cylinder Assembly Brake Master Cylinder Gasket Case Assembly - Power Divider

 Case Assembly - Differential Coolant Pump

 Control Head - Rear Control Module - Air Suspension Control Module - Heated Control Unit - Anti-Lock Control Valve Seals Controls - Rear Seat Converter Assembly Converter Pressure Va Diesel Fuel Injectors

 Damper - Rear Axle Damper - Steering Wheel Damper Assembly - Timing Chai Damper Drive Line Vibration Damper Front Spring Damper Rear Spring Detent - Transmission Contro Diaphragm Assembly - TV Connector

Cylinder Assembly - Rear Brake

Dampener - Front Axle King Pi

Cylinder Keys Latch

A/C Compressor

Damper - Crankshaft

Diesel Injector Pump

plan provisions.

 EGR Valve Assembly EGR Valve Position Sens Transmission EGR Valve Solenoid Front Rebound Bumper Elbow - Crankcase Ven Front Spring Air Suspension Electric Clock Assembly Front Stabilizer Bar Electric Power Steering Front Switch Assembly Assist Assembly Front Twin I Beam Axle

Differential Case Gear Support
 Electric Water Pump (Hybrid)

Differential Locking Mechanism
 Electronic Actuator Assembly

Electronic Compass Assembly

Electronic Control Assembly

Electronic Pressure

Control Solenoid

Electronic Shift Control

Electronic Speedometer

Engine Control Module

Engine Oil Cooler

Engine Front Support Mount

Engine Torque Strut/Moun

Equalizer - Parking Brake

Exhaust Control Assembly

Assembly - Transmissio

Fan Assembly - Alternator

Fan Assembly - Heater Blow

Filter - Power Steering Pump

Flange - Steering Column Tube

Flange - Universal Joint Axle

Flange Universal Joint Spline

Flapper Valve - Fuel Filler Pine

Assembly - Differential

Frame Front/Rear Seat Back

Freeze Plug - Cylinder Block

Front Axle Assembly - Drive

Front Axle Bump Bracket

Front Axle Hose Clip

Extension Housing

Fan A/C Condenser

Fan Assembly - Motor

Field Assembly - A/C

Filter Housing

Flange – U-Joint

Fork - Gear Shifter

Fork and Roller

Differential Side Gears

Direct Clutch Cylinder

Disc - Differential Clutch

Disc and Hub Assembly A/O

Disc Spring - Front Clutch

Door Assembly Heater Air

Door Assembly Heater and A/C

Door Latch Control Front/Rear

Display - Navigation System

Diode Assembly

Display Module

Door Latch Control

 Fuel Computer - Display Assembly
 Gear - Transmission Fuel Gauge - Instrument Panel Gear - Transmission Countershap Fuel Injection Module Gear - Transmission Reverse Idle Emissions Air Pump Muffler Shield
 Fuel Level Sensor Gear and Pinion Fuel Line - Metal Gear Assembly - Final Drive Fuel Pressure Regulator Fuel Pump Assembly Fuel Sep Fuel Vacuum

Front/Rear Disc Brake Caliper Pin
 Gear - Reverse Idler

Front/Rear Brake Cylinder

Front/Rear Brake Piston Seal

Front/Rear Caliper Assembly

 Gear Assembly - Intermediat Gear Assembly - Power Steering Short Fuel Tank Vapor Valve Gear Assembly Spare Whee Fuel Tank and Metal Line Gear Bushing Assembly Fuel Vapor Assembly Reverse Idle Fuel Vapor Canister Gear Differential Planetary

Gear - Low and Reverse

Gear - Reverse

MAINTENANCE PLANS

Engine Oil and Filter Changes

Levels, Systems and Components Tire Rotations

OVERS 21 CRITICAL

ENGINECARE

POWERTRAIN COMPONENTS

COVERS 13 CRITICAL

All Internally Lubricated Parts

Timing Chain (Gears or Belt)

Turbocharger (Factory-Installed)

Fuel Injection Pressure Regulator

Cvlinder Block

Cylinder Heads

Timing Chain Cover

Cylinder Head Gasket

Crankcase Oil Cooler

Fuel Injection Pump

Oil Pump

EGR Cooler

Fuel Injectors

 All Internally Lubricated Parts Cvlinder Block

 Cylinder Heads Oil Pump Oil Pan

 Timing Chain Cover . Timing Chain (Gears or Belt) Turbocharger (Factory-Installed

 Thermostat Thermostat Housing Water Pump

Manifold (Exhaust and Intake)

 Manifold and Bolts Seals and Gaskets (Includes Cylinder Head Gasket)

 Valve Covers Crankcase Oil Cooler

 EGR Cooler Fuel Injection Pump

 Fuel Injection Pressure Regulator Fuel Injectors

 Cylinder Block Cvlinder Heads

All Internally Lubricated Parts (Engine)

Axle Shafts (Front- and Rear-Wheel-Drive Axle)

· Drive Axle Housing (and Front Axle Housing for 4x4 Including All Internal Parts

Final Drive Housing (and Rear Axle Housing for

Manifold (Exhaust and Intake)

• Oil Pan

. Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)

Thermostat

• Timing Chain (Gears or Belt)

Turbocharger/Supercharger Unit

(Factory-Installed)

A/C Clutch Bearings

A/C Compressor

AWD) Including All Internal Parts

 Hubs. Automatic Front Locking (Four-Wheel Drive Locking Rings (Four-Wheel Drive)

Manifold and Bolts

• Oil Pump

Seals and Gaskets (Engine)

• Timing Chain Cover

Transfer Case (Including All Internal Parts)

(Front- and Rear-Wheel-Drive Axle) Valve Covers

A/C Clutch

• A/C Compressor Head

Case & Transmission)

 Alternator Axle Shafts (Front- and

Seals and Gaskets (Transmission

• Torque Converter

A/C Compressor Clutch Switch

A/C Compressor Seals

 A/C Fluid Coil A/C Pulley

Retainers (Rear-Wheel Drive)

Thermostat Housing

Transmission Case (Including All Internal Parts)

Universal and Constant Velocity Joints

Water Pump

A/C Condenser

A/C Evaporator

 All Internally Lubricated Parts (Engine · All Internally Lubricated Parts (Transfe

Brake Booster (Power)

Cvlinder Block

Flywheel

Fuel Pump

Ignition Switch

Rear-Wheel-Drive Axle) Back Glass, Heated (Electrical Onl Not Glass Damage or Breakage) Backing Plates (Brakes)

 Calipers (Brake) • Column Lock (Tilt Wheel)

 Combination Valve (Brakes) Control Arms (Lower) Control Arms (Upper)

· Control Arm Shafts & Bushing Control Valve (Steering)

· Cooler and Metal Lines (Steering · Couplings (Steering)

 Cylinder Heads · Diesel Injector Pump

 Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)

 Driveshaft • Electronic Ignition Module

 Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)

 Governor Assembly Harmonic Balancer and Bolt

• Hubs, Automatic Front Locking (Four-Wheel Drive)

 Kingpins and Bushings (Front Suspension) Lines and Fittings, Metal (Brakes) • Linkage and Bushings (Front & Rear Suspension)

 Locking Rings (Four-Wheel Drive) MacPherson Struts (Front) Manifold (Exhaust and Intake

 Manifold and Bolts Master Cylinder Metal Fuel Lines

 Oil Pan Oil Pump Parking Brake Linkage & Cables Power Steering Pump

Shaft (Brake Pedal)

Suspension)

Starter Motor

Starter Motor Solenoid

Steering Gear Housing,

All Internal Power)

• Thermostat (Engine)

Timing Chain Cover

Torque Converter

Transmission Case

(Factory-Installed)

Valve Covers

Water Pump

Wheel Cylinders

Wiper Motors

Voltage Regulators

Thermostat Housing (Engine

Tie Rods (Front Suspension)

Timing Chain (Gears or Belt)

Turbocharger/Supercharger Unit

and Rear-Wheel-Drive Axles)

Universal and Constant Velocity Joints (Front

Wiring Harnesses (Excluding Spark Plug Wires)

Manual and Power (Including

• Switches (Manually-Operated Electrica

Linkages (Steering)

 Pulley Asy (Power Steering Pump Radiator Fan Relay Retainers and Clips (Brakes)

 Retainers (Rear Drive Axle) Seals and Gaskets (Engine, Front and Rea Drive Axles. Steering & Transmission) Self-Adjusters (Brakes)

 Speedometer/Odometer (Electrical & Mechanical) Spindle and Spindle Supports (Front & Rear

 Springs (Brakes) Stabilizer Bar (Front & Rear Suspension)

(Front & Rear Suspensions) Control Valve (Steering) Cooler & Metal Lines (Steering)

 Cvlinder Block Cylinder Heads

 Diesel Injectors Diesel Injector Fuel Lines Diesel Injector Pump

 Diesel Lift Pump Distributor Assembly

 Distributor Cap & Rotor Power Door Locks & Retainer Clips Drive Axle Housing & Front Axle (Excluding Door Handles) Housing for 4x4 (Including All Power Seat Motors Internal Parts) Power Steering Pump/Electric Power

Steering Actuator • Power Window Motors/Regulators ETA Pump House Assembly Electronic Ignition Module • Pulley (A/C) Engine Mounts Pulley Assembly, Power Steering

Pump (Steering) Radiator & Radiator Fan · Radiator Fan Clutch or Motor Radiator Fan Relav

Rear Axle Hub Bearings

 A/C Actuator Retainers & Clips (Brakes) A/C Compressor · Seals & Gaskets (Engine, A/C Compressor Assembly A/C Compressor Seals

A/C Accumulator

A/C Control Head

A/C line Assembly

ABS Sensor and Bracket

Absorber - Steering Shaft

Accumulator - Body

Control Assembly

Accumulator - Retainer

Actuator - Neutral Switch

Front Suspension

Rear Suspension

Actuator Assembly

Steering Column

Actuator - Front/Rear Door Latch

Actuator Assembly - TV Console

Accumulator - Pistor

ABS Module

Transmission, Front- and Rear-Wheel-Drive Axles. & SecuriCode™ Kevless Entry · Self Adjusters (Brakes) Shaft (Brake Pedal)

 Speed Control Speedometer/Odometer (Electrical and Mechanical Spindle & Spindle Supports · Springs (Brakes) Stabilizer Bar

 Actuator - Power Steering Valve Starter Motor Actuator - Steering Column Lock Starter Motor Solenoid Actuator Assembly Actuator Assembly Steering Gear Housing. Manual & Power (Including All Actuator Assembly - Rear Internal Parts) Actuator Assembly Switches (Manually-Operated

Electrical) • Thermostat (Engine) Thermostat Housing & Gasket (Engine)

Transmission Module, External

Transmission Mounts

(Factory-Installed)

Valve Covers (Engine)

Wheel Cylinders (Brakes)

· Wiring Harnesses (Excluding

Spark Plug Wires)

Voltage Regulator

Water Pump

Wiper Motors

 Actuator Module - Safety Restraint
 Assembly Parking Brake Cable Tie Rods (Front Suspension) Actuator Parking Brake Switch Actuator Shift Lock Timing Chain Cover Adapter Spark Knock . Timing Chain (Gears or Belt) Adaptive Cruise Control Torque Converter

 Adjuster - Differential Bear Transfer Case (Including All Adjuster - Door Lock Internal Parts) Adjuster - Front/Rear Seat Buckle
 Baffle - Input Shaft Transmission Case Adjuster - Torsion Bar

Front/Rear Seat Adjuster Assembly - Steering Worm
 Ballast - Hi Mount Stop Lamp Transmission Vacuum Module Air Bag Smart Sensor Assembly
 Band - Front Turbocharger/Supercharger Unit Air Conditioner Clutch Pullev Universal & Constant Velocity

 Air Control Valve Air Idle Vacuum Valve Air Intake Ducting Air Pump Muffler Air Reservoir Tank Assembly

Adjuster Assembly -

 Air Spring Solenoid Air Suspension Compressor Assembly Air Suspension Dryer Assembly Air Suspension Lines

Air Suspension Quick Connect

Alternator

Alternator Assembly

Alternator Rotor

AM/FM Receiver

 Air Conditioner Wiring Assembly
 Band - Transmission Reverse Band Assembly -Transmission Intermediate Barometric and Map Sensor Barometric Pressure Senso Bearing - Coupling Shaft Bearing - Front Axle Bearing - Parking Bral Bearing - Reverse Idle Bearing - Worm Gear Bearing Assembly A/C Comp Clutch Bearing Assembly Air Compressor

 Bolt - Gear Shift Housing Bushing - Rear Suspension Bolt Differential Gear Cas Bushing - Rear Suspension Upper Boost Pressure Switch Bushing - Spindle Booster Assembly - Power Bra Bushing Assembly - Steer Boot - Brake Cylinder Front. Bushing Front Spring Boot - Drive Shaft Joint Bushing Lockout Hub Boot - Gearshift Control Bushing Rear Spring Armature - Windshield Wiper Motor
 Boot - Rear Axle CV Joint Button - Parking Brake Han Armature Sensor Motor Assembly
 Boot - Steering Column Cable - Front/Rear Seat Boot Courtesy Lamp Switch Cable - Front/Rear Seat Brace - Engine to Transmission Adjuster Actuator Bracket A/C Comp Mounting Bracket A/C Condenser Mt Bracket A/C Hose Bracket Assembly - Front Shock Bracket Assembly - Front/Rear Seat Side Armrest Mounting Bracket Assembly - Rear Shock Bracket Assembly - Rear

· Cable Assembly - Brake Shoe Adjuster Cable Assembly - Control Select Cable Assembly - Trans Contr Cable Front/Rear Seat Calibrator Assembly Caliper Assembly - Front/Rear Caliper Hold Down Assembly Camshaft and Lever Assembly Camshaft Bearings Camshaft Drive Cap - P/S Reservoir Fille

 Bracket Rear Door Glass Bracket Stabilizer Bar Lin Camshaft Damper and Pulley Bracket Stabilizer Bar Link Brake Adjuster Screw Brake Adjuster Spring Cap - Rad/O/Flow Control Brake and Clutch M/C Bushing Cap - Reservoir Brake Booster Control Seal Cap - Water Outlet Brake Caliper Support Cap Assembly – Master Cylinder Brake Line - Metal Cap Assembly - Radiator Capacitor Assembly - Alternator Carrier - Rear Axle

 Carrier Assembly - Differential Carrier Assembly - OD Case - A/C Evaporator Converter Support

 Bushing - Front Suspension Upper
 Clutch Assembly - Plan Cover - Oil Level Door Lock Actuator Front/Rear Bushing - Front/Rear Seat Adjuster
 Clutch Bracket Assembly Fan Door Striker Plate Cover - Rear Oil Pump Clutch Pack Assembly Cover - Reverse Band Servo Dowel - Hood Lock Clutch Pressure Plate tor • Dowel Camshaft Sprocke Cover - Transmission Control Coil - A/C Compressor Cl Dowel Pin Cylinder Head Cover Assembly Coil Assembly - Ignition Drive Assembly - Main (Cover Assembly - Flywheel Collision Avoidance Syste Cover Assembly - Rear Engine Power Lift Window Cover Assembly - Valve Push Ro Drive Axle Assembly Compass and Thermometer Cover Front/Rear Seat Track Drive Axle Bracket Readout Displays Cover Rear Seat Support Drive Pinion Compass Assembly Compressor - Air Condit Cover Transducer Mounting Driveshaft Assembly Compressor – Front Brace Crankcase Vent Tube Drum - Second Sun G Crankshaft Assembly Drum Assembly Condenser Assembly - A/0 Cone and Roller - Drive Pinion Crankshaft Bearings Cone Roller Front Wheel Inner Cup Wheel Bearing Cone Roller Front Wheel Outer CV Joint Assembly - Inboard Connection - Water Outlet

Coolant Tube Assembly - Outlet

Cooler Assembly - Power Steering

Core - Air Conditioner Evaporator

Cooler Assembly EGR Recirculatio

Core Assembly - A/C Condenser

Core Assembly - Heater

Cover - Clutch Housin

One-Way • Cover - Cylinder Timing Gea

Cooler - Crankcase Oil

Cooler - Transmission Oil

Cooler - EGR Oil

Cooler Assembly

Countershaft

Case Differential Gear Support
 Coolant Tube Assembly - Inlet

Cellular Phone/Receiver/

Chassis Radio

Child Seat Belt

Shift Lever

Clock Assembly

Clutch and Pullev

Air Conditioner

Clutch Assembly - Direct

Control Arm Assembly -

Suspension Upper/Lower

Control Arm Assembly - Rear

Control Assembly - Brake

Control Assembly - Relay

Control Assembly

Transmission Gear

Control Assembly - Val

Suspension Upper/Lower

Control Assembly - Light Dimmer
 Cylinder Block

Control Assembly - Parking Brake
 Cylinder Head Temperature Sens

Cigar Lighter Assemb

Clamp - Transmission (

Clip — Brake Shoe Locator

Handset/Speaker Assembly

 Drum Assembly -Transmission Reverse Drum Planetary Gear CV Joint Assembly - Outboard Assembly - Right Dust Seal - Inner Drive Cvlinder - Door Lock Cylinder Assembly - Direct Inte Dust Shield Cylinder Assembly - Door Lock Cylinder Assembly - Power Steering

 DVD Player and Display Eccentric Cam Fuel Pur EGR Adapter EGR Air Valve Filter EGR Cooler FGR Inlet Tube EGR Pressure Valve

EGR Tube

 Front Differential Gears Front Differential Internal Bearings
 Gasket - Water Pump EGR Regulator Assemb Front Driveshaft Front Hub Assembly Front Pump Assembly

 Gasket - Turbo Oil Tub Gasket - Turbocharge Gasket - Wiring Connecto Gasket and Shaft Seal Gauge Assembly Vacuum Gear - Camshaft Drive Gear - Center Shaft Revers

Gear - Differential Shift

Gear - Governor Drive

Gear - Engine Balance Shaft

 Gasket - Camshaft seal Gear Front Axle Shift Gasket - Cylinder Head Co Gear Ring Gear Gasket - Engine Plenum Gear Steering Column Lock Gasket - Fuel Injector Nozzle Gear/Hub - Auxiliary Transmission Gasket - Input Shaft Bearing General Electronic Module Gasket - Lockout Hub Governor - Counterweight Gasket - Master Cylinder Governor Assembly Gasket - Oil Cooler Governor Assembly - Less Counte Gasket - Oil Filter Adapte GPS System and Module Gasket - Oil Pan Factory Installed Gasket - Oil Pump . Guide - Roof Sun Roof Cabl Gasket - Power Divider Cover Guide - Timing Chain Gasket - Pressure Regulator Guide Shoulder Strap Gasket - PTO Cover Handle Assembly - Rear Seat Gasket - Rear Axle Handle Roof on Glass Frame and Spring Front/Rear Seat
 Gasket - Rear Wheel Bearing Rotor
 Head - A/C Compressor Cylinde Gasket - Reverse Servo Plate Gasket - Transmission Assembly
 Headlamp/Tail Lamp Bulbs Gasket - Trans Intermediate Band
 Heat Element - Front Sea Heat Shield Heater and A/C Control Regulato HID (High Intensity Discharge) Headlights - Factory Installe High Voltage Charger Hinge and Check - Front/Re Door Lower Hinge - Front/Rear Door Uppe Gear - Countershaft Clutc Horn Assembly - High Pitch

Horn Assembly - Low Pitch

Hose - Crankcase Vent

Horn Switch

PremiumCARE is so comprehensive, it's easier to tell you what isn't covered:

and lights (LED and HID lights, bulbs, sealed beam and lenses) except when purchased with New or Incomplete PremiumCARE Interior/ Exterior Lighting, fogging of lamp assemblies, shock absorbers, service adjustments and cleaning, fixed (non-moving) body parts, bumpers glass, moldings, ornamentation, paint, rust, sheet metal, structural underbody framework, side and rear view mirrors (glass and housing), water leaks, wind noise, weather strips, wheels, wheel studs, wheel covers, convertible top and bow, fabric, liners, fasteners, carpets, das pad, wiper blades, knobs, trim, upholstery, physical damage or cosmetic issues, repairs covered by manufacturer recalls, any insurance of if the vehicle is within the time and mileage limits of any warranty, repairs caused by improper unreasonable use, unauthorized alterations of modifications of the vehicle, repairs caused by lack of required or recommended maintenance, and scheduled maintenance services. Costs

Batteries of all types and cables, belts, hoses, hose clamps, brakes (front hub, drums, shoes, linings, disc rotors, pads), manual transmissior





































































Coolant Temp Switch

 Diesel Lift Pump clutch disc, exhaust system (includes catalytic converter), spark plugs, squeaks, rattles, tires, wheel balancing, wheel alignment, all lamps Differential Assembly - Rear

Certain restrictions and exclusions apply See your Dealer for details or refer to your or expenses for the teardown, rental expense, inspection or diagnosis of failures not covered by this Agreement