



Security+Plus[®]

COMPONENT COVERAGE GUIDE



**Enjoy peace of mind
with superior benefits
and protection**



SHIFT_



Security+Plus[®]

Protect your Investment

Security from having to pay out-of-pocket for covered component repairs that may occur after your factory warranty expires. **Plus**, benefits that start immediately: Roadside Assistance, Trip Interruption, Rental and Towing.

Service You Can Trust with superior parts and service designed exclusively for your vehicle

- **Genuine Nissan Parts**[†] specifically engineered for Nissan vehicles to maximize performance and reliability
- **Advanced Diagnostics** equipment designed for Nissan keeps your vehicle running at its peak
- **Factory-trained Technicians** ensure the best service possible
- **Nationwide repairs** at any authorized Nissan dealership

[†] Replacement of any part will be made with a new or remanufactured Genuine Nissan or Nissan-approved replacement part in use at the time of repair. The replacement part may differ from the original part.


^{††} Gold Preferred and Silver Preferred Plans only

^{†††} Should you have a mechanical breakdown of a covered component

24-Hour Emergency Roadside Assistance

- **“Sign and Drive” service** up to \$100 per claim with no deductibles for the services shown to the right, or for dispatch towing service

Over 50% of all Roadside Assistance calls are due to non-mechanical issues.

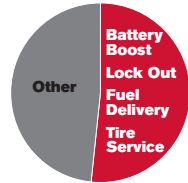

Trip Interruption^{††}

- **Reimbursement** for alternate transportation, meals and lodging when you are 100 miles or more from home^{†††}

Car Rental Assistance^{††}

- **Reimbursement** for actual expenses of substitute transportation up to \$35/day, to a maximum of five (5) days, and \$175 per breakdown^{†††}

Towing^{††}

- **Reimbursement** for towing to the nearest participating Nissan dealer not to exceed \$100 per claim^{†††}

Customer Assistance

- **Throughout the United States** at any Nissan dealer or by calling 1-800-NISSAN-1



Security+ Plus

Want Maximum Protection?

Choose Gold Preferred —

93% of our customers do!

Gold Preferred coverage delivers the ultimate in peace-of-mind protection for your new or pre-owned Nissan

Peace-of-mind protection backed by Nissan

Only available from your Nissan Dealer

owners.nissanusa.com/Security+Plus

Engine

ENGINE & INTERNAL PARTS (Continued)	Gold Preferred	Silver Preferred	Powertrain Preferred
CYLINDER BLOCK	11010		
CYLINDER BREAK WELSH PLUG	11021		
CYLINDER HEAD	11041		
CYLINDER HEAD GASKET	11044		
CYLINDER HOSE	11046		
CYLINDER HEAD WELSH PLUG	11051		
CYLINDER HEAD BOLT	11056		
CRANKSHAFT SEAT	11058		
EXHAUST VALVE SEAT	11059		
OIL PAN	11110		
OIL CATCH PLATE	11112		
OIL PAN BOTTOM	11115		
OIL PAN GASKET	11121		
DIPSTICK	11140		
OHV SENSOR	11145		
RH ENGINE MOUNT INSULATOR	11175		
LH ENGINE MOUNT INSULATOR	11215		
RH ENGINE MOUNT	11220		
COUPLER - TRANSMISSION LOWER	11222		
ENG MNT VAC TUBE/HOSE	11229		
RH ENGINE MOUNT BRACKET	11237		
LH ENGINE MOUNT BRACKET	11242		
CENTER MEMBER	11246		
ENGINE MOUNT SUPPORT	11254		
GUSSET	11262		
ENGINE MOUNT ACTUATOR ASSY	11273		
ENGINE MOUNT DAMPER	11290		
ROLL ENGINE SWIT	11320		
ROLL DAMPER ENGINE MOUNT	11325		
REAR MOUNT BRACKET	11340		
REAR MOUNT BRACKET	11345		
ENG MOUNT PULL DOWN ROD	11365		
ENG MOUNT PULL DOWN BROCKT	11367		
BUFFER	11390		
DRIVE BELT	11720		
TIMING BELT	11721		
SERPENTINE BELT TENSIONER ASSY	11750		
DRIVE SHAFT HOSE	11829		
BLOW BY CONTROL VALVE	11831		
SERPENTINE BELT TENSIONER BRACKET	11872		
OIL PAN PIN SET	11910		
PISTON RINGS	12033		
CONNECTING ROD & CAP SET	12100		
CONNECTING ROD BEARINGS	12111		
PISTON OIL JET	12121		
CRANKSHAFT	12200		
MAIN BEARINGS	12207		
CRANKSHAFT PULLEY	12219		
PULLEY BOLT	12300		
CONROTOR PILOT	12300		
BALANCER UNIT	12416		
CAMSHAFT	13001		
IDLER GEAR	13014		
FUEL PUMP CAM	13015		
CRANKSHAFT GEAR	13021		
CAMSHAFT GEAR	13024		
SPROCKET ASSY-VTC	13025		
TIMING CHAIN	13028		
FRONT COVER	13035		
CRANKSHAFT FRONT OIL SEAL	13042		
CRANKSHAFT OIL SEAL	13043		
COVER GASKET	13044		
WATER INLET	13049		
LETTER GUIDE	13111		
OIL PUMP CHAIN TENSIONER	13054		
CHAIN TENSIONER	13070		
DRIVE SHAFT TENSIONER	13080		
SPRING ASSY-VTC	13072		
TIMING CHAIN OIL JET	13081		
CHAIN TENSIONER SIDE GUIDE	13085		
INTAKE VALVE	13221		
EXHAUST VALVE	13202		
VALVE SPRING	13203		
VALVE SPRING SEAT	13205		
VALVE OIL SEAL	13207		
VALVE SPRING RETAINER	13209		
VALVE GUIDE	13212		
VALVE LIFTER	13231		
VALVE PIVOT (L-ENGINE)	13234		
ROCKER SHAFT	13242		
VALVE ROCKER/SHAFT SPRING	13256		
VALVE ROCKER ARM	13257		
ROCKER COVER GASKET	13270		
ROCKER COVER GASKET	13270		
FRONT CHAIN REAR COVER	13500		
TIMING COVER GASKET	13520		
TIMING COVER	13543		
BALANCE TUBE	14042		
ENG MOUNT CNTRL SOLENOID	14940		
OIL PAN DRIVE COVER	15013		
OIL STRAINER	15050		
FRONT COVER O-RING	15066		
DIPSTICK TUBE	15145		
OIL FILLER CAP	15255		
COVER PLATE/GASKET	16420		
BELT TENSIONER	18005		
FLYWHEEL HOUSING NS	32040		
TRANSMISSION CONTROL MDLE NS	32085		
ENGINE MOUNTING BRACKET	75117		

Lubrication & Cooling

LUBRICATION & COOLING	Gold Preferred	Silver Preferred	Powertrain Preferred
WATER OUTLET	11060		
THERMOSTAT HOUSING	11061		
WATER OUTLET GASKET	11062		
CYLINDER BLOCK WATER OUTLET	11063		
WATER INLET HOUSING GASKET	11064		
AT AIR GUIDE	11338		
WATER CONNECTOR	14054		
WATER BY-PASS HOSE	14055		
WATER HOSE	14057		
WATER HOSE	14081		
THRUSTLE BODY WATER HOSE	14082		
THRUSTLE BODY WATER HOSE	14083		
OIL PUMP	15010		
OIL PUMP GASKET	15025		
OIL PUMP DRIVE SPINDLE	15026		
OIL PUMP RELIEF VALVE	15041		
BALANCE CHAIN	15042		
O-RING DRIVE GEAR	15044		
OIL PUMP REGULATOR VALVE	15132		
OIL FILTER BRACKET	15238		
FILTER BRACKET GASKET	15239		
OIL FILTER REGULATOR	15241		
OIL FILTER REGULATOR VALVE	15300		
OIL TEMP SENSOR	16970		
WATER PUMP	20100		
WATER PUMP HOUSING AND GASKET	20102		
WATER PUMP GASKET	20104		
FAN PULLEY BRACKET	21046		
WATER PUMP FAN PULLEY	21047		
FAN BLADE	21060		
FAN COUPLING ASSY	21082		
RADIATOR	21103		
OIL COOLER PIPE	21102		
OIL COOLER-FIN TYPE	21305		
OIL COOLER RADIATOR TYPE	21310		
OIL COOLER GASKET	21311		
PT-OIL COOLER HOSE	21355		
OIL COOLER WATER HOSE	21380		
RADIATOR HOUSING COVER	21400		
RADIATOR CAP	21430		
AR GUIDE	21488		
RADIATOR SHROUD	21489		
RADIATOR DRAIN COCK	21480		
UPPER RADIATOR HOSE	21501		
UPPER RADIATOR SUB HOSE	21502		
LOWER RADIATOR HOSE	21503		
SUB RADIATOR PIPES/HOSES	21504		
HEV UNIT WATER HOSE	21505		
RESERVOIR TANK	21510		
RESERVOIR TANK BRACKET	21511		
SUB RAD RESERVOIR TANK	21512		
RESERVOIR TANK HOSE	21515		
ELECTRIC WATER PUMP	21580		
THERMO SWITCH	21595		
RADIATOR FAN MOTOR	21600		
PT OIL COOLER HOSE	21605		
OIL COOLER VALVE ASSY	21619		
OIL COOLER VALVE ASSY	21630		
OIL COOLER HOSE	21631		
OIL COOLER PIPING	21636		
COOLANT TEMP SENSOR	25080		
RADIATOR FAN RELAY	25217		
OIL PRESSURE SENDING UNIT	25240		
OIL PRESSURE SWITCH	25244		
COOLING FAN CONTROL	25305		
ENGINE UNDER COVER	75893		
ENGINE UNDER COVER - SIDE	75903		

Fuel System

FUEL SYSTEM	Gold Preferred	Silver Preferred	Powertrain Preferred
FUEL DAMPER ASSY	11300		
PURGE CONTROL VALVE ASSY	14930		
VALVE-EVAP/CAN/PURGE VOL. SOL.	14931		
PURGE CONTROL VALVE ASSY	14932		
VACUUM CUT BY-PASS VALVE	14933		
RESONATOR	14934		
VALVE ASSEMBLY CONTROL	14935		
DRAIN CUT VALVE ASSY	14936		
SUB VAP CANISTER	14937		
VAPOR CANISTER ASSY	14938		
CARBON CANISTER	14939		
MAJOR/BAO SWITCH SOLENOID VALVE	14962		
PURGE CUT VALVE	14963		
VALVE ASSEMBLY SOLENOID	14964		
VAC CONTROL SOLENOID VALVE	14968		
BOOST CNTRL. SOL VALVE ASSY	14969		
THROTTLE CHAMBER	16118		
IDLE COMPENSATOR	16331		
INJECTION HOSE	16400		
INLET RAIL CROSSOVER TUBE	16211		
AIR CLEANER ASSY	16500		
VACUUM MOTOR ASSY	16510		
IDLE COMPENSATOR TUBE	16520		
AIR CLEANER INSULATOR	16530		
HOT AIR DUCT	16530		
AR DUCT ASSY	16577		
AIR FLOW SENSOR	16580		
RESONATOR	16585		
EXHAUST MANIFOLD COVER	16590		
FUEL INJECTOR	16603		
FUEL PUMP CONTROL UNIT	17010		
FUEL PUMP REPAIR KIT	17010		
ELECTRIC FUEL PUMP	17012		
FUEL PUMP CHECK VALVE	17014		
FUEL PUMP GASKET	17019		
FUEL CONNECTOR	17103		
FUEL TANK	17201		
TUBE ASSY FILLER	17220		
FUEL FILLER NECK	17222		
FUEL FILLER CAP	17251		
FUEL TANK PROTECTOR	17271		
FUEL TANK PROTECTOR	17285		
EC-BREATHER HOSE	17325		
FUEL CHECK VALVE	17330		
BREATHER TUBE KIT	17331		
EC-VENTILATION HOSE	17333		
EC-VAPORATOR HOSE	17337		
BREATHER TUBE HOSE	17338		
O-RING	17342		
BREATHER VALVE	17368		
EVAPORATOR SHUT-OFF VALVE	17369		
VACUUM CUT VALVE	17372		
ER BCCD ASSY	17484		
FUEL OUTLET TUBE	17501		
VAPOR VENT LINE	17508		
FUEL RETURN TUBE	17510		
FUEL FILLER TUBE	17511		
AUTO-ADJUSTING ACCEL PEDAL	18002		
ACCELERATOR ARM	18010		
ACCELERATOR BRACKET	18011		
PEDAL STOPPER BRACKET	18050		
ACCELERATOR WIRE	18150		
INTER SPRING	18210		
EC-TUBE & HOSE	18211		
SCV SENSOR ASSY	22623		
FUEL TEMP SENSOR	22629		
WATER TEMPERATURE SENSOR	22675		
FUEL DAMPER	22675		
AIR FUEL RATIO SENSOR	22689		
WATER TEMPERATURE SENSOR	22690		
DROPPING RESISTOR	22698		
CRANKSHAFT POS. SENSOR (OBD POS)	23731		
CRANKSHAFT POS. SENSOR (REF)	23732		
FTC POSITION SENSOR NS	23733		
FUEL TANK SENSOR	25060		
EVAP CONTROL SYST PRESS SENSOR	25096		
FUEL CUT OFF SWITCH	25140		
THRUSTLE MOTOR RELAY	25171		
FRESH AIR DUCT	62860		
VACUUM HOSE	90304		

Manifolds & Turbocharger

MANIFOLDS & TURBOCHARGER	Gold Preferred	Silver Preferred	Powertrain Preferred
SEPARATOR ASSY - BREATHER	11830		
INTAKE MANIFOLD	14000		
EXHAUST MANIFOLD	14001		
CAP BOLT/STUD	14006		
LOWER MANIFOLD COLLECTOR	14011		
MANIFOLD TUBE	14012		
MANIFOLD COLLECTOR	14013		
INTER MANIFOLD SUPPORT	14018		
LOWER COLLECTOR GASKET	14019		
MANIFOLD GASKET	14035		
INTAKE MANIFOLD ADAPTOR	14040		
LOWER COLLECTOR ORNAMENT	14041		
EC-WATER HOSE	14052		
WATER INLET PIPE	14053		
EXHAUST GASKET	14058		
EXHAUST MANIFOLD COVER	14081		
HEAT SHROUD	14096		
INLET TUBE	14480		
EXHAUST CONNECTOR	14875		
OIL INLET TUBE	15192		
OIL OUTLET TUBE & HOSE	15197		
TURBO CHARGER	15210		
FRONT EXHAUST GASKET	20111		
CONVERTER GASKET	20712		
INTAKE MANIFOLD HYDRAULIC CONVERTER	20801		
INTAKE MANIFOLD CONNECTOR & O-RING	21049		
ABSOLUTE PRESSURE SENSOR	23286		
FLOOR INSULATOR	74861		

Engine Electrical

ENGINE ELECTRICAL	Gold Preferred	Silver Preferred	Powertrain Preferred
ALTERNATOR BRACKET	11710		
POWER BELT TENSIONER	11716		
DRIVE BELT TENSIONER	11717		
THROWAW ELEMENT KIT	16391		
TRANSMISSION IGNITION UNIT	22020		
DISTRIBUTOR	22100		
SHAFT	22108		
DISTRIBUTOR	22115		
GOVERNOR WEIGHT	22127		
DISTRIBUTOR PINION	22129		
DISTRIBUTOR CAM	22132		
ROTOR HEAD	22157		
MAGNET	22158		
HARNES	22159		
DISTRIBUTOR CAP	22162		
STATOR	22163		
DISTRIBUTOR PROTECTOR	22172		
IGNITION COIL RESISTOR	22453		
HIGH TENSION CABLE	22450		
RESISTOR	22460		
IGNITION COIL PROTECTOR	22465		
AIR CUT VALVE	22622		
ALTERNATOR	23100		
ALTERNATOR ROTOR	23108		
ALTERNATOR BEARING	23117		
ALTERNATOR BRUSH & HOLDER	23133		
ALTERNATOR PULLEY	23150		
VEAR PROTECTOR COVER	23177		
IC VOLTAGE REGULATOR	23215		
DIODE SET	23230		
STARTER MOTOR ASSY	23300		
STARTER HEAT SHIELD	23301		
FIELD COIL	23306		
ARMATURE	23310		
CIRCUIT BREAKER	23311		
REDUCTION GEAR	23313		
STARTER SOLENOID	23343		
BRUSH HOLDER BRACKET	23690		
BATTERY CABLE	24410		
BATTERY VENT TUBE	24413		
BATTERY FRAME/TRAY/ROD	24428		
RELAY	25230		

Power Valve Solenoid Valve Assy

POWER VALVE SOLENOID VALVE ASSY	Gold Preferred	Silver Preferred	Powertrain Preferred
POWER VALVE SOLENOID VALVE ASSY	14510		
POWER VALVE ACTUATOR	14518		
POWER VALVE SOLENOID	14562		
PRESSURE REG. CONTROL	14960		
LEAD FUEL SWITCH	16044		
DASH POT	16182		
LA FUEL SWITCH	16190		
THRUSTLE CHAMBER	17118		
DETONATION SENSOR	22060		
VACUUM CONTROL VALVE	22077		
VACUUM SWITCH	22361		
CONTROL UNIT - EFI	22611		
THRUSTLE VALVE SWITCH	22620		
LA FUEL SWITCH	22621		
AIR TEMPERATURE SENSOR	22631		
CYLINDER HEAD TEMPERATURE SENSOR	22632		
PRESSURE REG. CONTROL MODULE	22671		
AIR FLOW METER	226		

		GOLD Preferred	SILVER Preferred	POWERTRAIN Preferred
SUSPENSION (Continued)				
PARALLEL ROD BUSHING	55480			
DIFFERENTIAL MOUNTING INSULTR	55484			
DYNAMIC DAMPER ASSY	55490			
SUSPENSION BAR (MULTI-LINK)	55495			
TORSION BEAM - REAR AXLE	55500			
SUSPENSION ARM ASSY	55501			
ANCHOR ARM	55520			
PARALLEL ROD BOLT	55524			
BUSHING	55743			
CUT OFF VALVE ASSY	55780			
REAR STABILIZER	56230			
CONE CT ROD BUSHING	56231			
BRACKET-RR STABILIZER	56233			
REAR STABILIZER BUSHING	56235			
MOUNTING BRACKET BUSHING	56243			

Brakes

TCS SWITCH ASSY	25145			
ABS MOTOR RELAY	25187			
VDC/TCS/ABS RELAY BOX	25285			
VDC/TCS/ABS CONTROL UNIT ASSY	25286			
TIRE PRESSURE MONITOR RELAY	25288			
STOP LAMP SWITCH	25320			
HAND BRAKE CONTROL	36010			
PARKING BRAKE SWITCH	36011			
RATCHET NAIL	36320			
HAND BRAKE STEM	36326			
PARKING BRAKE RELEASE ROD	36327			
HAND BRAKE BRACKET	36328			
HAND BRAKE GUIDE	36335			
HAND BRAKE SPRING	36337			
HAND BRAKE CONTROL LEVER YOKE	36339			
HAND BRAKE LEVER	36372			
CLEVIS PIN (HAND BRAKE)	36381			
FRONT CABLE	36402			
CENTER LEVER BRACKET	36421			
ADJUSTR NUT	36437			
REAR CABLE	36450			
CROSS CABLE	36451			
REAR CABLE/ROD	36452			
PARKING BRK CBL PROTECTOR	36455			
CENTER LEVER	36510			
EQUALIZER	36518			
HANGER STRAP/SWING ARM	36525			
CLEVIS & PIN (HAND BRAKE)	36538			
RETURN SPRING	36545			
REAR CABLE ADJUSTER	36547			
TIRE PRESSURE SENSOR	40700			
TIRE PRESSURE SENSOR CONTROL UNIT	40702			
TIRE PRESSURE ANTENNA CABLE	40740			
ANTENNA-TIRE PRESSURE, FRONT	40741			
ANTENNA-TIRE PRESSURE	40742			
CALIPER YOKE	41025			
HOLD DOWN PIN	41040			
PVOT PIN	41041			
ANTI-SQUEAK SPRING	41083			
CLIP	41086			
FRONT CALIPER	41110			
CALIPER SEAL & PISTON	41120			
FRONT BAFFLE PLATE	41151			
AIR GUIDE	41182			
REAR CALIPER	44010			
BACK PLATE	44020			
CALIPER BODY	44025			
HOLD DOWN PIN	44040			
EXTENSION LINK	44075			
ANTI-RATTLE PIN	44081			
HAND BRAKE CONTROL LVR YOKE	44082			
REAR BRAKE RETURN SPRING	44090			
YOGGLE LEVER	44095			
REAR WHEEL CYLINDER	44100			
LEVER ASSY	44118			
PISTON & SEAL	44120			
REAR BAFFLE PLATE	44151			
ANCHOR - PARKING BRAKE	44180			
ADJUSTER ASSY	44200			
MASTER CYLINDER	44202			
BRAKE STROKE SIM CYL	46011			
OIL RESERVOIR CAP	46020			
RESERVOIR SEAL	46045			
LEVEL INDICATOR	46048			
PISTON ASSY	46063			
SNAP RING	46082			
FLUID RESERVOIR	46090			
FLUID STRAINER	46093			
RESERVOIR HOSE	46113			
FRONT BRAKE HOSE	46201			
REAR BRAKE HOSE	46211			
BRAKE TUBE CONNECTOR - TYPE 2A	46220			
BRAKE PIPE	46284			
REAR CENTER BRAKE HOSE	46310			
CONNECTOR	46313			
DP/LOAD SENSING VALVE	46400			
PROPORTIONING VALVE	46401			
AUTO ADJUSTING BRAKE PEDAL	46501			
BRAKE MASTER CYLINDER BRACKET	46515			
PEDAL STOPPER	46518			
BRAKE PEDAL	46520			
BRAKE PEDAL BUSHING	46525			
BRAKE FULCRUM SHAFT	46560			
PEDAL SHIFT SLEEVE	46580			
BRAKE PEDAL SPRING	46585			
BRAKE BOOSTER	47210			
BRAKE BOOSTER SPACER	47211			
BRAKE PRESSURE SENSOR ASSY	47230			
BRAKE BOOSTER HOSE	47271			
BRAKE BOOSTER CONNECTOR	47475			
VACUUM TUBE	47476			
CHECK VALVE -	47478			
ACTIVATOR ASSY	47600			
ABS ACTUATOR RELAY ALL	47605			
ABS BRAKE CONTROL MODULE	47630			
ACTUATOR BRACKET	47840			
MODULE ASSY	47850			
ABS/TCS CONTROL UNIT ASSY	47851			
ABS BRAKE CAPACITOR	47880			
SENSOR ASSY (RR) ANTI-SKID	47900			
SENSOR ASSY (FR) ANTI-SKID	47910			
ANTI-SKID SPLASH GUARD	47935			
STIRLING ANGLE SENSOR	47940			
ROTOR ASSY (RR) SENSOR	47950			
FRONT SENSOR BRACKET	47960			
ROTOR ASSY (FR) SENSOR	47970			

Electrical

ASCOD O.D. CANCEL SWITCH	18930			
CONTRL ASSY-INTELLIGENT CRUISE CONTROL	18995			
MAIN HARNESS	21010			
ENGINE HARNESS	24012			
INSTRUMENT HARNESS	24013			
BODY HARNESS	24014			
TAIL HARNESS	24015			
CHASSIS HARNESS	24016			
CONSOLE HARNESS	24030			
ENGINE SUB HARNESS	24077			
ROOM LAMP HARNESS	24160			
FUSIBLE LINK	24161			
AIR BAG HARNESS	24170			
REAR WINDOW DEFROSTER	24320			
DEFROSTER WIRING	24328			
CIRCUIT BREAKER	24330			
UNIFIED METER CONTROL UNIT	24310			
VOLT METER	24822			
DIGITAL TEMP METER ASSY	24835			
GAUGE ASSEMBLY	24840			
SPEEDOMETER	24850			
TACHOMETER	24855			
FUEL GAUGE	24860			
OIL PRESSURE GAUGE	24870			
ODOMETER/TRIP METER	24875			
COOLANT TEMP GAUGE	24880			
AUX INST GAUGE CIRCUIT BOARD	24898			
HEAD-UP DISPLAY UNIT	24941			
SECURITY INDICATOR LAMP	25021			
PRINTED CIRCUIT	25030			
WARNING DISPLAY	25041			
SPEEDOMETER CABLE	25050			
WARNING DISPLAY AMPLIFIER	25065			
O/HEAD CONSOLE SW MODULE	25111			
TOW MODE SWITCH	25128			
VDC OFF SWITCH	25147			
STEERING WHEEL HEATER SWITCH	25148			
ENGINE START SWITCH ASSY NS	25150			
SWITCH ASSY - UP	25151			
LIGHTING/COMBO SWITCH	25160			
CARGO LAMP SWITCH	25161			
PEDAL ADJ SWITCH ASSY	25180			
HEADLAMP AIMING SWITCH	25188			
RELAY GLASS HATCH/BACK DOOR	25197			
RELAY-COURTESY LAMP	25201			
RELAY-TAIL GATE RELEASE	25202			
HEADLAMP RELAY	25203			
REAR DEFROST RELAY	25204			
HORN RELAY	25205			
INSTRUMENT PANEL SWITCH	25210			
IGNITION RELAY	25215			
INHIBITOR RELAY	25216			
RELAY-AUTO LAMP	25219			
HOLD RELAY-EXHAUST GAS SENSOR	25226			
HEADLAMP DIMMER RELAY	25228			
RELAY-FOG LAMP	25229			
ASCOD RELAY	25234			
RELAY-REAR WIPER	25236			
STARTER RELAY	25243			
INTERLOCK EMERGENCY RELAY	25250			
POWER WINDOW RELAY	25252			
CLUTCH RELAY	25258			
SWITCH - SLIDE DOOR	25259			
REAR WIPER/WASHER SWITCH	25262			
ASCOD HOLD RELAY	25264			
RELAY-CORNERING LAMP	25266			
SWITCH KNOB	25267			
RELAY-TAIL LAMP	25268			
HEADLAMP DAYTIME RELAY	25269			
THEFT WARNING LAMP RELAY	25272			
HID RELAY	25275			
RELAY-N & P	25276			
RELAY -POWER SOCKET	25277			
ILLUMINATION CONTROL UNIT	25280			
SWITCH - AUTO DOOR ON/OFF	25290			
SWITCH - BACK DOOR	25292			
TRAILER TOW PWRR RELAY	25296			
RELAY-TRAILER TOW TURN SIGNAL	25297			
AFS CONTROL UNIT ASSY NS	25300			
DRIVE POSITION SWITCH	25315			
ASCOD CLUTCH SWITCH	25323			
ASCOD STOP SWITCH	25324			
RELAY-HEATER SEAT	25325			
CIGARETTE LIGHTER	25330			
POWER SOCKET	25332			
REAR DEFROST SWITCH	25340			
REAR WINDOW SWITCH	25343			
DE ICE SWITCH	25358			
SLIDING DOOR SWITCH	25359			
DOOR SWITCH	25360			
DOOR LOCK SWITCH	25361			
BACK DOOR SWITCH	25363			
BACK DOOR UNLOCK SWITCH	25364			
SWITCH ASSY-FOG LAMP	25370			
COMPUTER BOARD SWITCH	25381			
TRUNK OPENER SW	25382			
TRUNK LID OPENER SWITCH	25384			
REAR SUNSHADE SWITCH ASSY	25388			
FUEL FILLER OPENER SWITCH	25394			
DOOR LOCK SWITCH	25400			
INTERLOCK EMERGENCY SWITCH	25401			
CLUTCH INTERLOCK SWITCH	25402			
POWER WINDOW CONTROL UNIT	25404			
FUSE BLOCK	25410			
FUSIBLE LINK HOLDER	25411			
SWITCH ASSY-CARRIER	25413			
HILL DESCENT CONTOl SWITCH	25472			
SWITCH-SEAT HEATER	25500			
HEADLAMP SENSOR UNIT	25501			
TAIL & STOP LAMP SENSOR	25506			
FLASHER ASSY-COMBINATION	25520			
FLASHER UNIT & RELAY	25521			
METER POWER UNIT	25522			
SEAT BELT WARNING TIMER	25529			
HEADLAMP/TURN SIGNAL SWITCH	25540			
BRUSH ASSEMBLY	25541			
RECEIVER-SWITCH SIGNAL	25556			
REAR WIPER/WASHER SWITCH	25560			
SWITCH ASSY ALARM	25585			
VOICE WARNING SWITCH	25591			
THEFT WARNING HORN ASSY	25605			
BUZZER ASSY	25641			
FRONT SONAR SENSOR BUZZER	25659			
GLOVE BOX SWITCH	25720			
POWER WINDOW MAIN SWITCH	25750			
POWER WINDOW SUB SWITCH	25752			
HAZARD SWITCH	25880			
SPEED SENSOR	25911			
VOICE WARNING UNIT	25925			
DISPLAY UNIT	25930			
CONTROL UNIT	25931			
POWER UNIT	25936			
DOOR HNDL SWITCH	25974			
ANTENNA - GPS	25976			
SONAR SWITCH ASSY	25989			
CONTROL UNIT - BACK DOOR	25990			
FRONT SONAR SENSOR NS	26050			
WARNING CHIME/BUZZER	26350			
KEYLESS ENTRY BUZZER	26352			
WIPER ARM	26380			
REAR WIPER ARM	26390			
SPOT LAMP (SWITCH)	26416			
SWITCH-REAR SIDE WINDOW	26430			
FRONT COMBO LAMP HARNESS	26451			
AUX JACK-AUDIO	26823			
CLOCK	27380			
TIE TUBE	27416			
WASHER NOZZLE	27440			
REAR WASHER NOZZLE	27450			
WASHER TUBE	27460			
REAR WASHER TUBE	27470			
WIPER WASHER TANK	27480			
REAR WASHER TANK	27490			
WASHER TANK LEVEL SENSOR	27491			
FRESH AIR VENT SWITCH ASSY	27513			
TRUNK OPENER CANCEL SWITCH	27662			
SENSOR-AMBIENT AIR TEMP	27757			
ANTENNA SWITCH	27922			
UNIT-AMBIENT	27972			
SWITCH-AMBIENCE	28261			
REAR AUDIO PANEL	28269			

		GOLD Preferred	SILVER Preferred	POWERTRAIN Preferred
ELECTRICAL (Continued)				
ASSY-MICROPHONE	28301			
JACK-VTR	28318			
REAR DEFOGGER CONDENSOR	28357			
SWITCH-AUDIO VOLUME	28398			
SWITCH-AUDIO TUNING	28400			
ASCOD ACTUATOR	28400			
ASCOD CONTROLLER	28402			
ASCOD MAIN SWITCH	28404			
UNIT-HEADLAMP BATTERY SAVER CONTROL	28414			
IPDM (INTELLIGENT POWER DIST MODULE)	28417			
SENSOR-STOP/TAIL LAMP	28426			
TIMER - OIL LEVEL	28550			
SENSOR UNIT-INTRUDE	28436			
SENSOR ASSY - DISTANCE ,ICC	28437			
CAMERA ASSY - LKS /LDW	28443			
DOOR LOCK TIMER	28450			
SENSOR UNIT-TILT ANTI THEFT	28453			
REAR DEFROST TIMER	28455			
INTERIOR LAMP TIMER	28460			
CONTROL ASSY-CAN GATEWAY	28481			
CONTROL UNIT ASSY-MUFFLER	28488			
ANTENNA TIMER	28490			
BODY CONTROL LAN MODULE	28492			
P/S CONTROL UNIT	28500			
BUZZER-SONAR SENSOR , FRONT	28501			
WIPER RELAY	28510			
RELAY-REVERSE LAMP	28511			
BRACKET-RELAY	28512			
RELAY-THROTTLE MOTOR	28516			
CONTROL UNIT-SONAR SENSOR	28532			
CARD SLOT CNTRL ASSY NS	28535			
CONTROL UNIT-SLIDE DOOR	28543			
TIME CONTROL UNIT	28550			
DIAGNOSIS SENSOR UNIT	28555			
CONT ASSY - POWER	28560			
CONTROL ASSY-HEATER SEAT	28564			

Nissan Security+Plus Summary of Extended Protection Plans

VEHICLE TYPE	NEW NISSAN			PRE-OWNED NISSAN		
	GOLD PREFERRED	SILVER PREFERRED	POWERTRAIN PREFERRED	GOLD PREFERRED	SILVER PREFERRED	POWERTRAIN PREFERRED
NUMBER OF COVERED COMPONENTS	2,000+	1,400+	800+	2,000+	1,400+	800+
	Includes belts and hoses			Includes belts and hoses		
DEDUCTIBLE	<p align="center">\$0 or \$100</p>					
ROADSIDE ASSISTANCE	<p align="center">Up to \$100 per Claim (Roadside Assistance: 1-800-225-2476)</p>					
TRIP INTERRUPTION	Up to \$500 per Incident		N/A	Up to \$500 per Incident		N/A
CAR RENTAL	Up to \$35 per day, 5-day maximum		N/A	Up to \$35 per day, 5-day maximum		N/A
TOWING	Nearest Nissan dealer up to \$100 maximum		N/A	Nearest Nissan dealer up to \$100 maximum		N/A
TIME/MILEAGE TERMS	Months/Miles	Months/Miles	Months/Miles	0 - 40,000 Miles on Odometer: 12 Months/12,000 Miles 24 Months/24,000 Miles 36 Months/36,000 Miles 48 Months/48,000 Miles 60 Months/60,000 Miles 72 Months/80,000 Miles		
	24/40,000	60/75,000	60/75,000			
	36/40,000	60/100,000	60/100,000	40,001 - 50,000 Miles on Odometer: 12 Months/12,000 Miles 24 Months/24,000 Miles 36 Months/36,000 Miles 48 Months/48,000 Miles 60 Months/60,000 Miles		
	36/45,000	72/75,000	72/75,000			
	36/60,000	72/100,000	72/100,000			
	39/39,000	84/70,000	84/70,000			
	39/49,000	84/100,000	84/100,000			
	48/48,000	84/120,000	84/120,000			
	48/60,000	96/100,000	96/100,000			
	48/120,000	96/120,000	96/120,000	50,001 - 60,000 Miles on Odometer: 12 Months/12,000 Miles 24 Months/24,000 Miles 36 Months/36,000 Miles 48 Months/48,000 Miles		
	60/60,000					
	60/75,000					
	60/100,000					
	60/120,000					
	72/75,000			60,001 - 75,000 Miles on Odometer: 12 Months/12,000 Miles 24 Months/24,000 Miles 36 Months/36,000 Miles		
	72/100,000					
	84/70,000					
	84/100,000					
	84/120,000					
	96/100,000			75,001 - 100,000 Miles on Odometer: 12 Months/12,000 Miles 24 Months/24,000 Miles		
96/120,000						

Disclaimer:

THIS BROCHURE, WHICH IS LIMITED BY SIZE, IS NOT A CONTRACT. READ A SAMPLE SECURITY+PLUS CONTRACT AT YOUR DEALER, AND READ YOUR ACTUAL SERVICE CONTRACT BECAUSE ITS TERMS, CONDITIONS, EXCLUSIONS, AND LIMITATIONS CONTROL.

Notice:

In compliance with federal laws, the contents of this brochure should be interpreted and understood within the meaning of a "Service Contract" as defined in Federal Law. (See 15 USCS Sec. 2301 (8).)

*** In Florida, Security+Plus is backed by Nissan Extended Services North America, Inc., P.O. Box 685004, Franklin, TN 37068-5004, License #60128.**

† Replacement of any part will be made with a new or remanufactured Genuine Nissan or Nissan-approved replacement part in use at the time of repair. The replacement part may differ from the original part.

†† Roadside Assistance services are administered by Cross Country Motor Club, Inc., Medford, MA 02155-6918, except in AK, CA, HI, OR, WI, and WY where services are provided by Cross Country Motor Club of California, Inc., Medford, MA 02155-6918.

Nissan, the Nissan Logo and Nissan Model Names are Nissan Trademarks.

©2013 Nissan 1-800-NISSAN-1 owners.nissanusa.com/Security+Plus

SEC COMPONENT-0413

50M 0414