

2022 Audi Maintenance Schedule - Audi Electric Vehicles

MY 2022 Audi Electric Vehicles Maintenance Intervals - USA

Service intervals in miles												
	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K	110K	120K
Minor Maintenance (Every 1 year) ¹	X		X		X		X		X		X	
Standard Maintenance (Every 2 years) ²		X		X		X		X		X		X
Additional Maintenance Items	Refer to the Additional Maintenance Items Table below											

1) First minor maintenance service at 10,000 miles or 1 year after delivery, whichever occurs first. Minor maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last minor maintenance service, whichever occurs first.

2) First standard maintenance service at 20,000 miles or 2 years after delivery, whichever occurs first. Standard maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last standard maintenance service, whichever occurs first.

all completed items

Minor Maintenance

- Brake system - Check the thickness of the brake pads
- Connected box battery (for Audi Connected Services) - Check state of health with Vehicle Diagnostic Tester in Guided Functions
- First aid kit - Check and enter expiration date YYYY / MM _____ (if applicable)
- Front and rear axle/suspension components - Check dust seals on ball joints and tie rod ends; check for excessive play
- Instrument cluster - Check warning and indicator lights
- Multi-point inspection - Complete
- Service reminder indicator display - Reset display
- Space saver spare wheel and tire - Check condition and tire inflation pressure, adjust if necessary (if equipped)
- Tires - Check condition and tire tread wear; Check and record the tread depth
- Tires - Check tire inflation pressure and adjust if necessary
- Tire repair kit - Check and record the completeness and expiration date (if equipped)
- Wiper blades - Check condition and replace if necessary

Standard Maintenance (Includes All Minor Maintenance Items)

- Body/chassis - Visually inspect for possible paint damage and corrosion, from the inside and outside, with the doors as well as hood and trunk lids open
- Brake system - Check for damage and leaks, condition of brake hoses and the presence of the bleeder caps; Check the thickness of the brake pads
- Charging cable - Check for damage (if present in vehicle during inspection)
- Charging socket - Check for contamination and damage
- Connected box battery (for Audi Connected Services) - Check state of health with Vehicle Diagnostic Tester in Guided Functions
- CTG Label - Check for CTG (Certification Test Group) label is present, undamaged, and legible in the engine compartment. Use the Vehicle Diagnostic Tester to verify the certification test group engine family number on the label matches the engine control module
- Door hinges (including door stay) and door latch - Lubricate
- Exterior lighting function - Check front and rear lights, high beams, low beams, turn signals, cornering lights, reverse lights, brake lights, license plate lights, fog lights, and hazard warning lights



Standard Maintenance (continued)

- First aid kit (if equipped) - Check and enter expiration date YYYY / MM _____
- Front axle drive - drain coolant (with small cover removed) (Excluding e-tron GT)
- Headlights - Check adjustment
- High voltage cooling system - Check coolant level according to ElsaPro, and add coolant if necessary
- High voltage safety instruction labels - Check safety instruction labels for legibility
- High voltage system components - Check for damage and leaks; check that high voltage cables and coolant lines are properly mounted. Make sure that insulation of the cables is not damaged. Check safety instruction labels for legibility (with underbody cover removed rear and front)
- High voltage system maintenance connector - Check for damages (deformation and scratches) and connector cleanliness
- Horn - Check function
- Instrument cluster - Check warning and indicator lights
- Interior lights - Check all interior lights, trunk lights, and glove box compartment illumination
- Motor compartment - Check transmission, final drive, and steering for leaks and damage (including visible HV components with front noise insulation removed)
- Multi-point inspection - Complete
- Parking brake actuator - Check activating range with the Vehicle Diagnostic Tester (Only e-tron GT)
- Plenum chamber and water drain valves: Check for dirt, and clean if necessary (Excluding e-tron GT)
NOTE: Time spent cleaning of item is a separate charge for service time
- Road test - Perform
- Safety belts - Check function and condition of belt, belt tongue, and latch
- Service reminder indicator display - Reset display
- Space saver spare wheel and tire - Check condition and tire inflation pressure, adjust if necessary (if equipped)
- Sunroof and panoramic sunroof systems - Check function (if equipped) (Excluding e-tron GT)
- Suspension and axle components (front and rear) - Check dust seals on ball joints and tie rod ends; check for excessive play
- Tires - Check condition and tire tread wear. Check and record the tread depth
- Tires - Check tire inflation pressure, and adjust if necessary
- Tire repair kit (if equipped) - Check and record the completeness and expiration date
- Underbody - Check for damage and leaks, check the wheel well liners, underbody paneling and all lines are properly mounted (including visible HV components)
- Warning triangle and first aid kit (if equipped) - Check if present
- Windshield washer and headlight washing system - Add fluid if necessary. Check adjustment and function
- Wiper blades - Check condition and replace if necessary

Additional Maintenance Items	
Work to be completed	Interval
<input type="checkbox"/> Brake fluid - Change	Every 2 years regardless of mileage
<input type="checkbox"/> Dust and Pollen filter - Replace	Every 20,000 miles or 2 years, whichever occurs first
<input type="checkbox"/> Panoramic sunroof systems - Check drainage system by fluid check according to Elsa (if equipped) (Except e-tron GT)	Every 20,000 miles or 2 years, whichever occurs first
<input type="checkbox"/> Rear axle drive - Replace coolant cartridge (with cover removed) (Except e-tron GT)	Every 20,000 miles or 2 years, whichever occurs first