

FlexCare
VEHICLE PROTECTION

PROTECTION YOU CAN COUNT ON.
PEACE OF MIND YOU DESERVE.

Protection for your family, finances and your vehicle.



INVEST IN THE BEST FACTORY-BACKED
VEHICLE SERVICE CONTRACTS.



PEACE OF MIND INCLUDED.

"For me, it's about a tailor-made service to match my needs."

1. EXTENDED CARE PREMIUM

Full mechanical coverage of 5,000+ components

2. EXTENDED CARE PLUS


Powertrain + over 850 components covered

3. EXTENDED CARE

Powertrain + basic component coverage

- Term options up to 8 years/125,000 miles
- \$200, \$100 and \$0 deductible levels, depending on the plan and term chosen
- New vehicles with a 5-Year/60,000-Mile or longer Powertrain Limited Warranty are eligible within 36 months from the vehicle's original in-service date and 36,000 miles
- Vehicle Service Contracts may be transferable, making your vehicle more valuable and easier to sell

Note: See your dealer for additional details, eligibility and restrictions.

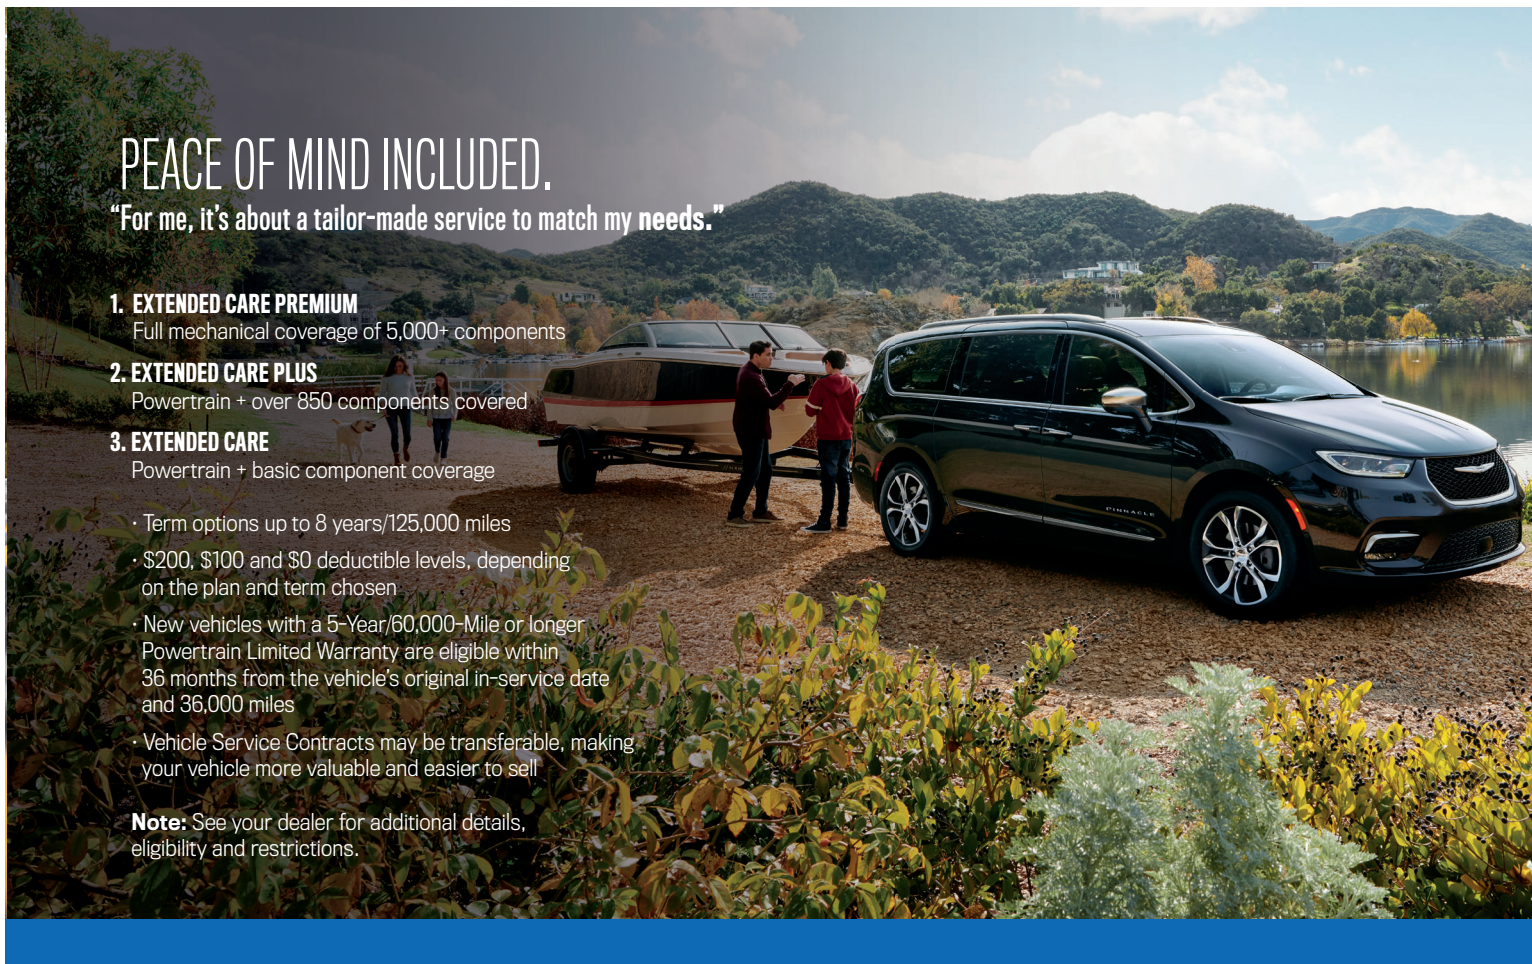

FEATURES AND BENEFITS

Protection you can count on. Peace of mind you deserve.

FIRST DAY RENTAL

Provides a \$45 First Day Car Rental Allowance or Taxi Reimbursement for any dealership mechanical repair or maintenance service (excluding bodywork).

CAR RENTAL ALLOWANCE

Will pay up to \$45 per day (\$175 maximum per occurrence) for Car Rental or Taxi Reimbursement anytime a component covered by the plan or Manufacturer's Basic or Powertrain Warranty fails, causing the vehicle to be inoperable and repairs take overnight.

\$100 TOWING/ROADSIDE ASSISTANCE

Provides 24-hour "Sign-and-Go" Towing and Roadside Assistance (up to \$100 per occurrence). Benefits include towing, flat-tire change (with your good spare), battery jump, out-of-gas fuel delivery (maximum 2 gallons) and lockout service (i.e., keys locked in car or frozen lock).

KEY FOB REPAIR/REPLACEMENT*

Provides coverage for up to three (3) key fob repairs or replacements (with a total maximum coverage benefit of \$600). Key fob coverage is available even if this component is not operable or recoverable.

*Key fob replacement is only available for new vehicles.

\$1,000 TRIP INTERRUPTION PROTECTION

Will pay up to \$1,000 for lodging, meals and car rental expenses if: (1) the vehicle is inoperable due to a failure covered by the service contract or the factory warranty; and (2) the failure occurs more than 100 miles from home.

PERSONALIZED PLAN PROVISIONS

Upon receipt and approval of a FlexCare Vehicle Protection plan application form, you will be mailed personalized plan provisions. They will identify you and your vehicle to the servicing dealer as being eligible for plan service.

WHEN PLAN COVERAGE STARTS AND ENDS

All time and mileage specifications are from the warranty start date (the original in-service date of the vehicle) and 0 miles. Plan coverage continues for the length of time and mileage you select. Plan expiration is specified in your plan provisions.

WHAT'S NOT COVERED UNDER OUR EXTENDED CARE PREMIUM PLANS

The only parts and labor not covered: Maintenance Services and items used in such services • Catalytic Converter and Particulate Filter • Glass, Plastic Lenses and Light Bulb • Body and Paint items (including Soft Trim) • Snowplows, Winches and Trailer Hitches • Wear items (such as Tires, Manual Clutch Assembly, Brake Pads, Shoes, Rotors, Drums, Belts and Wipers)

Note: See your dealer for additional details, eligibility and restrictions.



APPEARANCE MATTERS. SO DOES YOUR PEACE OF MIND.

Additional options for your ride.

AUTO APPEARANCE CARE

Auto Appearance Care covers dents and dings on your vehicle's exterior surfaces.

Utilizing a Paintless Dent Repair (PDR) process, an experienced technician works from behind your vehicle's metal panels to flex and mold the metal back to its original form like nothing ever happened.

Repairs can be performed on any size dent and ding on metal panels where the paint has not been broken and the dent can be completely repaired using the PDR process (as determined by the field technician).

PLAN BENEFITS:

- Any-size dent coverage; unlimited number of repairs
- No deductibles or out-of-pocket expenses
- Both new and pre-owned vehicles are eligible
- Transferable coverage

Ask about Auto Appearance Care Plus for even greater benefits, including windshield repair, carpet/floor mats, interior trim and upholstery coverage.



ENHANCE YOUR PROTECTION. DRIVE ON WITH CONFIDENCE.

Additional options for your specific needs.

PREMIUM TIRE & WHEEL COVERAGE

Includes coverage for issues that are usually excluded, such as damage caused by car washes, construction zones or metal plates on the road. It also covers oversized tires and wheels, aftermarket wheels, chrome and chrome clad wheels, wheel covers (hubcaps), snow tires and more.

	PREMIUM TIRE & WHEEL	MULTICARE	MULTICARE PLUS
Tire & Wheel Coverage	•	•	•
Cosmetic Wheel Coverage	•	•	•
Curb Damage Coverage	•	•	•
Paintless Dent Repair		•	•
Windshield Repair		•	•
Key Replacement		•	•
Roadside Assistance		•	•
Interior/Exterior Repair			•



THERE ARE OVER 5,000 REASONS
TO CHOOSE EXTENDED CARE PREMIUM.

Too many to name, but here are just a few of the parts that are covered.



4 X 4 motor/actuator • Accelerator pedal and brake assembly • Accelerator pedal speed sensor • Accessory drive belt • Accumulator and hose assembly • Accumulator assembly, anti-lock brakes
 Air conditioning compressor bracket • Air conditioning compressor clutch bearing • Air conditioning condenser fan and blades • Air conditioning evaporator coil • Air conditioning pressure/return ho
 driver monitoring • Camshaft bearings • Center stack display • Clutch master cylinder • Compressor valve plate gasket • Computer, body • Console Latch • Convertible motor and pump assembly •
 Defroster outlet duct • Differential case • Differential gear cover • Differential side gear set • Differential support bracket • Differential w/carrier assembly gasket • Disc brake caliper assembly • Dis
 cylinder block • Engine intake manifold gaskets and seals • Engine jacket heater • Engine mount/support • Engine oil cooler • Engine oil pan • Engine oil pan drain plug gasket • Engine oil pan gasket • f
 Front axle shaft • Front axle trac bar • Front brake disc hub and bearing • Front differential pinion bearings • Front differential side bearings • Front heater hoses • Front inner axle bearings • Front o
 • Fuel tank filler tube • Fuel tank ground straps • Fuel tank to filler neck hose • Fuel tank vent hose • Fuse/relay block • Gauge alert module • Gear selector indicator • Gearshift control torque shaft and t
 Hood hinges • Hood latch • Hood latch release cable • Hood props • Hood safety catch assembly • Horn contacts • HVAC housing discharge hose/tube • Idler pulley • Ignition capacitor • Ignition coils
 dual rear doors • Latch assembly/striker sliding door • Lateral arm • Leak detection pump • Lever assembly, parking brake • Lever, gearshift • Lever, parking brake floor operated • Lever, steering w
 Manual transaxle control unit • Map lamp with switch • Master cylinder • Master cylinder cap/cover • Mechanism, reclining/forward folding seat • Media system monitor/display • Memory seat conti
 seal, driveshaft • Oil seal, extension housing • Oil seal, front pump housing • Oil seal, intermediate shaft • Oil seal, rear-wheel bearing • Oil seal, steering gear sector shaft • Oil seal, steering gear worr
 steering gear sector shaft cover • O-Ring, water pump inlet tube • O-Rings or gasket, discharge line from condenser • O-Rings, fuel indicator • O-Rings, fuel injector • O-Rings, gear control valve to l
 Parking lock sprag control rod • Pickup box hinge bracket and hinge • Pick-up tailgate latches • Pilot bushing • Pin, door hinge • Pinion bumper/support assembly • Plate, rear shock absorber lower r
 steering control module • Power steering cooler • Power steering pump pressure hose • Power steering pump return hose • Power sunroof cable • Power sunroof module • Power transfer unit • P
 Reaction shaft w/support • Reading lamp and switch • Rear axle assembly • Rear axle bumper • Rear axle filler plug • Rear axle housing • Rear axle housing bushing • Rear axle housing cover • Rear
 bumper • Rear spring shackle bracket • Rear spring shackle bushing • Rear stabilizer bar • Rear stabilizer links • Rear suspension arm bearing/bushings • Rear suspension knuckle • Rear suspensi
 Regulator, rear door glass • Regulator, speed control • Regulator, voltage • Relay, A/C clutch cut out • Relay, A/C fast idle • Relay, after run fan • Relay, air condition • Relay, air shock/load leveling • R
 release • Relay, low beam • Relay, low fuel • Relay, main ABS • Relay, manifold heater • Relay, modulator poser (abs) • Relay, module, anti-lock brakes • Relay, motorized seat belts • Relay, oxygen se
 pump • Reservoir, vacuum • Reservoir, windshield washer fluid • Resistor, blower motor • Resistor, fuel pump • Retainer, crankshaft front bearing oil • Retainer, differential bearing • Retainer, front c
 window regulator • Run, door glass • Satellite antenna • Seal, air condition housing to plenum • Seal, at tank fuel filler • Seal, camshaft position sensor • Seal, condenser fan switch • Seal, crossover
 selector shaft • Seal, suction line • Seal, suction line to compressor inlet • Seal, throttle valve lever shaft • Seal, transfer shaft • Seal, valve body manual lever • Seal, valve stem oil • Seal/O-ring, stee
 • Sensor, air bag front impact • Sensor, air flow/air intake/barometer • Sensor, air inlet • Sensor, air int temp • Sensor, air thermo • Sensor, ambient temperature • Sensor, battery temperature • Sen
 (EVS) • Sensor, spark knock • Sensor, speed • Sensor, speed (trans control) • Sensor, steering wheel angular velocity • Sensor, sun • Sensor, sunroof magnetic • Sensor, temperature (EGR) • Sensor
 output • Shaft, propeller rear • Shaft, rocker arm • Shaft, side column signal • Shaft, steering column • Shaft, torque • Shaft, transaxle selector • Shield, drive belt splash • Shield, load-sensing valve
 suspension • Solenoid, assembly, deck lid power pull • Solenoid, assembly, distribution/air switch • Solenoid, electric trunk release • Solenoid, governor pressure • Solenoid, idle • Solenoid, idle up
 throttle control return • Spring, trans rod/throttle return • Spring/clip, brake shoe hold down • Sprocket, camshaft • Sprocket, intermediate shaft • Sprocket, silent shaft • Stabilizer, door glass • Sti
 engine anti-roll • Stud, gearshift lever pivot - replace • Stud, shock absorber lower mounting • Sun gear, overdrive • Sunroof guides • Sunroof module/assembly • Supercharger, engine • Support as
 • Switch, clutch pedal position • Switch, clutch/ignition interlock • Switch, combination turn signal headlamp • Switch, console illumination • Switch, convertible top • Switch, coolant temperature • S
 panel • Switch, headlamp dimmer • Switch, headlamp door • Switch, high-pressure cut off • Switch, high-pressure power steering • Switch, hood • Switch, ignition • Switch, ignition key buzzer • S
 position • Switch, push button vacuum • Switch, radiator fan • Switch, rear blower motor • Switch, rear heater control • Switch, rear window radio control • Switch, rear window wiper • Switch
 Tachometer • Tailgate check arm • Tailgate hinge bushing w/plate • Tailgate latch control • Tailgate lift cylinder • Tank, coolant reserve • Tank, fuel • Tapper, roller type • Tee, brake tube • Temperatu
 converter • Torque shaft, gearshift control • Torque tube • Torque tube front bearing • Torsion axle and arm assembly • Torsion bar • Torsion tube • Track bar mounting brace • Track bar mounting t
 assembly, gearshift selector • Tube, air cleaner inlet/outlet • Tube, air conditioning condensate drain • Tube, ATC aspirator • Tube, EGR • Tube, extension • Tube, fixed orifice • Tube, oil filter/dipstick •
 assembly • Universal joint flange • Universal joint, axle shaft • Universal joint, half shaft • Universal joints • Upper ball joint/ball socket • Upper control arm • Upper control arm cam and bushings • US
 control • Valve, heated air door delay • Valve, high-pressure relief • Valve, load-sensing proportioning valve • Valve, manifold heat • Valve, power brake check • Valve, power heat control • Valve, pre
 track guide • Windshield washer pump • Windshield wiper linkage assembly • Windshield wiper module • Windshield wiper motor gear assembly • Wiper arm • Wire, front seat latch adjuster • Wiring
 harness, fuel injector cap • Wiring harness, fuel tank pump/sending • Wiring harness, instrument panel • Wiring harness, keyless entry • Wiring harness, liftgate • Wiring harness, liftgate eje

• Accumulator inlet/outlet lines • Accumulator piston • Active driving assistance system • Actuator rod, ignition switch to key • Actuator, bi-level mode • Actuator, defroster door • Actuator, four-wheel drive
 es and lines • Air conditioning receiver drier • Air conditioning suction/liquid hose • Air conditioning system • Air mix damper motor • Air shocks/load leveling module • Air suspension control unit • Alternator
 Convertible top frame • Convertible top latches • Convertible top pump lines/hoses • Cooling fan and blades • Courtesy illumination • Cradle isolator bushing • Crankshaft • Crankshaft main bearings • Cr
 ic brake caliper piston and seal • Disc brake dust shield • Door check arm/strap • Drive plate to torque converter bolts • Driveshaft assembly • Driveshaft boots • Driveshaft center support/bearing • Driv
 Engine piston with wrist pin • Engine thermostat housing • Engine water pump • Engine water pump rear housing gasket • Engine, complete • Exciter ring, anti-lock brakes • Exhaust gas recirculation valve
 utput rear bearing gasket • Front output shaft bearing • Front output shaft front bearing gasket • Front stabilizer bar • Front stabilizer bar bushings • Front stabilizer bar links • Front suspension arm bush
 ushing • Gearshift housing gasket • Gearshift lever boot • Gearshift lever interlock • Gearshift linkage • Gearshift mechanism cover • Gearshift mechanism insulator • Generator support bracket • Glass lift of
 ; • Ignition control module • Injector pump support bracket • Inner axle shaft bearing • Input gear bearing retainer gasket • Input shaft oil seal • Inside rearview mirror • Instrument cluster • Intake manifold •
 /heel tilt • Lever, transfer case shift • Lever, turn signal switch • Liftgate release • Limiter, instrument voltage • Linage, load-sensing proportioning valve • Linkage, gearshift control to mechanism • Load-le
 rol module • Metal fuel lines • Module, night vision • Module, radar long range • Module, radar mid range • Motor mount damper • Motor/module/ATC blend air door • Motor/pump, enthusiast seat • Motorize
 n shaft • Oil seal/gasket, crankshaft rear housing • Oil seals, axle housing inner • Oil seals, steering gear • Oils seal, crankshaft front bearing oil • O-Ring and gasket, expansion valve • O-Ring bedplate to blo
 housing • O-Rings, transfer tube • O-Rings, turbine • Outer intermediate axle shaft bearing • Output shaft bearing • Output shaft bearing, front • Output shaft bearing, rear • Output shaft pilot bearing • Out
 mount • Plate, steering column • Plate, torque converter drive • Plates, rear axle clutch • Plug, camshaft rear bearing • Plug, cylinder block core hole • Plug, cylinder block oil gallery • Plug, cylinder head c
 'ower vent window motors • Power window motors • Powertrain control module • PRDL indicator • Printed circuit boards • Pump assembly, air horn • Pump assembly, front-recon • Pump, air • Pump/mo
 ' axle shaft • Rear axle trac bar • Rear bucket seat release latch • Rear differential pinion bearings • Rear differential side bearings • Rear differential - limited slip assembly • Rear drive line module • Rear c
 on lower arm • Rear suspension strut mount assembly • Rear sway bar bracket • Rear sway bar bracket • Rear sway bar bushing/cushion • Rear sway bar links • Rear trailing arm • Rear trailing arm link
 elay, anti-lock brake lamp • Relay, ATC blower motor • Relay, auto shutdown • Relay, condenser fan • Relay, EATX/reverse lamp • Relay, ECI control • Relay, electric door lock • Relay, electric seat adjuster
 ensor • Relay, park lamp • Relay, passing control • Relay, power antenna • Relay, pump/motor-anti-lock brakes • Relay, radiator - A/C condenser fan motor • Relay, radio lamp control • Relay, rear window
 output rear bearing • Retainer, front strut cover • Retainer, governor support • Retainer, intermediate shaft oil seal • Retainer, sunroof cable guide • Retainer/case, crankshaft rear bearing • Reverse band
 r shaft • Seal, differential side gear • Seal, drier outlet • Seal, driveshaft • Seal, evaporator/H-valve • Seal, front case • Seal, front cover • Seal, front output shaft • Seal, fuel tank filler tube • Seal, fuel tank
 ring gear housing end • Seals, axle shaft • Seals, front and rear clutch • Seals, pump reservoir oil • Seals, steering gear stub shaft thrust • Seals, upper and lower valve pinion • Seat belts • Seat, front spri
 sor, boost pressure • Sensor, cabin temperature • Sensor, camshaft position • Sensor, detonation • Sensor, door pressure • Sensor, engine speed • Sensor, fluid level • Sensor, heated air door • Sensor, f
 r, throttle manifold air temp • Sensor, tire pressure • Sensor, transaxle output speed • Sensor, transaxle turbin input speed • Sensor, transmission oil • Sensor, transmission pressure • Sensor, valve positio
 3 • Shield, starter motor heat • Shift fork • Shift fork pads • Shifter lock cable • Shifter, transfer case • Shock absorber - front • Shock absorber - rear • Shroud, condenser fan • Shroud, radiator fan • Sile
 • Solenoid, liftgate latch • Solenoid, oxygen feedback • Solenoid, purge control • Solenoid, starter • Solenoid, torque converter lockup • Solenoid, transmission • Solenoid/switch, fuel cut off • Solenoids,
 arter (EVS) interrupt • Steering column assembly • Steering column shaft lower bearing • Steering column shaft upper bearing • Steering damper • Steering gear assembly • Steering gear center drag link
 issembly, seat cushion pivot • Support, caliper • Support, extension housing rear • Support, rear brake • Support, torque tube • Support/insulator, extension housing • Surround view cameras • Suspensio
 Switch, courtesy lamp • Switch, disarm - door lock • Switch, disarm - underhood • Switch, door ajar • Switch, door lamp • Switch, door lock/power window • Switch, drier outlet • Switch, dual pressure
 witch, illuminated entry door handle • Switch, instrument panel dimmer • Switch, liftgate sec. Alarm • Switch, low pressure cut off • Switch, luggage compartment • Switch, lumbar control • Switch, mem
 , road lamp • Switch, shift indicator light • Switch, SOS • Switch, speed control vacuum • Switch, steering wheel radio control • Switch, stop lamp • Switch, sunroof • Switch, terrain selection • Switch,
 re gauge • Tension strut bar bushing • Tension strut bracket • Tensioner and/or guide, balance shaft • Tensioner, serpentine dry belt • Tensioner, timing belt/chain • Terminal block, alternator • Thermistor,
 racker • Track, glass lift • Track, sunroof • Track, sunroof side • Trans cooler, flush • Transaxle • Transaxle case • Transaxle electronic controller • Transaxle oil cooler lines • Transaxle solenoid assembly g
 Tube, oil level indicator • Tube, pump return • Tube, rear union • Tube, spark plug • Tube, steering column gearshift • Tube, sunroof drain • Tube, tee to axle • Tube, tee to right hose • Tube, to left brake hose
 B charging ports • Vacuum check valve • Vacuum harness • Vacuum pump bypass hose • Vacuum/connector nipple • Valve assembly, sensor • Valve body • Valve body, speed control • Valve check/Schrai
 ssure control • Valve, pressure limit • Valve, proportioning • Valve, pump flow control • Valve, purge control • Valve, rear heater • Valve, water • Valve/grommet rollover • Valves, solenoid • Vapor canister •
 g harness, anti-lock brakes • Wiring harness, blind spot • Wiring harness, body and rear end • Wiring harness, cargo lamp • Wiring harness, clearance lamp • Wiring harness, console • Wiring harness, dor
 ir replace • Wiring harness, liftgate wiper motor • Wiring harness, manual transmission • Wiring harness, overhead console • Wiring harness, power vent window/sunroof • Wiring harness, readin

re • Actuator, load-sensing proportioning valve • Actuator, vacuum • Actuator, wastegate • Actuator/motors, vacuum • Actuator/solenoid/motor, electric door • Adapter, disc brake • Adapter, pinion • Adap
 gauge • Alternator/generator pulley • Amplifier steering wheel radio control • Antenna electric motor and mast assembly • Anti-rattle springs • Automatic day/night mirror • Automatic transaxle assembly •
 ossmember bushings • Cylinder and key, fuel filler door • Cylinder head • Cylinder head cover • Cylinder head cover gasket • Cylinder head gasket • Cylinder head valves • Cylinder liner piston kit • Damp
 eshaft to rear axle flange • Driveshaft universal joints • Driveshaft/halfshaft • Dual rear doors check arm assembly • Duct, lap outlet • Dynamic damper • Electric fuel pump • Electric sunroof motor asser
 gasket • Exhaust manifold • Exhaust manifold to engine block gasket • Exhaust, turbine housing • Extension housing bushing • Extension housing gasket • Extension shaft companion flange • External trans
 ing • Front suspension lower lateral arm • Front suspension strut bearing/mount • Front suspension strut mount assembly • Front wheel bearing and hub assembly • Front windshield washer hoses • Fron
 nnel • Glove box door/storage box catch • Glove box hinge • Handle assembly, hood release • Handle, gas release • Handle, parking brake lever • Headlamp leveling assembly • Headlamp on/key ignition buzz
 • Intake manifold electric heater • Intermediate bearing bracket • Intermediate shaft support bearing • Kickdown band • Kickdown servo • Knob, pedal assembly actuator • Ladder bar • Ladder beam bushi
 veling module • Load-sensing proportioning valve bracket • Lock cylinder to latch linkage • Lock cylinder, deck lid and glove box • Locking pin, third seat • Louver, air outlet • Louver, rear heater • Lower b
 ed seat belt module • Motorized seat drive and rail assembly • Multifunction switch • Nozzle defroster duct • Oil cooler cover • Oil filler cap • Oil filter base • Oil lines, turbocharger • Oil pump cover • Oil seal
 ck • O-Ring expansion valve to evaporator rear unit • O-Ring line, suction, to rear unit • O-Ring or gasket refrigerant fittings • O-Ring or gasket, inlet, evaporator • O-Ring or gasket, outlet evaporator • O-Rin
 side air vent door • Outside handle to latch linkage • Over running clutch • Overdrive band • Overdrive clutches and seals • Overdrive direct clutch drum • Overdrive module • Overdrive unit/extension • Ove
 ore hole • Plug, cylinder head oil gallery • Power brake booster • Power brake booster unit • Power brake vacuum hose • Power distribution center • Power door lock control module • Power liftgate hand
 tor assembly, anti-lock brakes • Quarter glass latch bracket • Quarter window cable • Race, inner overrunning clutch • Race, outer overrunning clutch • Radiator • Radiator drain cock • Radiator filler cap
 drive line module carrier cover • Rear heater blower motor • Rear heater control assembly • Rear heater core • Rear heater hoses • Rear hub and bearing • Rear interline/torsion bar • Rear lower control
 s • Rear wheel bearings • Rear window latch • Rear window washer hose • Rear window wiper motor • Rear wiper arm • Rear wiper pivot • Rear wiper/washer control module • Receiver module, keyle
 r motor • Relay, electric window • Relay, ETACS horn • Relay, ETACS passing • Relay, fuel heater • Relay, fuel shut off solenoid • Relay, headlamp display • Relay, headlamp time delay • Relay, heated back g
 defogger • Relay, starter • Relay, starter inhibitor • Relay, stop lamp • Relay, sunroof • Relay, top motor • Relay, trailer tow • Relay, transmission control system • Relay, transmission cooler fan • Relay, tur
 • Reverse servo • Rheostat switch, instrument panel lamp • Ring gear and pinion set • Ring gear w/drive plate assembly • Ring, reverse lockout • Rings, piston • Riser, rear seat • Rod, accelerator • Rod, a
 sending unit • Seal, half shaft inner • Seal, half shaft outer • Seal, heater housing • Seal, high press cut-off • Seal, hub dust • Seal, input shaft cover • Seal, intermediate axle shaft • Seal, long stub shaft •
 ng lower • Seatbelt module • Second seat back latch • Sector shift, steering gear • Security alarm module • Sending unit coolant level • Sending unit, fuel tank • Sending unit, oil pressure • Sending unit, oil
 height • Sensor, height (air suspension) • Sensor, humidity • Sensor, in-car temperature • Sensor, lamp outage • Sensor, lateral acceleration and YAW rate • Sensor, liftgate pinch • Sensor, low vacuum • Se
 n • Sensor, wheel speed - anti-lock brakes • Sensor/switch, coolant temperature • Sensor/switch, throttle position • Serpentine belt • Servo motor, speed control • Servo-motor, electronic • Shackle, fron
 ncer aspirator • Siren (EVS) • Slide, deck lid torsion bar • Slide, front door regulator lift • Slide, glass edge • Slide, rear door regulator lift • Slider, sliding door • Sliding door arm • Sliding door bracket and r
 intake manifold electric heater • Spare tire hanger/carrier • Speakers • Speed control unit • Spindle, stub axle • Spring steering column lock lever • Spring, brake shoe return • Spring, column tilt • Spring
 • Steering gear column shaft coupling • Steering gear pitman arm • Steering knuckle • Steering knuckle arm • Steering wheel • Strainer, oil • Strap, fuel tank support • Strap, ground • Stricker, door/liftgat
 n ride height sensors • Switch assembly, deck lid power pull down • Switch assembly, door locking • Switch, A/C condenser fan control • Switch, adjustable pedals • Switch, air conditioning on/off control
 • Switch, electric deck lid release • Switch, electric recliner • Switch, electric seat adjuster • Switch, electric window single • Switch, engine oil leak (dipstick) • Switch, engine temperature light • Switch
 dry seat/mirror • Switch, memory selector • Switch, message center vacuum • Switch, neutral starter w/backup lamp • Switch, oil level indicator • Switch, oil pressure • Switch, overdrive cancel • Switc
 trailer brake control (factory or dealer installed Mopar) • Switch, transaxle oil pressure • Switch, transmission comfort selector • Switch, transmission temperature • Switch, turn signal cancel • Switc
 intake air heater • Thermostat • Thermostat housing gasket • Third seat back catch • Third seat bellcrank • Throttle body • Throttle body gasket • Tie rod end • Tilt column assembly • Timer, glow plug • Ti
 gasket • Transducer, pressure • Transfer case • Transfer case to adapter gasket • Transfer chain/sprocket • Transfer gear cover • Transfer gear set • Transistor, power • Transmission • Transmission case
 • Tube, to rear wheel • Tube, transfer • Tube/adapter, oil filler • Tube/fitting, brake • Tubes, transaxle oil cooler • Turbo boost gauge • Turbo coolant line/pipe • Turbocharger actuator • Turbocharger assem
 der • Valve guides • Valve lifters • Valve pinion w/Teflon seal rings • Valve push rods • Valve rocker arm • Valve spring • Valve, air bypass • Valve, air idle bypass • Valve, air switching/relief • Valve, anti-lock
 Vapor canister hose • Vapor containment door vacuum diaphragm • Vent, front axle • Vent, rear axle • Viscous coupler • Viscous coupling • Volt/oil pressure gauge • Warning lamp module • Wastegate vac
 me lamp • Wiring harness, door • Wiring harness, door lock (EVS) • Wiring harness, electric snowplow • Wiring harness, electric antenna control • Wiring harness, electric door lock • Wiring harness, elect
 g lamp • Wiring harness, rear lamp • Wiring harness, rear window defroster • Wiring harness, reverse lamps • Wiring harness, speaker • Wiring harness, speed control • Wiring harness, tail lamp



tor, generator/air conditioning • Adjuster, bent nail - parking brake • Adjuster, front seat manual • Air bag control module • Air cleaner heater • Air cleaner, crankcase vent • Air condition outlet duct • Axle housing bracket • Axle shaft flange gasket • Bell housing • Blower motor • Blower motor resistor • Brake tube fittings • C/V joint, driveshaft • Cable reclining seat mechanism release • Camera, er, crankshaft vibration damper • Daytime running lights module • Deck lid power pull down striker motor • Deck lid power pulldown stick bracket • Deck/liftgate hinges • Deck/trunk release cable • nibly • Electronic instrument cluster • Electronic speed control module • Electronic suspension control unit • Emission control hose assembly • Engine controller • Engine controller module • Engine axle auxiliary cooler • Floor mounted seat hinges • Flywheel with ring gear assembly • Four-wheel drive control unit • Front axle assembly • Front axle driveshaft flange • Front axle housing cover • nt windshield wiper motor • Fuel filler door latch • Fuel gauge • Fuel gauge warning light module • Fuel injectors • Fuel lines and hoses • Fuel pressure damper • Fuel pump gasket • Fuel tank filler cap er/chime • Headlamp rotating motors • Heated rear window/lift gate defroster • Heated seat control module • Heater center duct • Heater core • Heater/defroster doors • Heater/evaporator housing • ng • Lamp out module • Lamp w/switch map, overhead instrument • Lamp, glove box • Lamp, illuminated entry • Latch assembly, convertible top • Latch assembly, deck lid pull down • Latch assembly, all joint/ball socket • Lower control arm • Lower control arm bushing • Lower control arm strut bushing • Lower control arm support bushing • Maintenance reminder • Manual outside door mirror • , axle shaft • Oil seal, axle shaft inner • Oil seal, camshaft • Oil seal, crankshaft rear bearing comp • Oil seal, crankshaft rear bearing lower • Oil seal, differential driveshaft • Oil seal, drive pinion • Oil g rear unit tee to liquid line • O-Ring switch, clutch cycling • O-Ring, low and reverse lever pin • O-Ring, oil pump cover • O-Ring, rear unit tee to suction • O-Ring, steering gear housing head • O-Ring, erhead console switches • Overhead display • Overrunning clutch assembly • Overrunning clutch case bearing • Pad, brake pedal • Parking brake cable • Parking gear annulus • Parking lock sprag • s-free assembly • Power pulldown latch bracket assembly • Power rear sliding window cable • Power rear sliding window track • Power recliner mechanism • Power seat adjuster motors • Power • Radiator lower hose • Radiator upper hose • Radio • Radio amplifier • Rail assembly, motorized seat belts • Rail, assembly convertible top • Rail, seat belt • Rail/track, sliding door • Ram air duct • arm • Rear output shaft bearing • Rear seat back latch • Rear seat back release link • Rear speaker amplifier • Rear spring bushing • Rear spring hanger • Rear spring isolators • Rear spring jounce ss entry • Recirculation door • Reclining seat back release control • Recovery bottle cap • Recovery bottle hose • Regulator, front window • Regulator, fuel pressure • Regulator, quarter window • glass • Relay, high/low wiper • Relay, horn • Relay, illuminated entry • Relay, in-tank fuel pump • Relay, intermittent wiper • Relay, keyless entry • Relay, lamp and buzzer seat belt time • Relay, liftgate n signal/cornering lamp • Release, fuel filler door • Remote heated outside mirror • Remote start antenna • Reservoir, hydraulic control unit • Reservoir, master cylinder • Reservoir, power steering xle lateral • Rod, connecting • Rod, gearshift control • Rod, load-sensing proportioning valve • Rod, sliding door • Rod, transfer case shift • Rods, throttle body/transmission control • Roller (plastic) Seal, low press cut-off switch • Seal, oil filler tube • Seal, oil pump • Seal, output shaft • Seal, pinion input • Seal, rear cover • Seal, rear driveline module output shaft • Seal, rear output shaft • Seal, switch, engine temperature • Sending unit/Switch, transmission temperature • Sensor assembly, in vehicle/ATC • Sensor block, anti-lock brakes • Sensor charge temperature • Sensor, acceleration nsor, M.A.P. • Sensor, M.A.T. • Sensor, methanol • Sensor, oil level • Sensor, oxygen • Sensor, pedal travel • Sensor, pressure (anti-lock brakes) • Sensor, rain • Sensor, seat position • Sensor, shock nt spring • Shackle, rear spring • Shaft assembly, axle • Shaft w/gear, oil pump drive • Shaft w/lever, accelerator pedal pivot • Shaft, inner axle • Shaft, intermediate • Shaft, intermediate axle • Shaft, oller • Sliding door check • Sliding door guides • Sliding door latch remote control assembly • Sliding door or rear door contracts • Snap rings, turbine • Socket, instrument panel lamp • Solenoid, air g, front coil • Spring, gearshift lever • Spring, hood hinge • Spring, load-sensing proportioning valve • Spring, oil pressure relief valve • Spring, overdrive direct clutch • Spring, rear air bag • Spring, e latch • Striker assembly, deck lid power pulldown • Striker, hood latch • Striker, sliding door to inner catch • Strut assembly, front • Strut assembly, rear • Strut, lower arm control • Strut/damper, • Switch, air temp • Switch, ambient sensor • Switch, back-up lamp • Switch, blower motor • Switch, brake fluid level • Switch, button assembly, EVIC • Switch, cargo lamp • Switch, clutch cycling , enthusiast seat adjuster • Switch, exhaust mode actuator • Switch, four-wheel drive control • Switch, four-wheel drive engagement • Switch, hazard warning • Switch, headlamp and instrument n, overhead console light • Switch, parking brake warning lamp • Switch, pod • Switch, pod - left • Switch, pod - right • Switch, power mirror control • Switch, power vent window • Switch, PRNDL n, under storage illumination • Switch, vacuum engagement • Switch, windshield wiper/washer • Switch/senor, windshield washer fluid • Switch/valve, coolant vacuum • Synchronizer assembly • ming belt cover gasket • Timing belt tensioner • Timing belt/chain • Timing chain • Timing chain guides • Timing chain or belt case/cover • Timing pin assembly • Tone wheel (anti-lock brakes) • Torque g • Transmission control module • Transmission planetary pinion assembly • Transmission valve body • Transmission weight damper • Transmitter (EVS) • Trip computer • Tube assembly, fuel • Tube bly • Turbocharger surge valve • Turn signal or hazard warning module • Two-piece intake gasket • Two-piece intake manifold • U bolt, front spring • U bolt, rear spring • Underhood lamp with switch brake solenoid • Valve, aspirator • Valve, canister check • Valve, compressor service • Valve, cooling system bleed • Valve, crankcase closed vent • Valve, expansion • Valve, fuel check • Valve, gear uum hose • Water box, thermostat • Water inlet elbow • Water pump housing gasket • Water pump pulley • Water pump to intake hose • Wheel, blower motor • Window regulator flex track • Window tric mirror • Wiring harness, electric seat • Wiring harness, electric window lift • Wiring harness, engine and front end • Wiring harness, engine compartment • Wiring harness, front lighting • Wiring o • Wiring harness, trailer tow • Wiring harness, transmission • Wiring harnesses • Yoke, output shaft • Yoke, propeller shaft sliding • Yoke, transfer case front • Yoke, universal joint center

PLAN WAIVER FORM

I acknowledge that I have been presented the option of purchasing a plan for my vehicle.

By waiving this plan, I further understand that I am waiving the benefits of Towing/Roadside Assistance, Rental Allowance, Trip Interruption and Key Fob coverage that would accompany the plan and that the costs associated with any repairs not covered during, or after, the term of the manufacturer's warranty will be my responsibility.

OWNER'S SIGNATURE

DEALER REPRESENTATIVE

DEALER'S FILE COPY

DATE



PLAN SERVICE/TOLL- FREE NUMBERS

Plan service will be provided by the dealer who sold you the plan. In the event that you cannot return to the selling dealer for service, you may request plan service from any dealer within the United States, Canada, Guam, Puerto Rico or Mexico. If you are unable to obtain plan service from an authorized dealer, call our toll-free number to receive service instructions.

Toll-free telephone assistance is available
1-800-521-9922 IN UNITED STATES
8:00 a.m. to 8:00 p.m. (EST) Monday through Friday
9:00 a.m. to 5:00 p.m. (EST) Saturday



81-770-2070FC 2656 1025 ©2025 FCA US LLC. All Rights Reserved.
Chrysler, Dodge, Jeep, Ram and Mopar are registered trademarks of FCA US LLC.

Note: This brochure is for your general information regarding this plan. Services and component repairs made prior to the purchase of this contract are not covered. Complete details are provided in the plan provisions of the contract available from your dealer. All transactions relating to this service contract are governed solely by the provisions of the purchased contract.

Plans are offered and issued by FCA US LLC.

FCA Service Contracts LLC is an affiliate of FCA US LLC and, in some instances, may be the obligor and/or administrator of your plan.

Extended Vehicle Protection LLC is registered to conduct business in all 50 US states and Puerto Rico and, in some instances, may be the obligor and/or administrator of your plan.



FL. Lic. #65505 and #58869
CA. Lic. #0G94472