



# 2004 Scheduled Maintenance Intervals

Miles (in thousands)	5/25/45/65/85/105	15/55/95	35/75
Kilometers (in thousands)	8/40/70/100/130/160	25/85/145	55/115
<b>Engine Oil</b> – change oil and replace filter	●	●	●
<b>Wiper/Washer/Headlight Washer</b> – check adjustment and function, add fluid if necessary	●	●	●
<b>Tires and Spare</b> – check for wear and damage, check pressure – check for wear and damage, check pressure and renewal date of tire set (where applicable)	●	●	●
<b>Tires</b> – rotate	● SK only		
<b>Service Reminder Display</b> – reset	●	●	●
<b>Brake System</b> – check for damage, leaks, pad thickness, fluid level – check thickness of pads and brake fluid level	●	●	●
<b>Cooling System</b> – check level, add if necessary		●	●
<b>Exhaust System</b> – check for damage, leaks		●	●
<b>Engine On-Board Diagnostics</b> – check fault memory		●	●
<b>Engine Compartment</b> – check for leaks		●	●
<b>Battery</b> – check electrolyte level and add if necessary		●	●
<b>Dust and Pollen Filter</b> – replace		●	●
<b>Automatic Transmission and Final Drive</b> – check for leaks		●	●
<b>Manual Transmission and Final Drive</b> – check for leaks		●	●
<b>DSG (direct shift gearbox)</b> – change oil and replace filter element			● TT 3.2L only
<b>Haldex Clutch</b> – change oil – change oil and filter		● TT only	● TT only
<b>Sunroof</b> – clean guide rails and lubricate rails with grease spray		●	●
<b>Front Sunroof Drains (where applicable)</b> – open sunroof to check front water drain and clean if necessary (U.S. only)			●
<b>Plenum Panel</b> – remove cover to plenum panel to check water drains and clean if necessary (U.S. only)			● A4, A4 Avant, A4 Cabriolet, S4, S4 Avant, S4 Cabriolet, A6 and A8
<b>Front Axle</b> – check dust seals on ball joints and tie rod ends		●	●
<b>Lights</b> – check all lights, check headlight adjustment		●	●
<b>Drive Shaft Boots</b> – check		●	●
<b>Doors</b> – lubricate doors, check straps		●	●
<b>Spark Plugs</b> – replace at 35,000 miles or 3 years, whichever occurs first. Then, every 40,000 miles or 3 years, whichever occurs first. – replace at 55,000 miles or 6 years, whichever occurs first. Then, every 60,000 miles or 6 years, whichever occurs first. – replace at 75,000 miles		● 55K only: Allroad 4.2, S4 and A8	● 35K only: except Allroad 4.2, S4 and A8  ● 75K only: except Allroad 4.2, S4 and A8
<b>Continuously Variable Transmission (multitronic)</b> – change ATF			●
<b>Power Steering Fluid</b> – check, add if necessary			●
<b>Air Cleaner</b> – clean housing, replace filter element		● 55K only: A4 and A8	● Except A4 and A8
<b>Ribbed V Belt</b> – check condition – replace			● 75K only: 3.2L VR6 and 3.0L V6 ● 75K only: except 3.2L VR6 and 3.0L V6
<b>Snow Screen for Air Cleaner</b> – clean		● A4 only	● A4 only
<b>Road Test</b> – check braking, kick-down, steering, electrical, heating and ventilation systems, air conditioning, shift lock operation and power accessories		●	●
<b>Rear Lid Hinges</b> – lubricate		● A8 only	● A8 only
<b>Timing Belt</b> – replace			● 75K only: 1.8T, 3.0L and 4.2L V8 except Allroad V8 and S4
<b>Timing Belt and Timing Belt Tensioning System</b> – replace			● 75K only: 2.7L turbo
<b>Brake Fluid</b> – replace every 2 years regardless of mileage.			
<b>Cloth Top</b> – check function and rollover protection every 2 years regardless of mileage (Audi A4 Cabriolet only).			

Audi of America, Inc. believes the information and specifications to be correct at the time of printing. Specifications, maintenance intervals, standard features and options subject to change without notice.