

# 2019 - 2023 MAZDA3

# YOUR ON-BOARD VEHICLE STATUS MONITOR


The vehicle status monitor feature, included in your Mazda, alerts you when it is time to change your engine oil by turning on the wrench indicator light, displaying a message in the instrument panel, or both. An engine oil change must be done when the display/wrench indication comes on.

## MAKE THE MOST OF MAZDA CONNECTED SERVICES WITH THE MYMAZDA APP

The road less traveled is no place to lose touch. Mazda Connected Services\* enables you to access your vehicle's health status report and more, all through the MyMazda App on your mobile device – complimentary for the first two years of ownership.

\*Connected vehicle service is available for a 2-year trial period from your vehicle's in-service date; a paid subscription is required upon expiry of the trial period. Requires MyMazda App (on a compatible smartphone), a working vehicle electrical system (including battery), wireless coverage and GPS satellite signal. Services, connectivity and capabilities vary by conditions as well as geographical and technical restrictions. See mazda.ca for details.



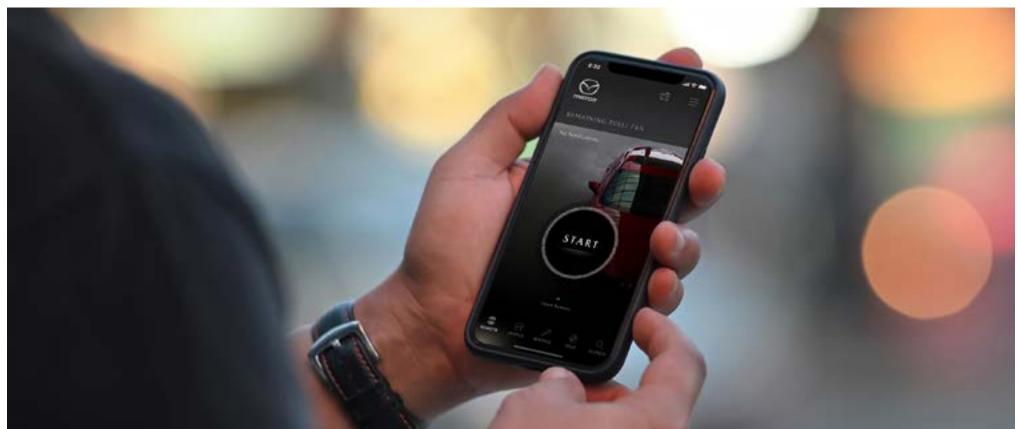



# WHAT YOU SHOULD KNOW ABOUT YOUR NEW MAZDA

# FACTORY-RECOMMENDED MAINTENANCE SCHEDULE\*

Your new Mazda is engineered with innovative technology from the chassis to the transmission to the engine and beyond. Every single aspect of this car is designed to be responsive and efficient.

To help you protect that high-level of performance, we have developed this maintenance schedule to keep your Mazda's key components working seamlessly, no matter the conditions.

When you visit your Mazda retailer for scheduled service, you can have peace of mind knowing that our trained Master technicians have maintained every detail to **optimize the fuel efficiency and performance of your Mazda.** 

<sup>\*</sup>Applies to model year 2019 - 2023 Mazda3 vehicles. Please consult your Mazda retailer or owner's manual for more details on scheduled maintenance for your vehicle. Vehicle may not be exactly as shown









### FACTORY-RECOMMENDED MAINTENANCE IS ESSENTIAL

**Under-hood inspection of:** 

• Oil and fluid leaks

• Battery condition

Hoses for heating, AC and coolant

• Engine air filter and cabin air filter

### **SERVICE VISIT 1:**

Maintenance Event 1

## Occurs every 8,000 KM or 6 Months"

Your Mazda will receive a full inspection every 8,000 KM or 6 months. This essential maintenance is a review of your engine oil maintenance monitor<sup>†</sup>, and a Comprehensive Vehicle Health Check which includes the following:

## Body, suspension and drive component inspection of:

- Shocks/struts and suspension
- Steering and wheel
- Exhaust system
- Wiper blade wear and spray nozzles
- Operational inspection of electrical components (horn, signals, lights)
- Transmission operation (including clutch if applicable)

### Wear-and-tear inspection of:

- Tire pressure and tire wear
- Tire rotation
- Brake wear and condition

### Fluid inspection of:

- Engine coolant level
- Engine oil level/conditionWindshield washer fluid level
- Brake fluid level/condition

### SERVICE VISIT 2:

Maintenance Event 2

### Occurs every 16,000 KM or 12 Months

Includes: **Maintenance Event 1**, plus an oil and filter change with Mazda Synthetic Engine Oil and Skyactiv Genuine Oil Filter.<sup>†</sup>

### **SERVICE VISIT 7:**

Maintenance Event 1

Includes: Maintenance Event 1.

Occurs every 56,000 KM or 42 Months"

## **SERVICE VISIT 8:** Maintenance Event 2

Occurs every 64,000 KM or 48 Months

Includes: Maintenance Event 1, plus an oil and filter change with Mazda Synthetic Engine Oil and Skyactiv Genuine Oil Filter.†

### **SERVICE VISIT 3:**

Maintenance Event 3

### Occurs every 24,000 KM or 18 Months"

Includes: **Maintenance Event 1**, plus front and rear brake maintenance (disassemble, inspect, clean and lubricate brake components).

### **SERVICE VISIT 6:**

Maintenance Event 4

### Occurs every 48,000 KM or 36 Months"

Includes: **Maintenance Event 2**, plus front and rear brake maintenance (disassemble, inspect, clean and lubricate components).

### **SERVICE VISIT 9:**

Maintenance Event 3

### Occurs every 72,000 KM or 54 Months"

Includes: **Maintenance Event 1**, plus front and rear brake maintenance (disassemble, inspect, clean and lubricate brake components).

### **SERVICE VISIT 4:**

Maintenance Event 2

### Occurs every 32,000 KM or 24 Months"

Includes: **Maintenance Event 1**, plus an oil and filter change with Mazda Synthetic Engine Oil and Skyactiv Genuine Oil Filter.<sup>†</sup>

### **SERVICE VISIT 5:**

Maintenance Event 1

Occurs every 40,000 KM or 30 Months"

Includes: Maintenance Event 1.

### **SERVICE VISIT 10:**

Maintenance Event 2

### Occurs every 80,000 KM or 60 Months"

Includes: Maintenance Event 1, plus an oil and filter change with Mazda Synthetic Engine Oil and Skyactiv Genuine Oil Filter.<sup>†</sup>

### **ADDITIONAL SERVICES:**



Inspect and tighten nuts and bolts<sup>††</sup> every 32,000 KM or 24 Months<sup>\*\*</sup>



Replace cabin air filter every 32,000 KM or 24 Months



Inspect drive belts every 48,000 KM or 36 Months



Replace engine air filter every 56,000 KM or 36 Months



Inspect exhaust system, heat shields, emission hoses and tubes every 64,000 KM or 48 Months"



Replace spark plugs every 120,000 KM, or 64,000 KM if equipped with a Skyactiv-G 2.5I turbo engine



Replace engine coolant for the first time at 192,000 KM or 120 Months"

<sup>\*</sup>Applies to model year 2019 - 2023 Mazda3 vehicles. Please consult your Mazda retailer or owner's manual for more details on scheduled maintenance for your vehicle. Wehicle may not be exactly as shown. \*\*Whichever comes first. †Oil change requirement based on maintenance monitor and depending on driving conditions. Maximum interval for oil change is every 16,000 KM or 12 months, whichever comes first. It is recommended to replace engine oil & filter every 8,000 KM or 6 months (whichever comes first) if you drive your vehicle primarily in extended periods under the following conditions: a) idling or low speed operation b) cold or extremely high temperatures c) short distances only d) dusty or mountainous regions. Consult your owner's manual or ask your Mazda retailer. ††On body and chassis, if necessary.

