

Maintenance Service Operations

| Service operation | miles x 1000 km x 1000 | Schedule of services | | | | | | | | | | | | | | | |
|--|---------------------------|----------------------|----------|----------|----------|----------|----------|-----------|-----------|-----------|------------|------------|------------|------------|------------|------------|--|
| | | 10 16 | 20 32 | 30 48 | 40 64 | 50 80 | 60 96 | 70 112 | 80 128 | 90 144 | 100 160 | 110 176 | 120 192 | 130 208 | 140 224 | 150 240 | |
| Engine | | | | | | | | | | | | | | | | | |
| Engine oil and filter, replace | | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | |
| Engine/Transmission/ Timing gear check for leaks ¹ | | | X | X | X | X | X | X | X | X | X | X | X | X | X | X | |
| Service Reminder Indicator (SRI), reset | | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | |
| Fuel lines and fuel filter, check for leakage and damage | | | | X | | | | X | | | | X | | | | | |
| Fuel filter, replace ² | | | | | | | | | | | | X | | | | | |
| Exhaust system/check for leakage, mounting | | | | | | X | X | X | X | X | X | X | X | X | X | X | |
| Engine Air cleaner (ACL), clean the air cleaner housing/replace filter (engine codes 61/67/94/95) ³ | | | | X | | | | X | | | | X | | | | | |
| Engine Air cleaner (ACL), clean the air cleaner housing/replace filter (engine code 90) ³ | | | | X | | X | | | X | | | X | | | X | | |
| Spark plugs/ replace | | | | | | | X | | | | | | | | X | | |
| Coolant level, check/adjust | | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | |
| Engine coolant check & adjust antifreeze rating & anti-corrosion agent | | | X | | X | | X | | X | | X | | X | | X | | |
| Alternator rubber sleeve, replace (engine code 90 for S60/XC60/XC70/S80. Engine code 94 for XC60/XC70/S80. Engine code 95 for XC60/XC70/S80/XC90) ⁴ | | | | | | | | | | | | | | | | X | |
| Accessory drive belt, belt tensioner, idler pulley & locating pin coupling between servo pump & coolant pump, replace (engine code 95 - XC90). ⁵ | | | | | | | | | | | | | | | | X | |
| Accessory drive belt, belt tensioner & idler pulley, replace (engine codes 90/94/95 for S60/XC60/XC70/S80). ⁵ | | | | | | | | | | | | | | | | X | |
| Accessory drive belt and tensioner, replace (engine codes 61 for S60 and engine code 67 for C30/C70) ⁶ | | | | | | | | | | | | | X | | | | |
| Timing belt, belt tensioner and idler pulley, replace (engine code 61 for S60 and engine code 67 for C30/C70) ⁶ | | | | | | | | | | | | | X | | | | |

¹In the event of a leak from the transmission, check the oil level.

²XC90 engine VIN code 95 only.

³May be necessary to change more frequently when driving in dusty/dirty areas.

⁴Replace at 150,000 miles/240,000 kilometers or 15 years, whichever occurs first.

⁵Replace at 150,000 miles/240,000 kilometers or 10 years, whichever occurs first.

⁶Replace at 120,000 miles/192,000 kilometers or 10 years, whichever comes first.

Maintenance Service Operations

| Service operation | Schedule of service | | | | | | | | | | | | | | | |
|--|---------------------------|----------|----------|----------|----------|----------|----------|-----------|-----------|-----------|------------|------------|------------|------------|------------|------------|
| | miles x 1000 km x 1000 | 10 16 | 20 32 | 30 48 | 40 64 | 50 80 | 60 96 | 70 112 | 80 128 | 90 144 | 100 160 | 110 176 | 120 192 | 130 208 | 140 224 | 150 240 |
| Steering, Front and Rear Suspension | | | | | | | | | | | | | | | | |
| Power steering fluid level, check/adjust ¹ | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X |
| Steering/front suspension, check for wear according to: Wheel angles check | | | | | | X | X | X | X | X | X | X | X | X | X | X |
| Rear suspension, check for wear according to: Wheel angles check | | | | | | X | X | X | X | X | X | X | X | X | X | X |
| Transmission, Driveshaft and Differential | | | | | | | | | | | | | | | | |
| Automatic transmission fluid level, check/adjust ² | | | | | X | | | | | X | | | | | | X |
| Final drive/bevel gear, visual inspection (AWD models only) ³ | | X | | X | | X | | X | | X | | X | | X | | |
| Driveshaft joints, check for wear/play | | | | | | X | | X | | X | | X | | X | | |
| Driveshafts, check rubber boots | | | | | | X | X | X | X | X | X | X | X | X | X | X |
| Propeller shaft, pilot bearing and universal joints, check wear (AWD models only) | | | | | | X | X | X | X | X | X | X | X | X | X | X |
| Clutch fluid check & adjust (manual transmission only) | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X |
| Controls and Lighting | | | | | | | | | | | | | | | | |
| Washer fluid level, check/adjust | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X |
| Check all wiper blades and washers for headlights and windshields for function and signs of wear | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X |

¹No power steering fluid check on C30 and C70 models.

²Check automatic transmission fluid level only if an external leak is identified. **Volvo recommends changing transmission fluid every 50,000 miles/80,000 kilometers, only on vehicles used for towing, or when a message appears in the instrument panel text window.**

³Only check the level if there is leakage.



02 Service and maintenance

Maintenance Service Operations

| Service operation | Schedule of service | | | | | | | | | | | | | | | |
|---|---------------------------|----------|----------|----------|----------|----------|----------|-----------|-----------|-----------|------------|------------|------------|------------|------------|------------|
| | miles x 1000 km x 1000 | 10 16 | 20 32 | 30 48 | 40 64 | 50 80 | 60 96 | 70 112 | 80 128 | 90 144 | 100 160 | 110 176 | 120 192 | 130 208 | 140 224 | 150 240 |
| Body | | | | | | | | | | | | | | | | |
| Cabin air filter, replace ¹ | | X | | X | | X | | X | | X | | X | | X | | X |
| Inspect convertible hardtop (C70 only) | | X | | X | | X | | X | | X | | X | | X | | X |
| Clean inside of windshield in front of camera (vehicles with camera for collision warning) | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X |
| Brake System | | | | | | | | | | | | | | | | |
| Brake fluid level, check & adjust | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X |
| Brake fluid, replace ² | | | | X | | | | X | | | | X | | | | X |
| Parking brake, check/adjust | | X | | X | | X | | X | | X | | X | | X | | X |
| Brake pads/discs, check | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X |
| Brake hoses and lines, check for damage/leaks | | | | X | | | | X | | | | X | | | | |
| Wheels and Tires | | | | | | | | | | | | | | | | |
| Wheels and tires, check pressure, wear and condition | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X | X |
| Tire inflator kit ³ | | | | | | | | | | | | | | | | |
| Spare tire check for damage, wear, and tire pressure ⁴ | | | | X | | | | X | | | | X | | | | |
| Check and replace parts or software, as required by Volvo Cars of North America, LLC, that are covered under the terms of the Volvo New Car Warranty. | | | | | | | | | | | | | | | | |

¹Recommended to replace at least once a year or more often in heavy traffic or dirty/dusty areas.

²Recommended to replace every 3 years or 40,000 miles (if driven in mountainous areas or humid climates - every one year) at owner's request.

³Check expiration date label every four years for replacement date on vehicles with this equipment.

⁴Check spare tire pressure every two years or every 40,000 miles/64,000 kilometers.