

Mazda MX-5

2017 MAZDA SCHEDULED MAINTENANCE MENU

EVERY 8,000 KM OR 6 MONTHS

- Replace engine oil and filter
- Inspect brake and clutch fluid, washer fluid, and coolant level
- Inspect air filter
- Inspect function of all lights
- Inspect all tires inflation and wear*3
- Lubricate all locks and hinges
- Rotate tires*3

EVERY 24,000 KM OR 12 MONTHS

Includes 8,000 KM inspection, plus:

Inspect and clean brake discs and pads, front and rear

EVERY 32,000 KM OR 24 MONTHS

Includes 8,000 KM inspection, plus:

- Inspect fuel lines and hoses*2
- Inspect brake lines, hoses and connections
- Inspect steering operation and linkage
- Inspect front and rear suspension components, ball joints and wheel bearing axial play
- Inspect driveshaft dust boots
- Tighten bolts and nuts on chassis and body

EVERY 48,000 KM OR 24 MONTHS

Includes 24,000 KM inspection, plus:

- · Replace Manual transmission oil
- Inspect drive belts

EVERY 56,000 KM

Includes 8,000 KM inspection, plus:

· Replace air filter

EVERY 64,000 KM OR 48 MONTHS

Includes 32,000 KM inspection, plus:

Inspect emission hoses and tubes*2

EVERY 72,000 KM OR 60 MONTHS

Includes 24,000 KM inspection, plus:

Inspect exhaust system and heat shields

EVERY 120,000 KM

Includes 40,000 KM inspection, plus:

· Replace spark plugs

EVERY 192,000 KM OR 10 YEARS

Replace coolant, after that every 96,000 KM or 5 years*1

ADDITIONAL OPERATIONS

- Inspect flat tire repair kit annually replace tire repair fluid bottle with new one before expiration date
- If rear differential has been submerged in water, the oil should be replaced

At each visit, we'll provide you with an exclusive Vehicle Inspection Report,

which shows you the overall condition of your Mazda.

CLICK HERE FOR AN ENLARGED VERSION

OSTORE PAME | RO. P | SUPPORT AND CODE

WIRE CAST FLOOR

FOR C

Scheduled services may vary by year of vehicle. Please consult your Service Advisor or Owner's Manual for the specific maintenance intervals pertaining to your vehicle.

TO LEARN MORE, CLICK ON LOGO







Your Mazda Dealer will provide you with a completed service checklist on every maintenance visit. In addition, your Mazda will be road tested after any servicing relating to brakes, steering or driving performance, to help verify safe functioning. Information listed in this document is accurate at time of publication and is subject to change without notice. Ask your Mazda Dealer for more detailed information. This inspection list/schedule is intended as a guide only and should not be relied upon to ensure vehicle safety. See your Mazda dealer for full details, maintenance and inspection.

Inspect is defined as: inspect and clean, repair, adjust, fill up, or replace if necessary.

- *1 Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.
- *2 According to state/provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended kilometer period to ensure long-term reliability.
- *3 The Tire Pressure Monitoring System (TPMS) initialization must be performed so that the system operates normally (if equipped).



VEHICLE HEALTH CHECK



CUSTOMER NAME:		R.O. #:	SERVICE ADVISOR:	
VIN (LAST 6 DIGITS): LICENCE PLATE #:		000	METER:	DATE:
⋘ GOOD - CHECKED OK	FAIR - REQUIRES FUTURE ATTENTION	▼ REPLACE - REQUIRES	IMMEDIATE ATTENTION CH	HECKED FOR OUTSTANDING RECALLS
PERIMETER INSPECTION FRONT Lights/lamps Windshield Washer system Wipers/arms Body damage Horn operation		REAR Lights/lamps Washer system Wipers/arms Body damage	NEXT MAINTENANCE SERVICE	
VISUAL INSPECTION UNDER HOOD Fluid levels (brakes, stee clutch, window washer, commanual/automatic transmi) Drive belt(s) Air filter Radiator, hoses/clampand coolant condition C Heater hoses/clamps Air conditioning hoses Battery/cables/clamps	ptant and sission)	Suspension components Shocks & Struts Exhaust system CV drive axle boots (if equipped) CHECK FOR LEAKS Engine oil Transmission	COMMENTS & RECOM	MENDATIONS:
BRAKE INSPECTION Lining/pad Rotor Caliper Lines/hose Lining/pad Rotor Caliper Lining/pad Caliper Lining/pad	BRAKE INSPECTION NO LF RF O O O O O LR RR Parking brake operation	Lining/pad Rotor Caliper Lines/hose Lining/pad Rotor Lines/hose	MEASURE FRONT / REAR LF 50%+ 20%-50% 0%-20% LR 50%+ 20%-50% 0%-20% Measurements Not Taken	BRAKE LININGS RF 50%+ 20%-50% 0%-20% RR 50%+ 20%-50% 0%-20% Obeclined Brake Inspection
Tread Wear 32nds	● WINTER TIRES ● SUMMER TIRES ● ALL SEASON TIRES Tread Wear 32 ^{nds} RF		50% or more remaining 20% - 50% remaining Less than 20% MAZDA GENUINE PARTS · SERVICE · ACCESSORIES KEEPING THE EMOTION IN MOTION	
TOE CAMBER CENTRE EDGE	PATCH CUP	ROTATION ALIGNMENT	WHITE - CUSTOMER COPY	PINK – SERVICE FILE COPY 9999-94-2119-EN