

Maintenance Schedule for Normal “Non-Commercial” Driving Conditions

7500 miles/12000 kilometers	
	Change engine oil and replace oil filter.
	Rotate tires, inspect tires for wear and measure tread depth.
	Replace differential fluid.
	Inspect ramp operation and check tracks for debris and clean as necessary.
	Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
	Lube all body hinges.
	Inspect engine air filter.
	Inspect automatic transmission fluid level.
	Inspect engine coolant level.

15000 miles/24100 kilometers	
	Perform 7500 mile/12000 kilometer service.
	Replace engine air filter.
	Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
	Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
	Inspect rear axle shaft boots.
	Inspect exhaust system and heat shields.
	Inspect engine cooling system and hoses.

22500 miles/36200 kilometers	
	Change engine oil and replace oil filter.
	Rotate tires, inspect tires for wear and measure tread depth.
	Replace differential fluid.
	Inspect ramp operation and check tracks for debris and clean as necessary.
	Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
	Lube all body hinges.
	Inspect engine air filter.
	Inspect automatic transmission fluid level.
	Inspect engine coolant level.

30000 miles/48300 kilometers	
	Perform 7500 mile/12000 kilometer service.
	Replace engine air filter.
	Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
	Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
	Inspect rear axle shaft boots.
	Inspect exhaust system and heat shields.
	Inspect engine cooling system and hoses.

37500 miles/60300 kilometers

Change engine oil and replace oil filter.
Rotate tires, inspect tires for wear and measure tread depth.
Inspect ramp operation and check tracks for debris and clean as necessary.
Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
Lube all body hinges.
Inspect engine air filter.
Inspect automatic transmission fluid level.
Inspect engine coolant level.

45000 miles/72400 kilometers

Perform 7500 mile/12000 kilometer service.
Replace engine air filter.
Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
Inspect rear axle shaft boots.
Inspect exhaust system and heat shields.
Inspect engine cooling system and hoses.

52500 miles/84500 kilometers

Change engine oil and replace oil filter.
Replace differential fluid.
Inspect ramp operation and check tracks for debris and clean as necessary.
Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
Lube all body hinges.
Inspect engine air filter.
Inspect automatic transmission fluid level.
Inspect engine coolant level.

60000 miles/96500 kilometers

Perform 7500 mile/12000 kilometer service.
Replace engine air filter.
Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
Inspect rear axle shaft boots.
Inspect exhaust system and heat shields.
Inspect engine cooling system and hoses.

67500 miles/108600 kilometers

	Change engine oil and replace oil filter.
	Rotate tires, inspect tires for wear and measure tread depth.
	Inspect ramp operation and check tracks for debris and clean as necessary.
	Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
	Lube all body hinges.
	Inspect engine air filter.
	Inspect automatic transmission fluid level.
	Inspect engine coolant level.

75000 miles/120700 kilometers

	Perform 7500 mile/12000 kilometer service.
	Replace engine air filter.
	Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
	Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
	Inspect rear axle shaft boots.
	Inspect exhaust system and heat shields.
	Inspect engine cooling system and hoses.

82500 miles/132700 kilometers

	Change engine oil and replace oil filter.
	Rotate tires, inspect tires for wear and measure tread depth.
	Inspect ramp operation and check tracks for debris and clean as necessary.
	Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
	Lube all body hinges.
	Inspect engine air filter.
	Inspect automatic transmission fluid level.
	Inspect engine coolant level.

90000 miles/144800 kilometers

	Perform 7500 mile/12000 kilometer service.
	Replace engine air filter.
	Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
	Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
	Inspect rear axle shaft boots.
	Inspect exhaust system and heat shields.
	Inspect engine cooling system and hoses.

97500 miles/156900 kilometers

Change engine oil and replace oil filter.
Rotate tires, inspect tires for wear and measure tread depth.
Inspect ramp operation and check tracks for debris and clean as necessary.
Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
Lube all body hinges.
Inspect engine air filter.
Inspect automatic transmission fluid level.
Inspect engine coolant level.

105000 miles/169000 kilometers

Perform 7500 mile/12000 kilometer service.
Replace engine air filter.
Replace differential fluid.
Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
Inspect rear axle shaft boots.
Inspect exhaust system and heat shields.
Inspect engine cooling system and hoses.

112500 miles/181000 kilometers

Change engine oil and replace oil filter.
Rotate tires, inspect tires for wear and measure tread depth.
Inspect ramp operation and check tracks for debris and clean as necessary.
Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
Lube all body hinges.
Inspect engine air filter.
Inspect automatic transmission fluid level.
Inspect engine coolant level.

120000 miles/193100 kilometers

Perform 7500 mile/12000 kilometer service.
Replace engine air filter.
Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
Inspect rear axle shaft boots.
Inspect exhaust system and heat shields.
Inspect engine cooling system and hoses.

127500 miles/205100 kilometers

Change engine oil and replace oil filter.
Rotate tires, inspect tires for wear and measure tread depth.
Inspect ramp operation and check tracks for debris and clean as necessary.
Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
Lube all body hinges.
Inspect engine air filter.
Inspect automatic transmission fluid level.
Inspect engine coolant level.

135000 miles/217200 kilometers

Perform 7500 mile/12000 kilometer service.
Replace engine air filter.
Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
Inspect rear axle shaft boots.
Inspect exhaust system and heat shields.
Inspect engine cooling system and hoses.

142500 miles/229300 kilometers

Change engine oil and replace oil filter.
Rotate tires, inspect tires for wear and measure tread depth.
Inspect ramp operation and check tracks for debris and clean as necessary.
Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
Lube all body hinges.
Inspect engine air filter.
Inspect automatic transmission fluid level.
Inspect engine coolant level.

150000 miles/241400 kilometers

Perform 7500 mile/12000 kilometer service.
Replace engine air filter.
Inspect differential fluid.
Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
Inspect rear axle shaft boots.
Inspect exhaust system and heat shields.
Inspect engine cooling system and hoses.

150700 miles/253400 kilometers

Change engine oil and replace oil filter.
Rotate tires, inspect tires for wear and measure tread depth.
Inspect ramp operation and check tracks for debris and clean as necessary.
Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
Lube all body hinges.
Inspect engine air filter.
Inspect automatic transmission fluid level.
Inspect engine coolant level.

165000 miles/266300 kilometers

Perform 7500 mile/12000 kilometer service.
Replace engine air filter.
Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
Inspect rear axle shaft boots.
Inspect exhaust system and heat shields.
Inspect engine cooling system and hoses.

172500 miles/2776 kilometers

Change engine oil and replace oil filter.
Rotate tires, inspect tires for wear and measure tread depth.
Inspect ramp operation and check tracks for debris and clean as necessary.
Inspect the wheels and related components for abnormal noise, wear, looseness or drag.
Lube all body hinges.
Inspect engine air filter.
Inspect automatic transmission fluid level.
Inspect engine coolant level.

180000 miles/289600 kilometers

Perform 7500 mile/12000 kilometer service.
Replace engine air filter.
Lubricate and inspect steering linkage, ball joints, suspension, tie rod ends, drive shaft and U-joints.
Inspect brake pads, rotors, and lines/hoses, and parking brake system. Ensure proper brake fluid level.
Inspect rear axle shaft boots.
Inspect exhaust system and heat shields.
Inspect engine cooling system and hoses.