

Owner Checks and Services

It is recommended that the following basic maintenance checks and inspections be performed at the designated time intervals. Check the owner's manual for more information.

Maximum Oil Change Interval	
	Normal Schedule: 7500 miles or 6 months, whichever comes first.
	Special Operating Conditions: 5000 miles, 6 months, or 200 hours of engine operation, whichever occurs first.

Engine Coolant Change Interval	
	6 years or 105000 miles – change coolant (whichever comes first). Use coolant specified in Capacities on page 240.
	After initial change – change coolant every 6 years or 100000 miles,

Check Every Month for All Vehicles	
	Check function of interior and exterior lights,
	Check tires for wear and proper inflation (41PSI/283KPA),
	Check engine oil fluid level,
	Check windshield washer fluid level,
	Check ramp operation and clean ramp panels with bristle brush and water.

Check Every Six Months for All Vehicles	
	Check lap/shoulder belts and seat latches for wear and proper operation.
	Check power steering fluid level.
	Check windshield/rear window washer operation.
	Check condition of wiper blades (replace blades as necessary).
	Check parking brake for proper operation.
	Check and lubricate upper and lower door hinges and door check straps.
	Check safety warning lamps (ABS, Check Engine, etc.) for operation.
	Check engine coolant level.
	Check battery connections and clean if necessary.

Every 7500 Ramp Cycles or Five Years, whichever occurs first.	
	Ramp Service Adjustment

Retightening Lug Nuts	
	Refer to the Tire Rotation on page 212 of the Owner's Manual for the proper lug nut torque specifications.

