



1000+

## Partial List)

- |                                              |                                          |                                          |                                                      |                                               |
|----------------------------------------------|------------------------------------------|------------------------------------------|------------------------------------------------------|-----------------------------------------------|
| • Sleeve - Bearing                           | • Spring - Front Suspension Torsion      | • Switch - Electrical Windshield Wiper   | • Transducer - EGR Back Pressure                     | • Valve Assembly - Brake Blower Motor Feed    |
| • Sleeve - Front Stabilizer Bar              | • Spring - Gear Tensioner                | • Switch - Fuel Filter                   | • Transducer - Hydraulic Pressure                    | • Valve Assembly - Brake/M/C                  |
| • Sleeve - Rear Stabilizer Bar               | • Spring - Leaf Rear                     | • Switch - Ignition Anti-Theft           | • Transducer Assembly                                | • Valve Assembly - Cooling Control            |
| • Sleeve - Spacer Snap Ring                  | • Spring - Overrunning Clip              | • Switch - Pressure Warning              | • Transfer Case Assembly                             | • Valve Assembly - Exhaust                    |
| • Sleeve - Transmission Oil Pressure Boost   | • Spring - Parking Pawl                  | • Switch - Temp Control                  | • Transfer Case Encoder/Shift Motor                  | • Valve Assembly - Fan Air Sup                |
| • Sleeve Assembly - Clutch Ad                | • Spring - Rear Suspension Torsion       | • Switch - Temp Control Valve            | • Transmission - Actuator Assembly                   | • Thermostat Control                          |
| • Sleeve Assembly - Rear Lube                | • Spring - Reverse Inhibitor             | • Switch - Turn Indicator                | • Transmission - Bearing                             | • Valve Assembly - Fuel Selector              |
| • Sleeve/Ring Assembly Lockout               | • Spring - Shift Bias                    | • Switch - Vacuum Pump                   | • Transmission - Case Cover                          | • Valve Assembly - Fuel Tank Vent             |
| • Slide - Door Window Regulator              | • Spring - Tran G/Shift Lever            | • Switch and Bracket Assembly - Tailgate | • Transmission - Control Pivot                       | • Valve Assembly - Main Control               |
| • Slide - Front/Rear Seat Track              | • Spring Assembly - Front                | • Switch Assembly - Brake Warning        | • Transmission - Mount                               | • Valve Assembly - Master Cylinder Control    |
| • Slinger - Front/Rear Hub Oil               | • Spring Assembly - Rear Springs Slipper | • Switch Assembly - Door Ajar            | • Transmission - Oil Cooler Line                     | • Valve Assembly - Power Steering Control     |
| • Slip Yoke Assembly - Front Axle            | • Sprocket - Crankshaft                  | • Switch Assembly - Door Lock            | • Transmission - Oil Pump                            | • Valve Assembly - Thermal Vent               |
| • Snap Ring - Countershaft                   | • Sprocket - Lock Ring                   | • Switch Assembly - Door Warning         | • Transmission - Sun Gear                            | • Valve Assembly - Trans Control              |
| • Snap Ring - Synchronizer                   | • Start/Stop Push-Button Switch          | • Switch Assembly - EGR                  | • Transmitter Remote Control                         | • Valve Assembly - Vacuum Check               |
| • Snap Ring - Transmission                   | • Starter Motor Assembly                 | • Switch Assembly - Elect Shift          | • Trip Minder Assembly                               | • Valve Assembly - Vacuum Check               |
| • SNS and Transmission Assembly              | • Starter Motor Solenoid                 | • Switch Assembly - Fuel Tank            | • Tube - Fuel Injection                              | • Valve/Switch Assembly - Brake               |
| • Tire Press                                 | • Stationary Elevated Ride Control       | • Switch Assembly - Gear Shift Neutral   | • Tube - Oil Level Indicator                         | • Vane Sensor                                 |
| • Socket - Instrument Panel Light            | • Steering Actuator Valve                | • Switch Assembly - Lock Sensor          | • Tube - Turbo Air Outlet                            | • Variable Assist Power Steering Module       |
| • Socket and Wire - Rear Left                | • Steering Column Assembly               | • Switch Assembly - Parking Brake        | • Tube - Turbo Oil Return                            | • Variable Cam Timing Assembly                |
| • Socket Assembly - Auxiliary Electric Power | • Steering Column Lock Actuator          | • Switch Assembly - Pressure             | • Tube Air Suspension                                | • Variable Camshaft Timing (VCT) Phasers      |
| • Solenoid - Engine Timing                   | • Steering Column Lock Assembly          | • Switch Assembly - Radio                | • Tube Assembly - Oil Cooler                         | • Vehicle Emergency Messaging Module Assembly |
| • Solenoid - Engine Variable Timing          | • Steering Stop                          | • Switch Assembly - Rear Axle            | • Tube Vacuum Heat Valve                             | • Vent - Rear Axle Housing                    |
| • Solenoid - Luggage Door                    | • Steering Wheel Controls                | • Switch Assembly - Speedometer          | • Turbo Boost Gauge                                  | • Venturi A/C Evaporator                      |
| • Solenoid - Press Regulator                 | • Steering Wheel Bearing Cup             | • Switch Assembly - Window Regulator     | • Turbo Discharge Pipe Gasket                        | • Venturi Assembly A/C                        |
| • Solenoid - Regulator                       | • Stem A/C Clutch Switch                 | • Switch Assembly - Window Regulator     | • Turbocharger/Supercharger Unit - Factory-Installed | • Viscous Coupler/Flexible Coupler            |
| • Solenoid - Transmission Downshift          | • Striker Rear Seat Latch                | • SYNC® Module                           | • Two Speed Shaft Repair                             | • Voltage Converter AC to DC                  |
| • Solenoid - Vacuum Modulator                | • Strut - Front Suspension Lower         | • Synchronizer Assembly                  | • U-bolt - Rear Spring                               | • Washer - Crankshaft Pulley                  |
| • Solenoid and Manifold Actuator             | • Subwoofer Assembly                     | • TCM (Transmission Control Module)      | • U-bolt - Universal Joint                           | • Washer - Front Suspension Lower             |
| • Solenoid Assembly                          | • Suction/Discharge Assembly             | • Temperature Indicator                  | • Underbody Linkages and Couplings                   | • Water Bypass Pipe                           |
| • Solenoid Assembly - Fuel                   | • Sunload Sensor                         | • Tensioner - Timing Chain               | • Universal Joint                                    | • Water Outlet Connection                     |
| • Solenoid Assembly - Trans                  | • Support - Coupling Shaft Bearing       | • Thermostat/Temperature Sensor Probe    | • Vacuum Pump Gasket                                 | • Water Pump                                  |
| • Sonic Plenum EGR Valve                     | • Support - Exhaust Pump                 | • Thermostat Housing                     | • Vacuum Selector - Air Conditioner                  | • Wheel Cylinders                             |
| • Spacer - Front Spring                      | • Support - Front/Rear Seat Belt Buckle  | • Throttle Valve Cable                   | • Valve - A/C Comp Low Pressure                      | • Wheel Steering Assembly                     |
| • Spacer - Power Steering                    | • Support - Front/Rear Seat Belt Buckle  | • Throttle Bearing                       | • Valve - A/C Compressor Pressure                    | • Window Crank Handle/Knob                    |
| • Spacer - Rear Spring                       | • Support - Rocker Arm                   | • Tie Rods Inner/Outer                   | • Valve - Anti-Backfire                              | • Windshield Wiper Motor                      |
| • Spacer - Transmission                      | • Support - Turbocharger                 | • Timing Chain Tensioner                 | • Valve - Assembly H/L Cover                         | • Wiper Motor                                 |
| • Spare Wheel Carrier Lift Assembly          | • Support Arm Assembly                   | • Timing Gear Set                        | • Valve - Brake Pressure Differential                | • Connector Grommet                           |
| • Speaker - Assembly                         | • Support Assembly - Drive               | • Torque Arm Assembly                    | • Valve - Brake Pressure Meter                       | • Wire - Power Steering Assist                |
| • Speaker - Parking Aid Control              | • Support Assembly - Trans               | • Torque Converter Assembly              | • Valve - Brake Sensor                               | • Wire - Speaker System                       |
| • Speedograph/Tachograph                     | • Switch - A/C Comp Clutch               | • Torque Converter Valve                 | • Valve - Covers                                     | • Wire Assembly - Front/Rear Seat Control     |
| • Speedometer Assembly                       | • Switch - A/C Pressure                  | • Torque Converter Support               | • Valve - Door Vent                                  | • Wire Assembly - Neutral Switch              |
| • Spindle - Nut and Bearing                  | • Switch - A/C Temperature Control       | • Torsion Bar - Front                    | • Valve - EGR Vacuum Control                         | • Wire Assembly - RPM Sensor                  |
| • Spindle and Spindle Support Springs        | • Switch - Back-Up Light                 | • Torsion Spring                         | • Valve - Fuel Sender Check                          | • Wire Harness - A/C Fan                      |
| • Spindle Assembly                           | • Switch - Brake Anti-Lock               | • TPMS Sensor                            | • Valve - Guide                                      | • Wire Harness - Air Conditioner              |
| • Spindle Nut Assembly                       | • Switch - Brake Low Pressure            | • Track - Door Center                    | • Valve - Lube Connector                             | • Wiring - A/C Clutch                         |
| • Spring - Camshaft Plunger                  | • Switch - Brake Pressure Warning        | • Track Front/Rear Seat Inner            | • Valve - Main Oil Pressure                          | • Wiring - A/C Control Switch                 |
| • Spring - Differential Clutch               | • Switch - Brake Traction Lock Control   | • Track Front/Rear Seat Strap            | • Valve - Throttle Center                            | • Wiring - Engine Loom                        |
| • Spring - Door Latch                        | • Switch - Coolant Temp                  | • Trailer Brake Module                   | • Valve - Throttle Pressure                          | • Wiring - Exterior                           |
|                                              |                                          | • Transceiver - Passive Anti Theft       | • Valve - Transmission                               | • Wiring - Interior                           |
|                                              |                                          | • Transducer - EGR                       | • Valve Assembly - Air Bypass                        | • Wiring - Radio Amplifier                    |

| Ford Protect Maintenance Plans |                                                                                                              |      |                  |                                                                                                                                                                                           |                     |                           |                       |                         |
|--------------------------------|--------------------------------------------------------------------------------------------------------------|------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|---------------------------|-----------------------|-------------------------|
| Plan                           | Description                                                                                                  | Ford | Competitive-Make | Time/Mileage                                                                                                                                                                              | Roadside Assistance | Rental                    | Optional Key Services | Interest-Free Financing |
| Premium/Extra Maintenance Plan | Covers routine inspections, preventive care, all scheduled maintenance, and replacement of select wear items | ✓    | ✓                | Premium Maintenance: plans available up to the earlier of 10 years or up to 175,000 miles.<br><br>Extra Maintenance: plans available up to the earlier of 8 years or up to 150,000 miles. | ■                   | Optional First-Day Rental | ■                     | ✓                       |
| Limited Maintenance Plan       | Covers oil and filter change, tire rotation, multi-point inspection, (DEF) top-off                           | ✓    | ✓                | A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.                                                                                                      | ■                   | ■                         | ■                     | ✓                       |
| Basic Maintenance Plan         | Covers oil and filter change, tire rotation, multi-point inspection                                          | ✓    | ✓                | A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.                                                                                                      | ■                   | ■                         | ■                     | ✓                       |


**FORD PROTEC**

In Texas, Ford Protect is a Service Contract from Ford Motor Service Company (License #SCP-165).

October 202



