

# Get to Know the Dual-Zone Automatic Climate Control

The dual-zone automatic climate control can be adjusted using traditional switches or the touch screen. Walk through these steps to ensure you know how to use and demonstrate the system.

## SET TEMPERATURE

There are **3 ways to adjust the set temperature**, using the buttons on the side of the touch screen or the touch screen itself. Try these actions yourself:

- 1 Raise the set temperature on the driver's side by **pushing the red arrow button** alongside the screen
- 2 Now raise the set temperature in a different way. **Touch the screen** where the driver's set temperature is displayed
- 3 A new screen comes up. **Touch the icon of the red arrow or blue arrow** to adjust the temperature up or down
- 4 Now, **move the slider** up or down to adjust the set temperature



## OTHER CONTROLS

You can touch different sections of the climate control screen to bring up other menus and make other adjustments.

- 5 Touch the driver's side seat heater icon, then **touch the seat heater icon** to turn the seat heater on. Touch it again to lower the level of heat or turn it off
- 6 If the screen has reverted to Home, touch the set temperature area again and **touch the "Sync" icon**. This will synchronize the driver's and passenger's set temperature. "Sync" can be set from either the driver's or passenger's menu
- 7 Now touch a the center section of the HVAC screen. On the new screen, **touch Auto**, which changes the automatic control to **Full Auto**. ("Auto" controls everything except fan speed. "Full Auto" provides automatic control of the fan speed as well.) This same screen allows manual control of mode, fan speed, recirculation and Max A/C



## CUSTOMIZABLE ICON

One section of the climate control touch screen is customizable.

- 8 From the Home Screen, **touch the Settings icon**. Then **touch the General tab**
- 9 Scroll down if necessary until you see **"Climate Control."**
10. Touch the **"Customize Climate Button"** bar to bring up 4 choices:
  - A/C
  - Max A/C
  - Auto
  - Recirculation
11. Select **"Max A/C"** then touch the Home icon again. Now, as you can see, the customizable portion of the climate control screen shows Max A/C, which sets both driver and passenger's side temperatures to Lo temperature, full fan speed, recirculation and ventilation function to maximize cooling in the vehicle

