

2014 Infiniti Q50 Hybrid

Quick Reference Guide



INFINITI.



- 01 VEHICLE INFORMATION DISPLAY
- 02 LOW TIRE PRESSURE WARNING LIGHT
- 03 HEADLIGHT AND TURN SIGNAL CONTROL
- 04 EV INDICATOR LIGHT*
- 05 PUSH BUTTON IGNITION SWITCH
- 06 PADDLE SHIFTERS*
- 07 ASSIST CHARGE GAUGE
- 08 WINDSHIELD WIPER AND WASHER SWITCH
- 09 CRUISE CONTROL/
DRIVER'S ASSISTANCE SWITCHES
- 10 STEERING WHEEL SWITCHES FOR
AUDIO*/BLUETOOTH®
- 11 INSTRUMENT BRIGHTNESS CONTROL*/
TRIP RESET SWITCH
- 12 VEHICLE INFORMATION DISPLAY SWITCHES
- 13 TILT AND TELESCOPIC STEERING COLUMN*
- 14 VEHICLE DYNAMIC CONTROL (VDC)
OFF SWITCH*
- 15 TRUNK RELEASE SWITCH
- 16 HOOD RELEASE*
- 17 UPPER DISPLAY
- 18 CLIMATE CONTROL SWITCHES
- 19 LOWER DISPLAY
- 20 AUDIO SYSTEM
- 21 FRONT PASSENGER AIR BAG
STATUS LIGHT*
- 22 HEATED SEAT SWITCHES
- 23 INFINITI CONTROLLER
- 24 DRIVE MODE SWITCH*

*See your Owner's Manual for information.

new system features

Approaching Vehicle Sound for Pedestrians (VSP) System	2
Main Interface Switches Overview	2
User Registration	2
Upper Display	2
Map and Display View (with navigation)	3
Around View® Monitor (AVM) with Moving Object Detection (MOD) (if so equipped)	3

essential information

Tire Pressure Monitoring System (TPMS)	5
Hybrid Awareness	5
Direct Response Hybrid™ System Warning Light	6
Loose Fuel Cap	6
Driving Aids (if so equipped)	6
Active Lane Control (if so equipped)	7
Lower Display Maintenance	7
Heated Steering Wheel (if so equipped)	7

first drive features

INFINITI Intelligent Key System	8
Trunk Lid Release	9
Seat Adjustments	9
Heated Seats (if so equipped)	10
Automatic Drive Positioner (if so equipped)	10
Assist Charge Gauge	11
Outside Mirror Control Switch	11
Starting/Stopping the Hybrid System	11
Headlight Control Switch	11
Windshield Wiper and Washer Switch	12
Climate Controls	13
FM/AM/HD Radio®/SiriusXM Satellite Radio (SXM) (if so equipped)	15
USB/iPod® Interface	16
Conventional (Fixed Speed) Cruise Control	16
Intelligent Cruise Control (ICC) System (if so equipped)	16
Fuel-Filler Door	17

system guide

Trip Computer	18
Bluetooth® Hands-free Phone System	18
System Operating Tips	18
Navigation System (if so equipped)	21
HomeLink® Universal Transceiver	21



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to your **InTouch Owner's Manual**, the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, and the **"Starting and driving (section 5)"** of your Owner's Manual.



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2014/q50 or snap this barcode with an appropriate barcode reader.

new system features

 
Approaching Vehicle Sound for Pedestrians (VSP) System

- The VSP system helps alert pedestrians to the presence of the vehicle when it is being driven at a low speed.
- When the vehicle starts to move, it produces a sound. The sound stops when the vehicle speed reaches approximately 19 MPH (30 km/h) while accelerating.
- This sound will activate again when decelerating to a speed less than 16 MPH (25 km/h).

For more information, refer to the “**Hybrid System Overview**” section of your Owner’s Manual.

Main Interface Switches Overview



- 01 AUDIO** – Press to navigate to the main audio screen. From here all of the audio functions can be accessed.
- 02 MENU** – Press to navigate to the main menu screen. From here there is access to the navigation functions and all the applications which includes the settings application.
- 03 CLIMATE** – Press to navigate to the **CLIMATE** controls screen. From here you have access to climate control, heated steering wheel, and heated seat functions.

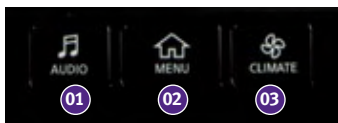

For more information, refer to the “**Getting Started (section 2)**” of your InTouch Owner’s Manual.

User Registration

  - Driving positions, navigation, climate controls, etc., can be memorized for each user.
- To register a new user:
 1. Press the **MENU** button. The menu screen will appear.
 2. Touch the right arrow key \triangleright until “**Edit User**” is displayed. Then, touch “**Edit User**”.
 3. Touch “**User List**”.
 4. Touch “**Add New**”. From here you can edit **Name** and **Picture**.
 5. Touch “**Finish**” when finished.

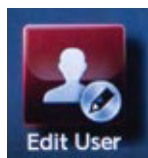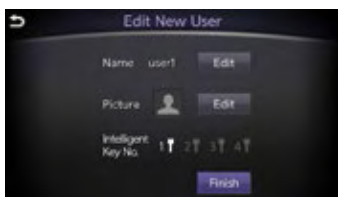

For more information, refer to the “**Information and Settings (section 8)**” of your InTouch Owner’s Manual.

Upper Display

- The upper display is controlled by touchscreen, Infiniti controller, and the $\blacktriangle \blacktriangledown$ switch on the steering wheel.
- Press **OK 01** on the Infiniti controller or **OK** on the steering wheel switch to display the menu screen. From here you are able to choose from audio sources, map settings, hands-free phonebook, and adding new options.
- Use the dial on the Infiniti controller to move the cursor, and press **OK 01** to select an item.
- While on the map screen, use the Infiniti controller to navigate to another location on the map by sliding the controller in the direction you would like to go.
- Press the \curvearrowright **02** button to return to the previous page.



 
 
Map and Display View (with Navigation)

- There are different variations of split screen views that can be displayed on the upper display. The map is always displayed on the right-hand side of the screen. Some of the left side options are, turn list, intersection, and turn by turn.
- To customize the split screen views on the upper display:
 1. When the current location map screen is displayed, press the **MAP/VOICE** **03** button on the Infiniti controller and the display view bar will appear at the bottom of the screen.
 2. Touch an icon on the display view bar, or use the dial on the Infiniti controller to scroll through the possible options and press **OK** **01** to select one.

For more information, refer to the “**Getting Started (section 2)**” of your InTouch Owner’s Manual.


Around View® Monitor (AVM) with Moving Object Detection (MOD) (if so equipped)

- With the ignition switch in the **ON** position, the Around View Monitor is activated by pressing the **CAMERA** button **01**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The control panel displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

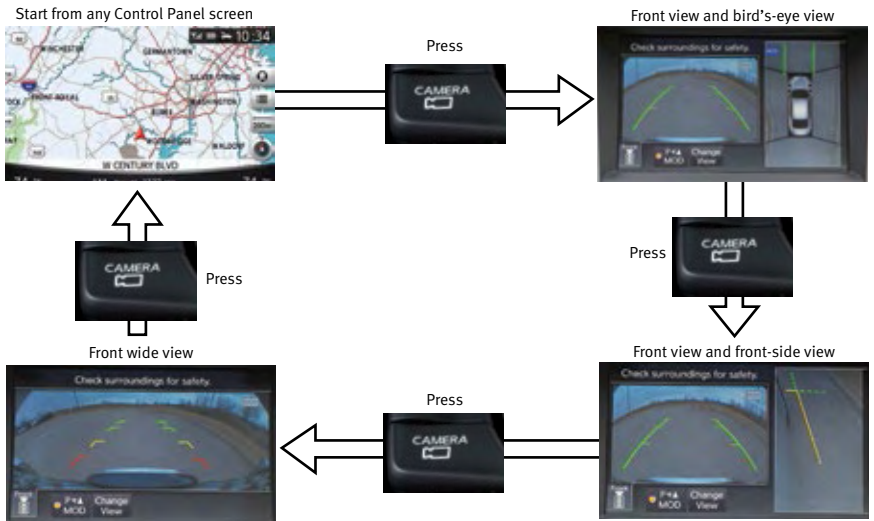
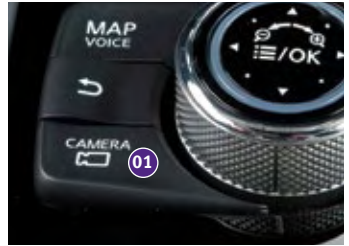


new system features

 - When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

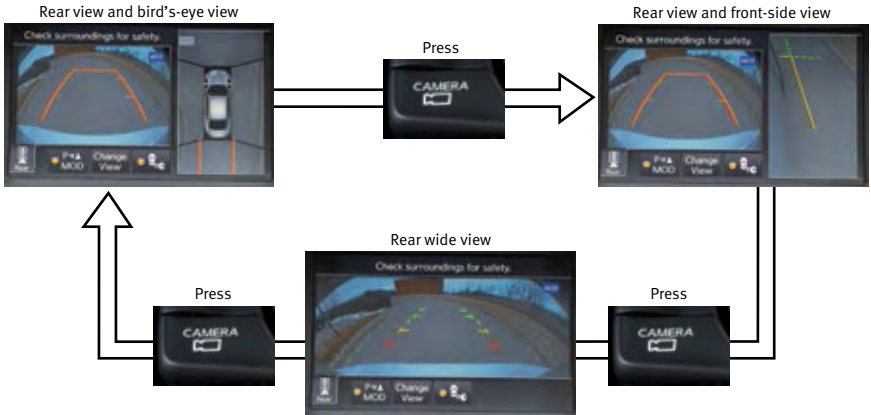


- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).
- There are some areas where the system will not show objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **02**.
 - When in the bird's-eye view, a tall object near the seam of the camera viewing areas **03** will not appear in the monitor.
- The distance between objects viewed on the AVM differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.

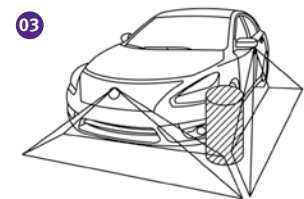  

MOVING OBJECT DETECTION (MOD)

 
- If the MOD system detects moving objects surrounding the vehicle, a yellow frame **01** will be displayed on the camera image and a chime sounds.
- In the bird's-eye view, a yellow frame is displayed on those camera images (front, rear, right, left) where moving objects are detected.
- When the following are displayed:
 - Blue MOD icon **02**; the system is operative in this view.
 - Gray MOD icon **03**; the system is not operative in this view.
 - No MOD icon; the system is off.
- To temporarily turn the system on or off, touch the **04** key.

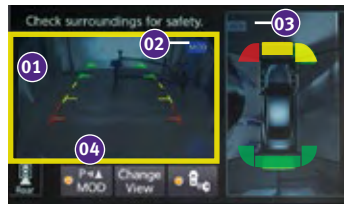

For more information, refer to the **"Monitor System (section 7)"** of your InTouch Owner's Manual.


Tire Pressure Monitoring System (TPMS)

 - A **Flat Tire Visit Dealer** or **Tire Pressure Low — Add Air** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **Flat Tire Visit Dealer** or **Tire Pressure Low — Add Air** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information", in your Owner's Manual for the location of the Tire and Loading Information label.

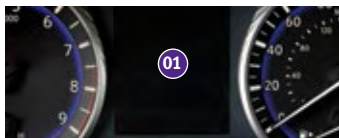

For more information, refer to the "Instruments and controls (section 2)", "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

Hybrid Awareness

- Your vehicle is virtually silent in the electric mode. If you exit your vehicle while it is ON, but the engine is not running, the engine will automatically start, informing you that the car is still ON.
- Do not store your INFINITI Intelligent Key within detection range of the vehicle. This may cause welcome lights and other functions to activate creating unwanted battery drain.
- The hybrid system is designed for optimum efficiency and performance. Activation of the electric mode may vary with driving conditions and driver input. A full battery display does not indicate the vehicle should be in the electric mode.
- The READY to drive  indicator light illuminates when the hybrid system is powered and the vehicle may be driven.

For more information, refer to the "Starting and Driving (section 5)" of your Owner's Manual.


 

Direct Response Hybrid™ System Warning Light



- This light will illuminate when the ignition switch is in the ON position and will turn off when the hybrid system is started.
- The light will also illuminate when a malfunction occurs in the electric motor or hybrid system.
- When this light illuminates while driving, immediately stop the vehicle in a safe location and contact an INFINITI retailer.
- If the hybrid system warning light blinks while driving, it may indicate that the Li-ion battery charge is low and you cannot continue to drive.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.


Loose Fuel Cap

  - A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the  or  button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

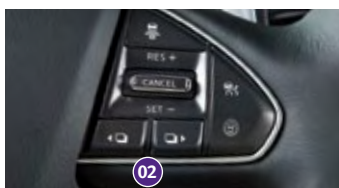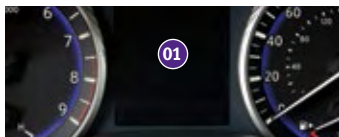

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Driving Aids (if so equipped)

- The trip computer displays different driving aids including **Forward Collision**, **Lane Departure Prevention**, and **Blind spot** intervention, if they are currently activated.
- To disable driving aids/warnings:
 1. Press the **MENU** button just below the lower display.
 2. Touch the right arrow key  until you see “**Driver Assistance**”. Touch the “**Driver Assistance**” key.
 3. Touch the key that corresponds with the driving aid/warning you would like to turn off (**Forward Assist**, **Lane Assist**, or **Blind Spot Assist**).
 4. Select the driving aid line key to disable.



For more information, refer to the “**Starting and Driving (section 5)**” of your Owner’s Manual.

Active Lane Control (if so equipped)

- Active lane control assists in stable driving. The system corrects front tire angles and steering wheel torque allowing the driver to make fewer steering wheel corrections. These corrections may cause slight steering wheel vibrations.
- Active lane control is active when:
 - The vehicle is driven at speeds of approximately 45 MPH and above.
 - When the lane departure prevention and active lane control systems are enabled in the **Settings** menu.

For more information, refer to the “**Starting and Driving (section 5)**” of your Owner’s Manual.

Lower Display Maintenance

- Only use a microfiber cloth to clean the lower display.

For more information, refer to the “**Appearance and Care (section 7)**” of your Owner’s Manual.

Heated Steering Wheel (if so equipped)

 
- The heated steering wheel system is designed to operate only when the surface temperature of the steering wheel is below approximately 68°F (20°C). The steering wheel heater will also turn off automatically after approximately 30 minutes.
- To manually turn on the heated steering wheel, touch the steering wheel heater icon **01** within the **CLIMATE** control screen in the lower display. The indicator light will illuminate.

AUTOMATIC STEERING WHEEL HEATER

- When turned on, the steering wheel heater will automatically heat the steering wheel whenever the temperature inside the vehicle compartment is below approximately 68°F (20°C) at the time of ignition **ON**.

- To turn on the automatic steering wheel heater:

1. Press the **MENU** button just below the lower display.
2. Touch the “**Settings**” key.
3. Touch the right arrow key > until you see “**Others**”.
Touch the “**Others**” key.
4. Touch “**Climate**”.
5. Touch “**Steering Heater Auto**” **02** to turn on.

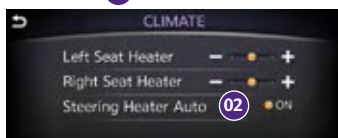






For more information, refer to the “**Heater and Air Conditioner (section 3)**” of your InTouch Owner’s Manual.

first drive features

INFINITI Intelligent Key System

The INFINITI Intelligent Key system allows you to lock or unlock the vehicle, open the trunk and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).



- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **03** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Touch the inside of the door handle **02** to unlock the corresponding door. Pressing the request switch **01** while touching the inside of the door handle will unlock the rest of the doors, or
 - Press the  button **04** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To release the trunk lid, press the  button **05** for more than 1 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **06** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



INFINITI INTELLIGENT KEY BATTERY DISCHARGE



- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.



 
For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner's Manual.

Trunk Lid Release

Use one of the following methods to open the trunk:


 
- Push the trunk open request switch **01** for more than 1 second while carrying the INFINITI Intelligent Key with you.
- Press the trunk button  on the Intelligent Key for more than 1 second.
- From inside the vehicle, push down on the trunk lid release switch **02** on the instrument panel.
- To completely disable all power to the trunk lid, push the trunk release power cancel switch **03** to the **OFF** position. While in this position, the trunk lid cannot be opened with the trunk open request switch **01**, trunk button , or the trunk lid release switch **02** until pushed to the **ON** position.

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

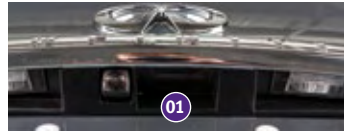


Seat Adjustments


POWER SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the control switch  **01** forward or backward.
- To recline the seatback, push the switch  **02** forward or backward.

SEAT LIFTER

- To adjust the angle of the front portion or height of the seat, push the front or rear end of the switch  **01** up or down.

POWER LUMBAR SUPPORT (if so equipped)

- To adjust the seat lumbar support, push the front or back end of the switch  **03**.

MANUAL LUMBAR SUPPORT (if so equipped)

- To adjust the seat lumbar support, move the lever up or down.

SIDE SUPPORT (driver’s seat only) (if so equipped)

- The driver’s seat side support adjusts the support on your torso.
- Push the switch **04** away from you to loosen the support, or pull the switch **04** toward you for more support.

MANUAL THIGH EXTENSION (if so equipped)

- To slide the thigh extension forward or backward, pull up on the lever **05** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.



For more information, refer to the “Safety – seats, seat belts and supplemental restraint system (section 1)” of your Owner’s Manual.

first drive features

Heated Seats (if so equipped)

- There are 2 ways to operate the heated seats:

1. By pressing the heated seat switch **01**.
 - Every press of the switch allows you to cycle through the 5 different modes of **AUTO – Hi – Mid – Lo – OFF**.
2. While on the **CLIMATE** control screen on the lower display, touch the left or right heated seat icon **02**.

- The **Left or Right Seat Setting** screen is displayed with a list of the 5 different modes of **AUTO – Hi – Mid – Lo – OFF** to choose from.
- The indicator light on the heated seat switch **01** will illuminate when the system is in **AUTO – Hi – Mid – Lo**.
- While in **AUTO**, the heated seats will turn on/off automatically, depending on temperature conditions in the vehicle compartment.
- To view which one of the 5 modes the system is in, press the **CLIMATE** button **03**. This will bring up the **CLIMATE** control screen on the lower display. From here you will see the heated seat icons **02** for the driver and passenger side, and below the icon is the mode the system is in currently.



For more information, refer to the "**Heater and Air Conditioner (section 3)**" of your InTouch Owner's Manual.

Automatic Drive Positioner (if so equipped)

- Two positions for the driver's seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (1 or 2) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions are now set to your preference.
- When you turn off your vehicle the driver's seat, steering column, and outside mirror positions are automatically remembered and recalled the next time you log into your vehicle.

 


For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual, and "**Information and Settings (section 8)**" of your InTouch Owner's Manual.

Assist Charge Gauge

- This shows the power consumed **02**, or generated **01** by the electric motor.


For more information, refer to the “**Hybrid System Overview**” section and the “**Instruments and controls (section 2)**” of your Owner’s Manual.

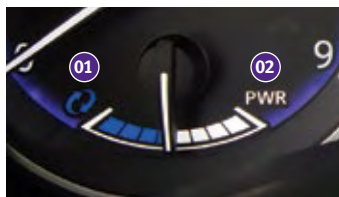

Outside Mirror Control Switch

- To select the right or left side mirror, move the control switch **01** right or left.
- Adjust each mirror to the desired position using the switch **02**.

 For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

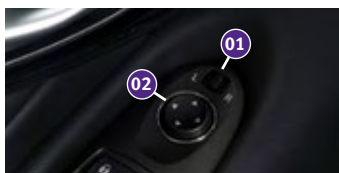

Starting/Stopping the Hybrid System

- It is important to make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the hybrid system.



TURNING THE HYBRID SYSTEM OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the hybrid system off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Headlight Control Switch

HEADLIGHT CONTROL

- Turn the headlight control switch to the $\Rightarrow \nabla \Leftarrow$ position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the $\Leftarrow \nabla \Rightarrow$ position **02** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**, $\Rightarrow \nabla \Leftarrow$ **01** or $\Leftarrow \nabla \Rightarrow$ position **02**.

HIGH BEAM SELECT

- To manually select the high beam function:
 1. Turn the headlight control switch to the $\Leftarrow \nabla \Rightarrow$ position **02**.



first drive features

2. Push the headlight control switch **04** forward to select the high beam function. The blue indicator light $\equiv \square$ illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light turns off.



- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

HIGH BEAM ASSIST (if so equipped)

- The high beam assist system will operate when the vehicle is driven at approximately 22 MPH (35 km/h) and above. If an oncoming vehicle or leading vehicle appears in front of your vehicle when the high beam is on, the headlights will automatically be switched to the low beam.
- Following the procedure below only activates the high beam assist system. This does not necessarily turn on the high beam, even if there is no other traffic. Both ambient light and traffic conditions have to be correct for the high beam to illuminate.
- To activate high beam assist, turn the headlight control switch to the **AUTO** position **01** and push the headlight control switch **04** forward to turn on the high beam. The high beam assist indicator light $\equiv \square$ will illuminate.

FOG LIGHT SWITCH

- The headlights must be on and the low beams $\equiv \square$ selected for the fog lights to operate.
- Turn the switch (inside collar) to the $\equiv \square$ position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

 
 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Windshield Wiper and Washer Switch

RAIN-SENSING AUTO WIPER SYSTEM (if so equipped)

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the wipers.
- 02** Auto (**AUTO**) - Operates the rain-sensing wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **03**.
- 04** Low (**LO**) - Wipers operate at a continuous low speed.
- 05** High (**HI**) - Wipers operate at a continuous high speed.
- 06** Pull the lever toward you to activate the washer. The wipers will operate several times.

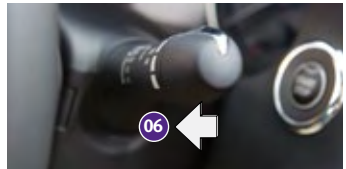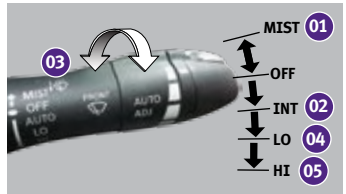

PULLING UP THE WIPER ARM

- Quickly move the lever to the **MIST 01** position twice.
- This will place the wiper arms into the service position to allow removal of the wiper blades.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



Climate Controls

01 CLIMATE BUTTON

- Press to the display **CLIMATE** control screen on the lower display.



 

02 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- Press the driver's side temperature control buttons up for warmer air or down for cooler air.

03 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS

- To manually adjust the passenger's side temperature, press the passenger's side temperature control buttons up for warmer air or down for cooler air.



04 FAN SPEED CONTROL


- To manually adjust the fan speed, press the  button or touch the  key to increase the fan speed. Press the  button or touch the  key to decrease the fan speed.

05 AUTO BUTTON


- Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.


06 MODE CONTROL

- Press the  button or touch the  key in the center of the lower display to cycle through the following air flow outlets:

 Air flows from the center and side vents.

 Air flows from the center, side and foot vents.

 Air flows mainly from the foot vents.





 Air flows from the defroster and foot vents.

first drive features

07 AUTO AIR RECIRCULATION KEY (if so equipped)

- Touch to allow inside air recirculation and outside air circulation to switch automatically depending on the quality of the outside air.

08 INTAKE AIR CONTROL BUTTON

- Pressing the intake air control button  will cancel auto air recirculation 07 (if so equipped) until it is re-activated from the touch screen (see above). Press the intake air control button  to manually control whether the interior air is recirculated, or outside air is drawn into the vehicle. When the indicator light is on, interior air is recirculated, outside odors are avoided, and interior vehicle temperature is most effectively maintained.
- The air recirculation mode cannot be activated when the air conditioner is in the front defrosting mode  or the front defrosting foot vent mode .


09 A/C Key

- Touch the **A/C** key to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

 
10 DUAL KEY

- Touch to turn the passenger's side temperature controls on or off. When the system is on, the indicator light will illuminate. This function will allow the passenger's side temperature to be adjusted independently from the driver's side by pressing the passenger's side temperature control buttons 03.

11 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This features removes humidity from the air.
- To defrost the front and side windows, set the temperature controls 02 and fan speed controls 04 to their maximum settings.

12 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.




13 ON/OFF BUTTON

- Press the **ON/OFF** button to turn the climate control system off.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual and the “**Heater and Air Conditioner (section 3)**” of your InTouch Owner’s Manual.



 
FM/AM/HD Radio®/SiriusXM* Satellite Radio (SXM) (if so equipped)

- 01 AUDIO BUTTON**
 - Press to display the **AUDIO** screen on the lower display.
- 02 VOLUME CONTROL DIAL /  (POWER) BUTTON**
 - Turn the **VOL/ ** dial right or left to increase or decrease the volume. Press the  button to turn the system on or off.
- 03 SEEK•CAT/TRACK BUTTON**
 - To scan quickly through each broadcasting station, press the **SEEK•CAT/TRACK** button to stop at the previous or next broadcast station.
 - For SiriusXM Satellite Radio, press the **SEEK•CAT/TRACK** button to switch to the first channel of the previous or next category.
 - For HD Radio®, press the **SEEK•CAT/TRACK** button to change the station.
 - Press the **SEEK•CAT/TRACK** button to change tracks on a CD.
 - Press and hold the **SEEK•CAT/TRACK** button to fast forward or rewind a track on a CD.
- 04 TUNE•CH/FOLDER BUTTON**
 - To manually tune the radio, press the **TUNE•CH/FOLDER** button left or right.
 - Press and hold the **TUNE•CH/FOLDER** button left or right to accelerate radio tuning.
- 05 RADIO BUTTON**
 - Press to change audio source in the order of **AM**, **FM**, and **SXM** (SiriusXM).
- 06 DISC•AUX BUTTON**
 - Press to change audio source (CD, iPod®, USB, Bluetooth® Streaming Audio or AUX).
- 07 STATION PRESET KEYS**
 - Up to 36 stations/channels can be set for **AM**, **FM** and **SXM** (SiriusXM).
 - To store a station in a preset, you must first select a radio band by pressing the **RADIO** button, then tune to the desired **AM**, **FM**, or **SXM** station.
 - Now select and hold the desired station memory key (**1-36**) until the preset number is updated on the display and a beep is heard. Programming is now complete.
 - To retrieve a previously set station, arrow right or left **08** and touch the memory key (**1-36**) that contains the stored station/channel you wish to listen to.

*SiriusXM Satellite Radio is only available on vehicles equipped with optional SiriusXM Satellite Radio subscription service. For more information, refer to the **"Audio System (section 4)"** of your In Touch Owner's Manual.

first drive features

USB/iPod® Interface

- The USB jack **01** is located in the center console under the armrest.
- When a compatible USB memory device or iPod® is plugged into the USB jack:
 - A confirmation message appears. Select “Yes” if you prefer to use the USB device with voice recognition in which song titles and artist names are registered in the system.
 - Compatible audio and video files stored on the device can be played through the vehicle’s audio system and front display.
- If two USB devices are plugged in at the same time, you are able to use Voice Recognition to choose which one should play. Just press the Talk button  on the steering wheel to activate Voice Recognition and follow the voice prompts.
- This vehicle is equipped with Audio and Video RCA inputs **02**. This will allow you to play audio and video through your vehicle from an external source.



For more information, refer to the “**Getting Started (section 2)**”, “**Voice Recognition (section 10)**”, and the “**Audio System (section 4)**” of your InTouch Owner’s Manual.


 
Conventional (Fixed Speed) Cruise Control


- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **SET –** switch and release. The **CRUISE SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES +** switch. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET –** switch. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch.
- To turn off cruise control, push the **ON/OFF** switch. The **CRUISE** indicator light in the instrument panel will turn off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Intelligent Cruise Control (ICC) System (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

 - To set vehicle-to-vehicle distance control mode, press the  button **01** for less than 1.5 seconds. The gray  indicator light **02** will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET –** switch **03** and release it. Intelligent cruise control will be set to the desired speed.

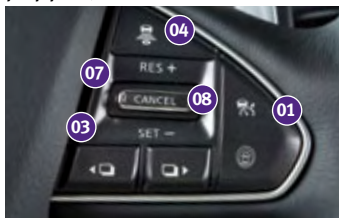

- Press the distance button **04** repeatedly to change the set distance between long, middle, and short.



- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **05** in set mode.

- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance, and set vehicle speed indicator lights will illuminate **06** in set mode.

- To reset at a faster cruising speed, push up and hold the **RES +** switch **07**. When the vehicle attains the desired speed, release the switch.




- To reset at a slower cruising speed, push down and hold the **SET -** switch **03**. Release the switch when the vehicle slows to the desired speed.

- To cancel the preset speed, push the **CANCEL** switch **08**. The set vehicle speed indicator **05** will change to gray.

- To turn off cruise control, press the  button **01**. The  indicator light **02** in the instrument panel will turn off.



To set conventional (fixed speed) cruise control mode:

- While cruise control is off, press the  button **01** and hold it down for more than 1.5 seconds. The gray  indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET -** switch and release it. The green  indicator light will illuminate. Cruise control should be set to the desired speed.

To switch between the two cruise control modes:

- When one of the two cruise modes is in use, you must turn the system off, and then turn it on again to select the other cruise control mode.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



Fuel-Filler Door

 
 
 
- The fuel-filler door is located on the right, rear side of the vehicle.
- Unlock the fuel-filler door using one of the following operations, then push and release the left side of the door to open.
 - Push the door handle request switch while carrying the INFINITI Intelligent Key with you.
 - Press the UNLOCK button on the Intelligent Key.
 - Push the power door lock switch to the UNLOCK position.



For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

Trip Computer

- When the  or  button **01** is pressed, the following modes will appear on the vehicle information display **02** :
 - **Fuel Economy** – Displays the current fuel consumption.
 - **Average Speed** – Displays the average vehicle speed since the last reset.
 - **Distance/Time** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - **RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - Navigation (if so equipped) – Displays the navigation route information when route guidance is set in the navigation system.
 - Audio – Displays the status of audio information.
 - **Driving Aids** – (if so equipped) – Displays driving aid status.
 - **Tire Pressure** – (if so equipped) – Displays the current tire pressure in each tire.
 - **Chassis Control** – Displays the status of Active Lane Control and Active Trace Control.
 - **Warning** – This is available when there is a current warning.
- Push the **TRIP RESET** switch **03** for approximately 1 second to reset the currently displayed trip odometer to zero.

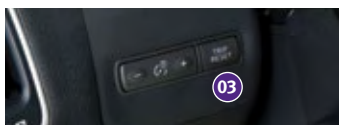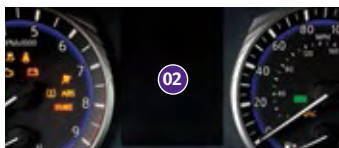


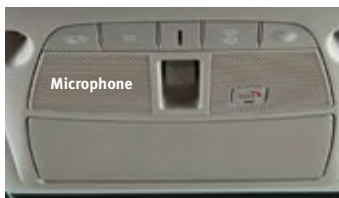 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.





Bluetooth® Hands-free Phone System

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

  
 
- Close all windows and turn vents away from the ceiling. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command right after the tone.
- Speak in a clear and natural voice without pausing between words.



- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say “Go back”.
- To cancel a voice recognition session, say “Exit” or press and hold the  button.
- To interrupt the system voice and give a command quickly, press the  button.
- To increase or decrease the volume of the voice prompts, push the volume control switches **—** or **+** on the steering wheel or turn the **VOL/**  button on the audio system while the system is responding.
- Please refer to the cellular phone manufacturer’s Owner’s Manual for detailed information regarding your Bluetooth phone.
- To reduce the length of spoken prompts, you can select “Minimize Voice Feedback” in the voice recognition settings menu.
- The voice recognition system allows you to choose between voice input and manual controls of lists. Choose the method that is easiest for you. For example, when a list is shown, you can use the **▲▼** switch on the steering wheel to select an item from the displayed list instead of saying the item.
- When using the **▲▼** feature to navigate lists during voice recognition use the spoken menu readout feature to help navigate the list easily. Voice input is paused when menu control is activated. To resume voice recognition, select a menu item by pushing the **▲▼** switch, or simply push the  button.

CONNECTING PROCEDURE

  - The vehicle must be stationary when connecting the phone.
1. Press the **MENU** button below the lower display, touch the “**Settings**” key.
 2. Touch “**Bluetooth**”.
 3. Touch “**Connect Device**” and then touch “**Add New**”.
 4. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter the PIN code that appears on the screen into the handset.
 5. When the connecting is complete, the screen will return to the previous screen.

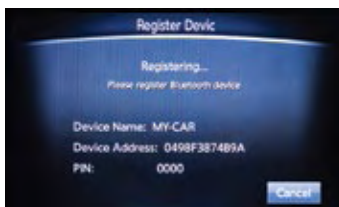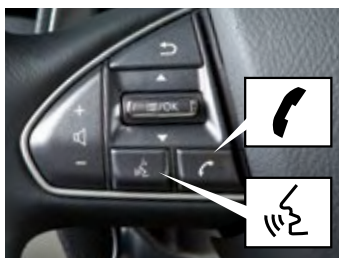

system guide

PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set up for manual entry.
- To manually download entries:
 1. Press the **MENU** button just below the lower display.
 2. Touch the **"Settings"** key.
 3. Touch **"Phone/Mail"**.
 4. Touch **"Phone Settings"**.
 5. Touch **"Phonebook/Favorites Settings"**.
 6. Touch **"Configure Phonebook Settings"**.
 7. Touch **"Manual Phonebook Transfer"**.
 - From here you are able to transfer information from your cellular phone to your vehicle.



MAKING A CALL FROM THE PHONEBOOK

1. Press the $\sqrt{\Sigma}$ button on the steering wheel.
 2. After waiting for the tone, say "Phone".
 3. After waiting for the tone, say "Call".
 4. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
- In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.

 
MAKING A CALL BY PHONE NUMBER

1. Press the $\sqrt{\Sigma}$ button on the steering wheel. A tone will sound.
2. After waiting for the tone, say "Phone".
3. After waiting for the tone, say "Dial".
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the \hookrightarrow button on the steering wheel or touch the **"Answer"** key.
- To reject the call, touch the **"Decline"** key.
- To hang up, press the \hookrightarrow button or touch the **"Hang Up"** key.

For more information, refer to the **"Hands-Free Phone (section 5)"** and **"Voice Recognition (section 10)"** of your InTouch Owner's Manual, or please visit www.InfinityUSA.com/bluetooth.

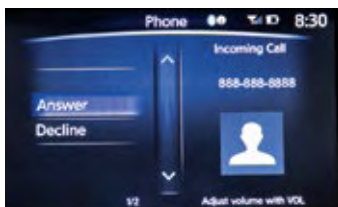

Navigation System (if so equipped)

- **INFINITI CONTROLLER** - Turn to highlight an item and press **ENTER** to select the highlighted item on the upper display menu screen. On the map screen, turn to adjust the map scale. To scroll the map, push the controller in the direction you want to scroll.
- 01** Upper Display - Displays the map and can be controlled by the Infiniti controller.
 - 02** Lower Display - Displays navigation functions and is not controlled by the Infiniti controller. Press the **MENU** button below the lower display to access the navigation functions.
 - 03** Map Scale - Touch to display the scale bar. Touch **"ZOOM IN"** or **"ZOOM OUT"** to adjust the map scale.
 - 04** **Street Address** - Touch to search for a destination by entering an address.
 - 05** **Points of Interest** - Touch to search for a destination from different categories of businesses or locations.
 - 06** **Home** - Touch to search for a route from the vehicle's current location to the stored home location.
 - 07** **Destination** - Touch to view multiple ways to set a destination.



For more information, refer to the **"Navigation (section 9)"** of your InTouch Owner's Manual.

HomeLink® Universal Transceiver

- The HomeLink® system can learn and consolidate the functions of up to three different handheld transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.



For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.



INFINITI.



To view detailed instructional videos,
go to www.infinitiownersinfo.mobi/2014/q50
or snap this barcode with an appropriate
barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your INFINITI retailer or contact Nissan North America, Inc.