

Thank you for purchasing an INFINITI automobile. This user's manual is for the navigation system only. This manual contains operating instructions for the INFINITI Navigation System offered in the INFINITI G35.

Please read this manual carefully to ensure safe operation of the navigation system.

- Please read your vehicle's owner's manual first.
- Do not remove this manual from the vehicle when selling this vehicle. The next user of this navigation system may need the manual.
- Because of possible specification changes, parts of this manual may not apply to your vehicle.
- All information, specifications and illustrations in this manual are those in effect at the time of printing. INFINITI reserves the right to change specifications or design at any time without notice.

CONTENTS

INTRODUCTION	1-1
HOW DOES THE INFINITI NAVIGATION SYSTEM WORK?	2-1
WHAT FEATURES ARE AVAILABLE ON THE INFINITI NAVIGATION SYSTEM?....	3-1
HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?.....	4-1
HOW DO I PROGRAM A DESTINATION?.....	5-1
HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?	6-1
HOW DO I USE THE ADDRESS BOOK FEATURE?	7-1
HOW DO I USE THE AVOID AREA FEATURE?	8-1
HOW DO I USE THE AUTOMATIC REROUTING FEATURE?	9-1
HOW DO I USE THE VOICE GUIDANCE FEATURE?	10-1
HOW DO I ADJUST THE DISPLAY?	11-1
HOW DO I USE THE VEHICLE INFORMATION?	12-1
INFORMATION ON MAP DATA DISCS	13-1
TROUBLESHOOTING GUIDE	14-1
INDEX	15-1

1 INTRODUCTION

How to use this manual	1-2
For safe operation	1-2
Reference symbols.....	1-2
Safety note.....	1-2

INTRODUCTION

HOW TO USE THIS MANUAL

This manual uses special words and icons, organized by function. Please refer to the following items and familiarize yourself with them.

The display and control panel are combined for G35 model navigation system.

FOR SAFE OPERATION



WARNING

This is used to indicate the presence of a hazard that could cause death or serious personal injury. To avoid or reduce the risk, the procedures must be followed precisely.



CAUTION

This is used to indicate the presence of a hazard that could cause minor or moderate personal injury or damage to your vehicle. To avoid or reduce the risk, the procedures must be followed carefully.

NOTE:

This indicates an item to help you understand the maximum performance of your vehicle. If ignored, it may lead to a malfunction or poor performance.

REFERENCE SYMBOLS

INFO:

This indicates information necessary for efficient use of your vehicle or accessories.

DEST button

This is a button on the control panel.

View key

This is a select key on the screen. By selecting this key you can proceed to the next function.

SAFETY NOTE

This system is primarily designed to help you reach your destination, and also performs other functions as outlined in this manual. However, you, the driver, must use the system safely and properly. Information concerning road conditions, traffic signs and the availability of services may not always be up-to-date. **The system is not a substitute for safe, proper, and legal driving.**

Before using the navigation system, please read the following safety information. Always use the system as outlined in this manual.

INTRODUCTION



WARNING

- *When the driver operates the navigation system or uses the joystick (screen function), first park the vehicle in a safe place and set the parking brake. Using the system while driving can distract the driver and may result in a serious accident. Destinations cannot be set while the vehicle is in motion.*
- *Do not rely on voice guidance alone. Always be sure that all driving maneuvers may be made legally and safely to avoid an accident.*
- *Do not disassemble or modify this system. If you do, it may result in accidents, fire, or electrical shock.*

- *Do not use this system if you notice any malfunction such as a frozen screen or lack of sound. Continued use of the system may result in accident, fire, or electrical shock.*
- *If you notice any foreign object in the system hardware or spilled liquid, or notice smoke or a smell coming from it, stop using the system immediately and contact your nearest INFINITI dealer. Ignoring such conditions may lead to accidents, fire, or electrical shock.*

NOTE:

Some states/provinces may have laws limiting the use of video screens while driving. Use this system only where legal.

2 HOW DOES THE INFINITI NAVIGATION SYSTEM WORK?

What is a navigation system?.....	2-2
About the navigation system	2-2
What is GPS (Global Positioning System)?	2-2
Accuracy of positioning.....	2-2
Positioning adjustment.....	2-3
Receiving signals from GPS satellites...	2-3
Display of GPS information	2-3
Detailed map coverage areas (MCA) for the navigation system	2-4

HOW DOES THE INFINITI NAVIGATION SYSTEM WORK?

WHAT IS A NAVIGATION SYSTEM?

ABOUT THE NAVIGATION SYSTEM

This navigation system combines the data obtained from the vehicle (by gyro sensor) and from GPS (Global Positioning System) satellites to calculate the current location of the vehicle. This position is then displayed on the screen, allowing route guidance to a destination.

WHAT IS GPS (GLOBAL POSITIONING SYSTEM)?

GPS is a system developed and operated by the U.S. Government, covering the entire planet. This navigation system receives three or more different radio signals from NAVSTAR (GPS satellites), orbiting the earth 13,049 miles (21,000 km) above ground. The data from different sets of signals will be trigonometrically calculated to obtain the position of the vehicle.

INFO:

The tracking center in the U.S. controls signals transmitted from GPS satellites. This control sometimes results in reduced accuracy or no signal received at all.

ACCURACY OF POSITIONING



The color of the GPS Indicator  on the upper left corner of the screen indicates positioning as follows:

- Green: When positioning is possible and accurate
- Yellow: When positioning is possible but not accurate
- Gray: When positioning is not possible

HOW DOES THE INFINITI NAVIGATION SYSTEM WORK?

INFO:

For approximately 3 or 4 minutes after system startup, the GPS indicator  remains gray, even if accurate positioning is possible.

POSITIONING ADJUSTMENT

When the system judges that the vehicle position information is not accurate based on vehicle speed and gyro sensor data calculations, the system will adjust the vehicle position information using GPS signals.

RECEIVING SIGNALS FROM GPS SATELLITES

Sometimes, satellite reception is weak. The following are places where signals tend to be weak:

- Inside tunnels and parking lots in buildings
- Areas with numerous tall buildings
- Under multi-layered highways
- In a dense forest

Vehicles in these areas may not receive GPS signals (Indicator color: gray).

INFO:

The antenna for GPS is located in the instrument panel. **Do not place any object, especially mobile phones or transceivers, on the instrument panel.** Because the strength of the GPS signals is approximately one billionth of that of TV waves, phones and transceivers will decrease the strength or may totally disrupt the signals.

DISPLAY OF GPS INFORMATION

This system displays GPS information.

Please refer to "GPS information display" on page 11-13.

NOTE:

Directional guidance provided by the navigation system does not take carpool lane driving into consideration, especially when carpool lanes are separated from other road lanes.

HOW DOES THE INFINITI NAVIGATION SYSTEM WORK?

DETAILED MAP COVERAGE AREAS (MCA) FOR THE NAVIGATION SYSTEM

This system is designed to help you reach your destination, and also performs other functions as outlined in this manual. However, you, the driver, must use the system safely and properly. Information concerning road conditions, traffic signs and the availability of services may not always be up-to-date. The system is not a substitute for safe, proper, and legal driving.

Map data covers select metropolitan areas in the United States.

Map data consists of map DVD-ROM. For information about map DVD-ROMs, contact an INFINITI dealer or call the Infiniti Navigation System help desk at 800-662-6200 for U.S. or 800-361-4792 for CANADA.

Map data includes 2 types of areas: "Detailed coverage areas" providing all detailed road

data and other areas showing "Main roads only".

NOTE:

Detailed map data is not available in many areas and is generally limited to select major metropolitan areas.

For information on which metropolitan areas are in detailed coverage areas, please refer to the Infiniti Navigation System Software Booklet (included). When you purchase an updated map DVD-ROM, a new software booklet will be provided.

WHEN A GRAY ROAD IS DISPLAYED ON THE MAP

- Route calculation may not be possible when a destination or the current vehicle location is near a gray road.
- When setting a destination, the road near the cross cursor blinks. For gray roads, however, the road may not blink.

- When you are driving on a gray road after the vehicle has deviated from the suggested route during route guidance, automatic re-routing may not start immediately.
- Route guidance (enlarged view and voice guidance) may not be done at the intersection where the road your vehicle is driving on and a gray road intersect.
- POI information and street names near gray roads are not contained in the map data.

3 WHAT FEATURES ARE AVAILABLE ON THE INFINITI NAVIGATION SYSTEM?

Route guidance.....	3-2
Point of interest (POI) directory	3-2
Address book.....	3-2
Avoid area.....	3-2
Automatic re-route	3-3
Detour	3-3
Birdview™	3-3
Voice guidance	3-3
Short menus.....	3-4

WHAT FEATURES ARE AVAILABLE ON THE INFINITI NAVIGATION SYSTEM?

ROUTE GUIDANCE

The main feature of the Infiniti Navigation System is Visual and Audio Route Guidance in selected detailed map coverage areas. Utilizing a network of GPS (Global Positioning System) satellites, the Infiniti Navigation System tracks your location on the map and directs you where you want to go.

Once you program a destination covered by a detailed map, the Infiniti Navigation System will determine a route from your current location to your destination. The moving map display and turn-by-turn voice commands help the driver determine upcoming turns.

This feature can be especially helpful in finding unfamiliar locations or businesses. The system may be unable to set a destination and/or calculate distance when a destination is outside a detailed map coverage area. Additionally, audio route guidance may not be available if the destination is outside a detailed map coverage area. For more information on how to program

a destination, please refer to section 5.

POINT OF INTEREST (POI) DIRECTORY

The Infiniti Navigation System offers an extensive Point of Interest directory in detailed map coverage areas for your convenience. This directory includes a wide variety of destinations ranging from gas stations, ATMs, and restaurants to casinos, ski resorts, shopping centers and businesses. By accessing the Point of Interest directory, you can search for addresses and phone numbers for a destination, and with a press of a button, the Infiniti Navigation System will calculate a route to the destination.

The Point of Interest directory offers many uses. For example, the directory can be sorted by the various types of restaurants near your current location. If you need an ATM or gas station, the Infiniti Navigation System can point you to the closest one or the closest one of your favorite brand.

For more information on how to use the Point of Interest directory, please refer to section 6.

ADDRESS BOOK

Using the Address Book feature, you will have the ability to store up to 50 locations into a personal directory in detailed map coverage areas. This is especially useful for frequently visited locations, such as your clients, relatives, or friends. The Address Book feature will provide you with easy access to these frequently visited locations when setting them as your destination.

For more information on how to use your address book, please refer to section 7.

AVOID AREA

By using the Avoid Area feature, you can identify areas or freeways that you would like the Infiniti Navigation System to avoid when plotting routes. For example, if you know of a freeway or area that is always congested with traffic, you can program the Infiniti Navigation

WHAT FEATURES ARE AVAILABLE ON THE INFINITI NAVIGATION SYSTEM?

System to plot routes that go around that particular freeway or area.

For more information on the Avoid Area feature, please refer to section 8.

AUTOMATIC RE-ROUTE

If you miss a turn while using the Route Guidance feature, the Infiniti Navigation System will automatically re-calculate a new route to your destination.

For more information on the Automatic Re-Route feature, please refer to section 9.


DETOUR

If you hear about a traffic accident on the radio that is 4 miles (6 km) ahead of you and traffic is backing up fast, you can use the Detour function to calculate an alternative route that will help you avoid the gridlock caused by the traffic accident. The Infiniti Navigation System has the ability to find an alternative route using secondary roads that will return you to primary

roads after a specified number of miles.

For more information on the Detour feature, please refer to section 9.

BIRDVIEW™

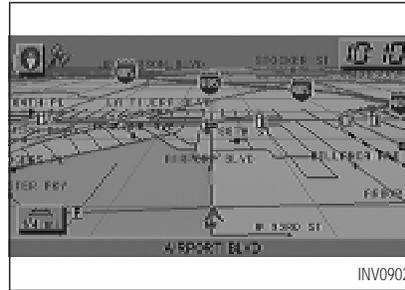

The Infiniti Navigation System gives you a choice of two map viewing styles, a normal 2-dimensional PLANVIEW map and the 3-dimensional BIRDVIEW™ map. The 3-D BIRDVIEW™ map depicts a geographic area as seen from an elevated perspective, so you will get a better feel for the route ahead.

For more information on the BIRDVIEW™ feature, please refer to section 11.

VOICE GUIDANCE



Route guidance is executed using voice and screen instruction. When the vehicle approaches an intersection where you need to turn, the voice guidance tells you the direction to take.

The system also has the following useful features:

- Enlarged display of intersections.

WHAT FEATURES ARE AVAILABLE ON THE INFINITI NAVIGATION SYSTEM?

- Automatic re-routing when a vehicle is off the course (when map is displayed).

For more information on the Voice Guidance feature, please refer to section 10.

SHORT MENU



To make the Infiniti Navigation System easier to use, there is a short menu function in which various operation items are reduced in number. When the indicator is illuminated, the short menus (Easy Mode) are displayed. When the indicator is turned off, the default naviga-

tion systems menu (Expert Mode) are displayed.

INFO:

- [Easy Mode] is the default setting on the initial screen at the delivery of your new vehicle.
- Term [Expert Mode] is used in this manual when the [Short Menu] key indicator is turned off. When the green indicator is highlighted, the system is set to [Easy Mode].
- When the [SETTING], [DEST] or [ROUTE] button is pressed in the [Easy Mode] screen, the [Help] key is displayed.

For more information on the Short Menu feature, please refer to section 4.

4 HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

Opening/closing the liquid crystal (LC) display	4-2	Notes on route guidance.....	4-21
How to open the LC display	4-2	About the display error	4-23
How to close the LC display	4-2		
Control panel button functions	4-4		
Names of the components	4-5		
How to use the joystick and the push enter button	4-6		
How to use the PREVIOUS button	4-6		
How to use the CANCEL button	4-6		
How to use the SETTING button	4-8		
How to use the DEST button	4-11		
How to use the ROUTE button	4-13		
How to eject/insert the disc	4-15		
Setting up the start-up screen	4-16		
Confirmation of destination or waypoint	4-16		
Clearing the memory	4-19		
Setting the average speed	4-20		
About route guidance	4-21		

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

OPENING/CLOSING THE LIQUID CRYSTAL (LC) DISPLAY

When you use this system, make sure the engine is running.

NOTE:

If you use the system with the engine not running (ignition ON or ACC) for a long time, it will use up all the electricity in the battery, making it impossible to start the engine.

HOW TO OPEN THE LC DISPLAY

CAUTION


- Do not place any objects on the instrument panel. If you drop any objects onto the instrument panel

or spill liquid on it, it may result in system malfunction.

- When the liquid crystal display is not used (such as during parking), store it.

Press the button at the upper part of the liquid crystal display.

The liquid crystal display will come out of the upper part of the instrument panel.

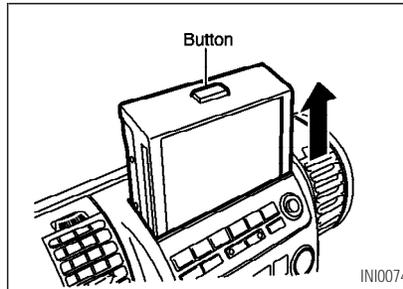

IN10074

INFO:


- If it is difficult to watch the screen due to sunlight, tilt the display forward or backward to adjust to the desired angle.
- To protect the liquid crystal display, as much as possible, store it when it is not used.

HOW TO CLOSE THE LC DISPLAY

Push the center of the upper part of the display.

The display will be stored in the upper part of the instrument panel.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

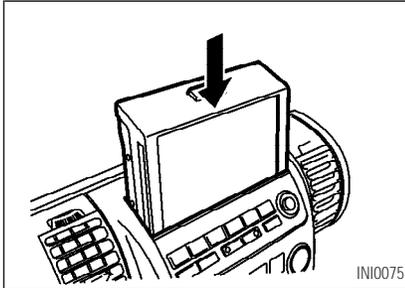


INFO:

- To protect the liquid crystal display, as much as possible, store it when it is not used.
- **When the liquid crystal display is tilted, return it to the original position and then store it. If it is pushed under tilted conditions, it may be difficult to store.**
- If the side of the display is pushed, it may be difficult to store.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?


CONTROL PANEL BUTTON FUNCTIONS

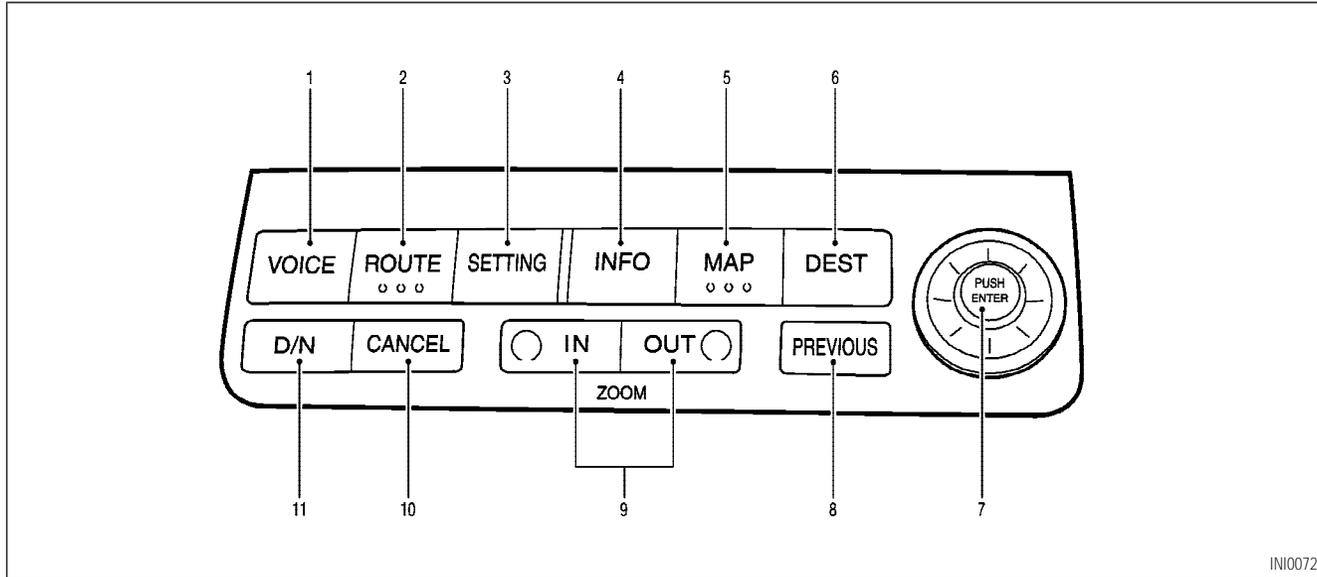

INI0072

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

NAMES OF THE COMPONENTS

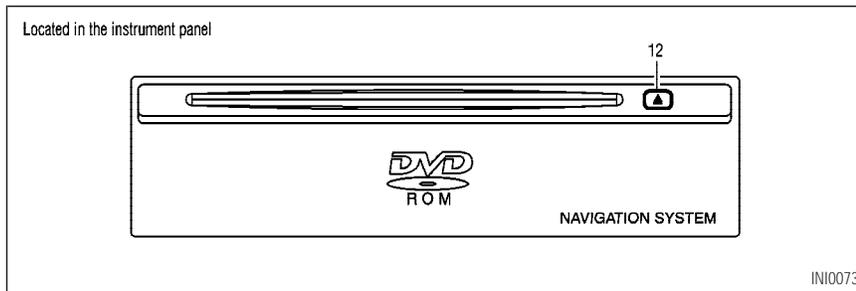

1. **VOICE** button; refer to page 10-4.
Provides upcoming voice command from the current location.
2. **ROUTE** button; refer to page 4-13.
Displays the setting menu screen at the time of route calculation.
3. **SETTING** button; refer to page 4-8.
Performs various adjustments and settings to help you use the navigation system more effectively.
4. **INFO** button; refer to section 12.
Displays the [VEHICLE INFORMATION] or [WARNING] screen.
5. **MAP** button; refer to page 5-32.
Toggles between the intersection and the map during route guidance. Returns to the map screen from the settings screen.
6. **DEST** button; refer to page 4-11.
Displays the "Set a Destination" menu.
7. **JOYSTICK** and **PUSH ENTER** button; refer to page 4-6.
Scrolls the map, selects and sets each setting item.
8. **PREVIOUS** button; refer to page 4-6.
Returns to the previous screen during set-up.
Finishes the set-up after it is completed.
9. **ZOOM IN** / **ZOOM OUT** button; refer to page 11-2.
Alters the scale of the map display.
10. **CANCEL** button; refer to page 4-6.
Cancels operations or the route guidance.
11. **D/N** (Day/Night) button; refer to page 11-19.
Changes display brightness.
12. **EJECT** button; refer to page 4-15.
Ejects the DVD-ROM.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

HOW TO USE THE JOYSTICK AND THE PUSH ENTER BUTTON

The navigation system is operated basically by selecting keys on the screen with the joystick and pressing the PUSH ENTER button. Be sure to understand the operation of the joystick before using the navigation system.

Selecting the keys on the screen

Use the joystick to select keys on the screen.

The joystick can be tilted in eight directions. The selected key will be used highlighted in yellow.

INFO:

Use the joystick to scroll the map.

Carrying out the function of the selected key

Press the PUSH ENTER button.

The display shows the screen used to carry out

the function of the selected key (highlighted in yellow).

HOW TO USE THE PREVIOUS BUTTON

This button has two functions.

To return to the previous screen:

When this button is pressed during setup, setup will be canceled, and the screen will return to the previous screen.

To finish the set-up:

When this button is pressed after set-up is completed, the settings will be renewed as directed, and the screen will return to the map.

INFO:

When the PREVIOUS button must be pressed, (for example, after the set-up is finished) instructions are given in the operation procedure of each section in this manual. If the PREVIOUS button is pressed when not fin-

ished with the set-up, the setting will be canceled, and the screen will return to the previous screen.

HOW TO USE THE CANCEL BUTTON

This button has two functions:

- Operation is canceled when pushed during operation.
- The [CONFIRMATION] screen is displayed during route guidance in the present location map.




HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

When the **CANCEL** button is pressed, the **[CONFIRMATION]** screen is displayed with the following three keys.

- All Destinations
- Waypoint 1
- Do not Cancel

When the **All Destinations key is selected**

The route guidance is turned off temporarily.

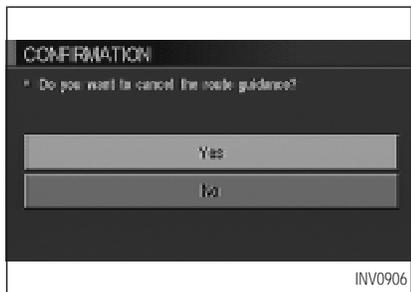

1. Select the **All Destinations** key.

2. When the **Yes** key is selected, the route guidance is turned off.

INFO:


- When the **No** key is selected, the map will be displayed. When the **PREVIOUS** button is pressed, the previous screen will be displayed.
- To restart the route guidance, press the **VOICE** button.

When the **Waypoint 1 key is selected**

INFO:

This key can be selected only when a waypoint is set.

Route guidance to the next waypoint is deleted.

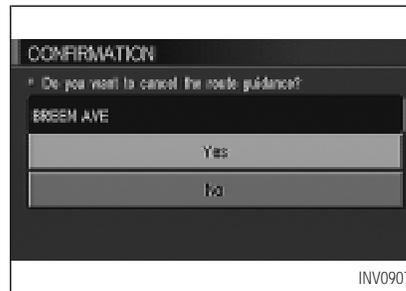

1. Select the **Waypoint 1** key.
2. When the **Yes** key is selected, the waypoint is deleted and route calculation will start.

INFO:

When the **No** key is selected, the map will be displayed. When the **PREVIOUS** button is pressed, the previous screen will be displayed.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

When the **Do not Cancel** key is selected

The [Confirmation] screen will return to the map screen.

HOW TO USE THE SETTING BUTTON



When the **SETTING** button is pressed, the [SETTINGS] screen is displayed.



WARNING

For safety, some of the functions on the menu will be disabled while the vehicle is moving. To use the temporarily disabled functions, park the vehicle in a safe place, shift to P or N, and set the parking brake.

To use the navigation system more effectively, various adjustments and settings can be performed.

Clock key:

To adjust the time, select the **Clock** key. Please refer to page 11-21.

Display key:

The key also adjusts the display mode. Please refer to page 11-17.

Language/Unit key:

Changes language and unit. Please refer to page 4-9.

Navigation key:

Changes various settings of the navigation system. Please refer to page 4-9.

Short Menu key:

This key changes between [Expert Mode] and [Easy Mode].

Please refer to page 3-4.

Guidance Volume key:

Adjusts or turns off volume of the voice guidance.

Please refer to "Adjusting the guide volume" on page 10-2.

Help key:

Only easy mode (short menus).

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?


You can see the explanation of navigational functions.

When **Language/Unit** key is selected

1. The following display will appear when selecting the **Language/Unit** key and pressing PUSH ENTER button.

Language: English or French


Unit: US — Mile, MPG
Metric — km, /100 km

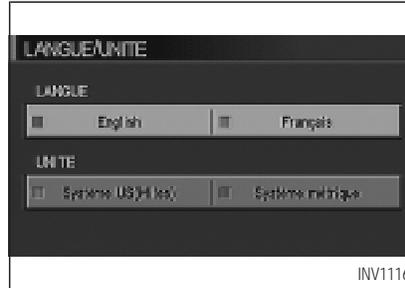

2. You can select the language and unit using the joystick and PUSH ENTER button.

When the **Navigation** key is selected

The following display will appear when selecting the **Navigation** key and pressing the PUSH ENTER button.

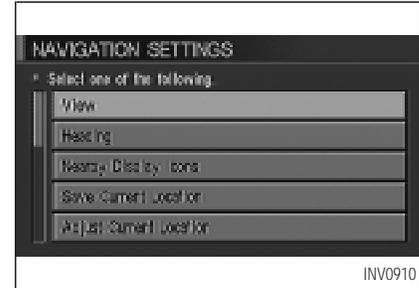

View key:

This will let you choose between Birdview™ display and Planview display.

Please refer to "Switching between Birdview™ and Planview displays" on page 11-3.

Heading key:

You can set the map either to show the vehicle's current forward direction as up, or to show North as up.

Please refer to "Changing the display direction" on page 11-7.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

Nearby Display Icons key:

Displays five types of points of interest around the current location.

Please refer to “Setting with the nearby key” on page 6-11.

Save Current Location key:

Stores the current vehicle location in the address book.

Please refer to “Storing current vehicle position” on page 7-3.

Adjust Current Location key:

Corrects the location and direction of the vehicle icon.

Please refer to “Updating the current vehicle location and the direction” on page 11-14.

Auto Re-route On/Off key:

A new route to the desired destination will automatically be calculated again from the loca-

tion when the vehicle is off the suggested route during route guidance.

Please refer to “Automatic re-routing” on page 9-2.

Avoid Area Settings key:

Defines areas to avoid when calculating a route.

Please refer to “Setting avoid areas” on page 8-2.

Button Tone/Beep Response key:

This key is used to turn on/off the automatic beep sound.

Please refer to “Setting automatic beep sound” on page 11-16.

Clear Memory key:

Clears all the stored memory (Address Book, Avoid Area, Previous Dest.).

Please refer to “Clearing the memory” on page 4-19.

Edit Address Book key:

Changes the names and positions of the registered locations.

Please refer to “Setting up and editing the address book” on page 7-2.

GPS Information key:

GPS information will be displayed.

Please refer to “GPS information display” on page 11-13.

Quick Stop Customer Settings key:

Sets the user-defined [Quick Stop] POI (Point Of Interest).

Please refer to “Quick stop customer settings” on page 5-37.

Set Average Speed for Estimated Journey Time

key:


Please refer to “Setting the average speed” on page 4-20.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

Tracking On/Off key:

You can choose whether to display the path from the start to the current position.

Please refer to “Displaying the track” on page 11-12.

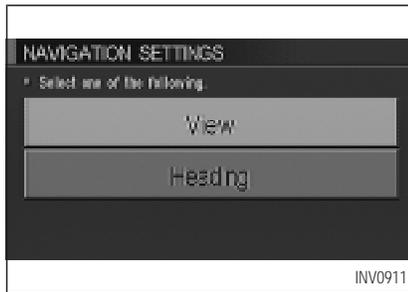

Easy Mode — when Short Menu key is selected

View key:

Same as in Expert Mode.

Heading key:

Same as in Expert Mode.

HOW TO USE THE DEST BUTTON

Sets destinations (final destination and waypoints) to search for a route.



This will activate various navigational functions.



WARNING

For safety, some of the functions on the menu will be disabled while the vehicle is moving. To use the temporarily disabled functions, park the vehicle in a safe place and shift to P or N, and set the parking brake.

- Address Book key:

Use this category item if you want to go to places stored in the address book.

Please refer to “Setting with Address Book key” on page 5-3.

- Previous Dest. key:

You can choose destinations from the last 10 destinations set.

For details, please refer to “Setting with Previous Dest. key” on page 5-5.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

- **Address/Street key:**

Use this category item if you know the city name, street name and house number of the destination (waypoints).

Please refer to “Setting with **Address/Street** key” on page 5-6.

- **Intersection key:**

Sets a destination using the intersection of 2 streets.

Please refer to “Setting with **Intersection** key” on page 5-12.

- **Point of Interest (POI) key:**

Use this category item if you want to go to a restaurant, hotel, gas station or other facility.

Please refer to “Setting with **Point of Interest (POI)** key” on page 6-2.

- **City key:**

Sets the destination (waypoint) on the map

screen of the area around the input city.

Please refer to “Setting with **City** key” on page 5-18.

- **Phone Number key:**

Use this category item when the destination phone number is known.

Please refer to “Setting with **Phone Number** key” on page 5-22.

- **Map key:**


Use this category item if you want to choose the place directly on the map display.

Please refer to “Setting with **Map** key” on page 5-24.

- **Country key:**

This key is used to retrieve a location in another country when it is set as the destination (waypoint).

Please refer to “Setting with **Country** key” on page 5-25.

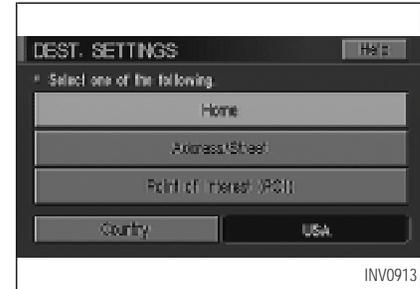

Easy Mode — when the Short Menu key is selected

- **Help key:**

You can see the explanation of the navigational functions.

- **Home key:**

When you set your home in the address book, a route home will be calculated by selecting this key.

If the home is not set beforehand, the setting

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

mode will appear to input the home address.

Please refer to “Setting with **Home** key” on page 5-26.

Address/Street key:

Same as in Expert Mode.

Point of Interest (POI) key:

Same as in Expert Mode.

Country key:


Same as in Expert Mode.

HOW TO USE THE **ROUTE** BUTTON

When the **ROUTE** button is pressed while the current location is displayed on the screen, the display shows the following keys.

INFO:

When no operations are executed after a few seconds, the keys will disappear automatically.

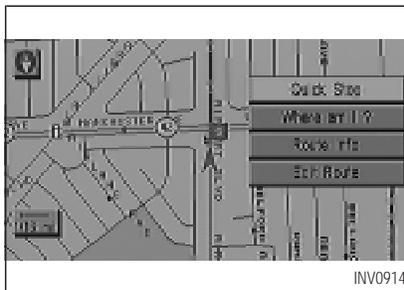

Quick Stop key:

Selects the destination (waypoints) from a list of 5 commonly used POI (Points of Interest).

Please refer to “Quick stop” on page 5-36.

Where am I? key:

Displays the street where the vehicle is currently located, the previous street, and the upcoming street.

Please refer to “Where am I” on page 5-39.

Route Info key:

Displays the route to the destination. There are three types of display methods.

Complete Route key:

Displays the entire routes from the current location to the destination.

Please refer to “Displaying the complete route to the destination” on page 11-9.

Turn List key:

Displays a list of the guidance points for the entire routes to the destination on a simple map.

Please refer to “Displaying turn list” on page 11-10.

Route Simulation key:

Performs a simulation drive on the map screen by moving a vehicle icon on all the routes from the current location to the destination.


HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

Please refer to “Requesting the simulation drive to the destination” on page 11-11.

Edit Route key:

Resets the set destination (waypoint).

Please refer to “Making the system guide the route with detailed options” on page 5-27.

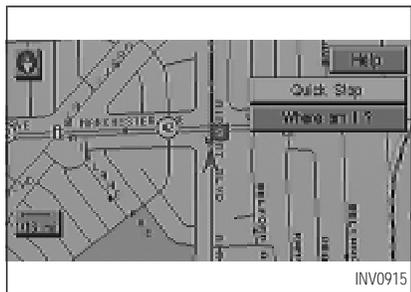

Easy Mode — when the Short Menu key is selected

Help key:

You can see the explanation of the navigation functions.

Quick Stop key:

Same as in Expert Mode.

Where am I? key:


Same as in Expert Mode.

Keys that appear when the map is scrolled with the joystick

You can scroll the map display and get information about the area near your vehicle and the destination using the joystick.

INFO:

- This function can be used when the original map disc is inserted.
- You can operate this with the map display on.
- This function cannot be used when the system is calculating the route or drawing the screen.

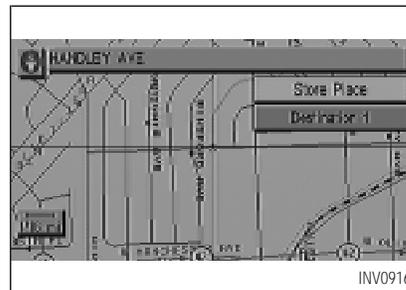

Store Place key:

You can store the location with the cross pointer.

Please refer to “Storing current vehicle position” on page 7-3.

Destination # key:

You can set the position as a destination, using the cross pointer. The maximum number of destinations is six, and the last one stored will be the final destination. (# will appear on the map to denote the selected locations from 1 to

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

6.) Please refer to "Making the system guide the route with detailed options" on page 5-27.

HOW TO EJECT/INSERT THE DISC

INFO:





The navigation system is installed in the upper glove box.

This system is provided with the map DVD-ROM.

NOTE:

Please take great care in handling the disc.

1. Open the cover located on the upper part of the sub-glove box.

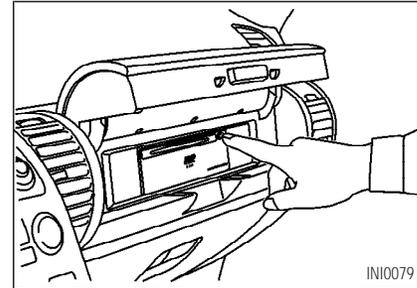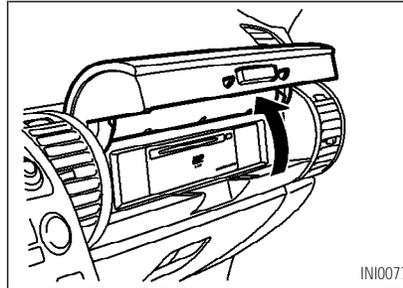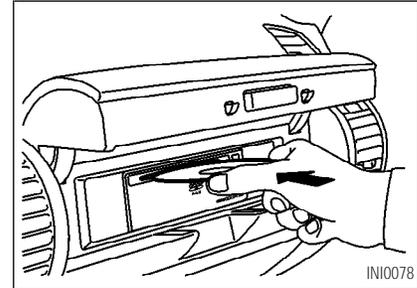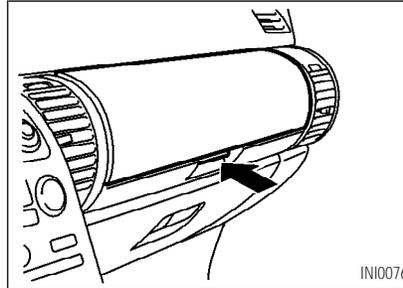

2. To insert a disc:
It will be drawn in automatically. You do not have to push it in all the way.

To eject the disc:
Press the  button.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

3. Close the cover.



CAUTION

- *The included map DVD-ROM is designed specifically for your navigation system. Do not use it in another system as it could cause a malfunction.*
- *Do not allow the system to get wet. Excessive moisture such as spilled liquids may cause the system to malfunction.*

SETTING UP THE START-UP SCREEN



When you turn the ignition key to ACC, the above warning is displayed on the screen. If it is necessary to change language, select one of the languages, then press the PUSH ENTER button. Read the warning and select the **I Agree** key.

INFO:

If you do not press the PUSH ENTER button, the system will not proceed to the next step display.

CONFIRMATION OF DESTINATION OR WAYPOINT

When the engine is turned off during route calculation and then turned on, the [CONFIRMATION OF DEST./WAYPOINT] screen will be displayed after the [SYSTEM START-UP] screen.



In the [CONFIRMATION OF DEST./WAYPOINT] screen, the following four keys are displayed.

- To All Destinations

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

- From Next Waypoint
- Cancel Guidance
- Change (only in Expert Mode)


INFO:

When the **PREVIOUS** or **MAP** button is pressed in this screen, the [Turn by turn] screen will be displayed.


When the **To All Destinations key is selected**

Route guidance will start to all destinations/waypoints from the current location.

When the **From Next Waypoint key is selected**

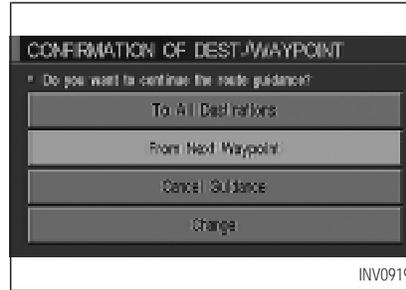

1. Select the **From Next Waypoint** key.

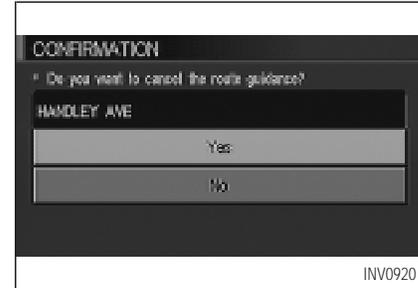

2. When the **Yes** key is selected, route guidance to the current waypoint is deleted and route calculation to the next destination will start.

INFO:

- If you do not want to delete the route guidance, select the **No** key and the screen will return to the map.
- This key can be selected only when a waypoint is set.
- When the **PREVIOUS** button is pressed,

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

the previous screen will be displayed.


Select the key when you want to start route guidance to the next waypoint/destination.

When the Cancel Guidance key is selected

The route guidance is canceled.



1. Select the Cancel Guidance key.

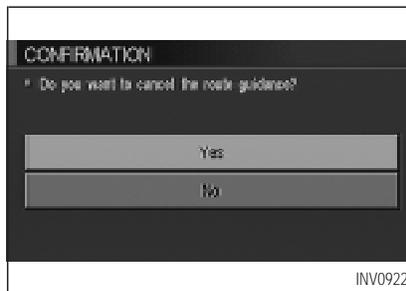

2. When the Yes key is selected, route guidance is canceled.

INFO:

- If you do not want to delete the route guidance, select the No key and the screen will return to the map.
- Press the VOICE button to activate the route guidance again.
- When the PREVIOUS button is pressed, the previous screen will be displayed.

When the Change key is selected

It is possible to edit the route guidance to the destination.


INFO:

This key is displayed only in [Expert Mode].



1. Select the Change key.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

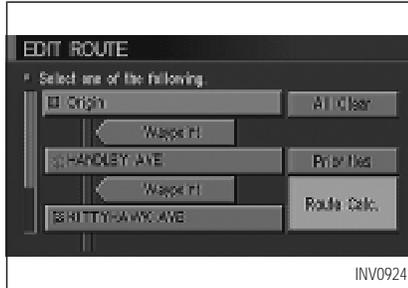


2. The [EDIT ROUTE] screen will be displayed. Please refer to "Setting the waypoints" on page 5-27.


CLEARING THE MEMORY

All the stored data (Address Book, Avoid Area, Previous Dest) can be cleared.


1. Press the [SETTING] button.

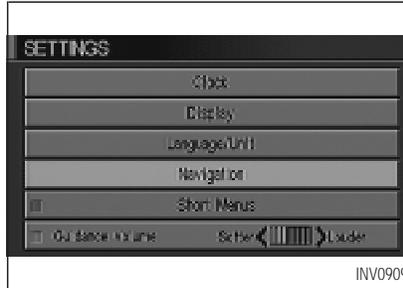


2. Select the [Navigation] key on the [NAVIGATION SETTINGS] screen.

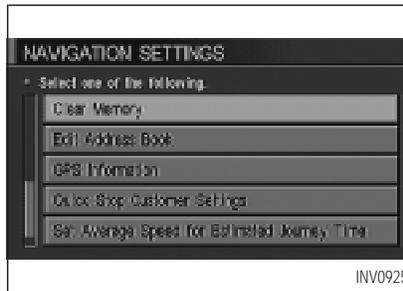

3. Select the [Clear Memory] key.

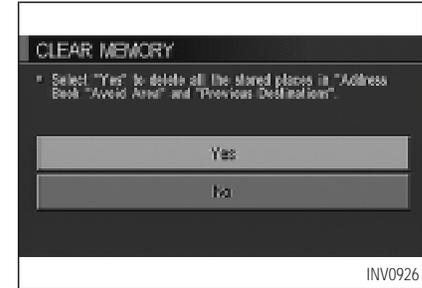

4. Select the [Yes] key.

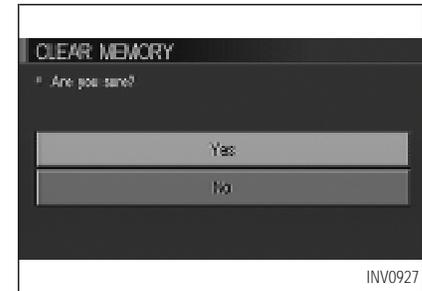

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

- When the **Yes** key is selected, the stored data will be cleared, and the [NAVIGATION SETTINGS] screen will appear.

SETTING THE AVERAGE SPEED


This navigation system can calculate and display the expected arrival time to the destination. To do this, set average vehicle speeds when driving on freeways, main roads and ordinary roads.

The following settings are available.


- Freeway
Default: 55 MPH (90 km/h)
Max: 70 MPH (110 km/h)
Min: 40 MPH (60 km/h)
- Main Roads
Default: 25 MPH (40 km/h)
Max: 50 MPH (80 km/h)
Min: 10 MPH (20 km/h)

- Others
Default: 15 MPH (25 km/h)
Max: 35 MPH (55 km/h)
Min: 5 MPH (10 km/h)

- Press the **SETTING** button.

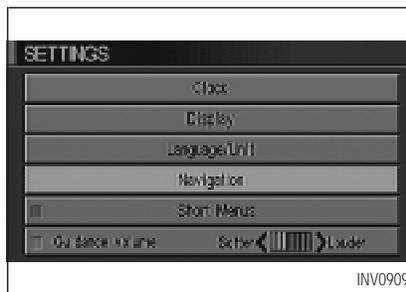


- Select the **Navigation** key on the [SETTINGS] screen.

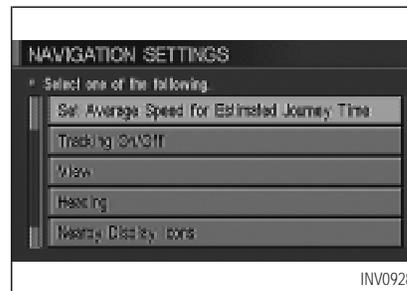

- Select the **Set Average Speed for Estimated Journey Time** key on the [NAVIGATION SETTINGS] screen.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

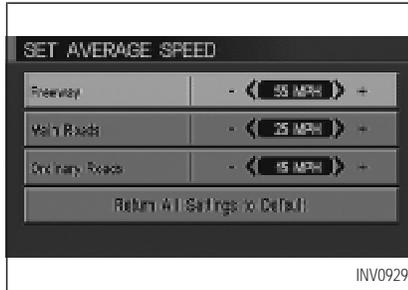

4. Move the joystick upward or downward to select an item you want to change.
5. Move the joystick left or right and set an average vehicle speed.

INFO:

- It is possible to set the item illuminated in yellow.
- When the **Return All Settings to Default** key is selected, all settings return to default.

ABOUT ROUTE GUIDANCE

- The Infiniti Navigation System may not calculate routes longer than about 1,100 miles (1,770 km). If your trip is longer than 1,100 miles (1,770 km), please divide your trip by selecting one or two intermediate destinations. Set your destination as the first intermediate destination. Once you pass the intermediate destination, you may set your final destination. Once you pass the intermediate destination, you may set your final destination as your destination if it is within 1,100 miles (1,770 km). Otherwise, set your destination using your second intermediate destination.

NOTE:

The navigation system does not take driving in "CAR POOL LANES" into consideration for the guidance, especially when carpool lanes are separated from other road lanes.

NOTES ON ROUTE GUIDANCE

- The route selected by the system may not be the shortest, nor are other circumstances such as traffic jams considered.
- Because of the inevitable difference in road conditions and circumstances between the time you use this system and the time the information was produced from the DVD, there may be discrepancies in roads and regulations. In such cases, follow the actual information available.
- During route calculation, the map will not scroll, however the vehicle icon will move with the actual vehicle's movement.
- During route calculation, buttons such as **MAP**, **DEST**, **ZOOM OUT** and **ZOOM IN** and the joystick will be disabled.
- In some cases, after the calculation is complete, it may take some time to get the calculated route on the display.

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

- Waypoints that have been passed will not be covered by the re-routing calculation.
- If you scroll the map while the suggested route is being drawn, it may take more time to finish drawing.
- If waypoints are set, the system is calculating multiple routes between waypoints simultaneously, and the following may result.
 - If one section (or more) of the routes between the waypoints is not found, none of the route will be displayed.
 - The route may not connect completely at some waypoints.
 - The route may require a U-turn close to some waypoints.
- Route calculation may not be completed in the following cases.
 - If there is no main road within 3.1 miles (5 km) from the vehicle, a message saying so will appear on the screen. Try requesting route calculation when the vehicle is closer to the main road.
 - If there is no main road within 3.1 miles (5 km) from the destination or waypoint, a message saying so will appear on the screen. Try setting the location closer to the main road.
 - If the vehicle is too close to the destination or if there are no branches of the roads to the destination. A message saying so will appear on the screen.
 - If it is deemed impossible to reach the destination or waypoints because of traffic regulations, etc.
 - If the only route to reach the destination or waypoints is extremely complicated.
 - If the destination, current vehicle position or waypoint is within the *avoid area*.
 - If the setting of *avoid areas* covers the routes to the destination, route calculation may not be possible.
 - The following may occur when the route is being displayed.
 - Even if you are requesting calculation from the main road, the origin of the route may not exactly match the current vehicle position.
 - Even if you are requesting calculation to the destination on the main road, the end of the route may not exactly match the destination.
 - Even if you are requesting calculation from the main road, the system may show a route from another main road. This may be because the icon to show the current vehicle position (vehicle icon) is not set accurately. In that case, park the car in a safe place and reset the vehicle icon, or continue driving to see if the vehicle icon appears on the main road before requesting route calculation again.
 - There are cases in which the system shows

HOW DO I OPERATE THE INFINITI NAVIGATION SYSTEM?

a detoured route to reach the destination or waypoints, if you set them from memory or facility information. In order to correct this, you will have to be careful about the traffic direction, especially when the lanes with different travel directions are shown separately. Such places are interchanges and service areas.

- This system makes no distinction between limited traffic control and total control (blockage). It may show a detoured route even if the road is usable.
- Even if the freeway preference is set to OFF, the route may be set on them. To avoid this, set a waypoint on another road type and re-request calculation.
- Even if the preference is set as OFF for a ferry line, the route may be set on it. To avoid this, set a waypoint on a road and re-request calculation.
- Ferry lines, except those which accept only

pedestrians, bicycles and motorcycles, are stored in this system. When using them, take into consideration the travel time required and operational condition to decide whether to use them or not.

ABOUT THE DISPLAY ERROR

The following cases may affect the display accuracy of the vehicle's position or travel direction. The accuracy will return to normal if the driving conditions return to normal.

- When there is a similar road nearby.
- When the vehicle is traveling on a long stretch of straight road or series of curves with a large radius.
- When the vehicle is traveling in an area with a checkerboard road system.
- When the vehicle is making consecutive S curves.
- When the vehicle is at a large Y-shaped junction.

- When the vehicle is on a loop bridge.
- When the vehicle is on a snow-covered or unpaved road.
- When the vehicle has made several consecutive turns or traveled zigzag.
- When the vehicle is rotated on a parking lot turntable while the ignition switch is OFF.
- Immediately after the vehicle is driven out of a parking garage or underground parking lot.
- When the vehicle has different sizes of tires or tire chains.
- When the vehicle is moved immediately after the engine is started.

5 HOW DO I PROGRAM A DESTINATION?

Various ways to set the destination (or waypoint)	5-2	Setting with Country key	5-25
Expert mode categories	5-2	Setting with Home key	5-26
Easy mode categories	5-2	Having the system guide you to the destinations	5-27
Setting with Address Book key	5-3	Making the system guide the route with detailed options.....	5-27
Setting with Previous Dest. key	5-5	Adjusting and deleting the pre-set destination (waypoints).....	5-32
Setting with Address/Street key	5-6	To delete a destination.....	5-34
Setting with Intersection key	5-12	All clear	5-35
Setting with Point of Interest (POI) key	5-18	Quick stop.....	5-36
Setting with City key	5-18	Quick stop customer setting	5-37
Setting with Phone Number key.....	5-22	Where am I?.....	5-39
Setting with Map key	5-24		

HOW DO I PROGRAM A DESTINATION?

VARIOUS WAYS TO SET THE DESTINATION (OR WAYPOINT)



WARNING

To operate the navigation system or to use the screen functions, first park the vehicle in a safe place and set the parking brake. Using the system while driving can distract the driver and may result in a serious accident.



EXPERT MODE CATEGORIES

To set the destination and waypoints, you can choose from the eight categories described below. Use these options to choose the best way to find the route to the destinations and waypoints.

- Address Book
- Previous Dest
- Address/Street
- Intersection

- Point of Interest (POI)
- City
- Phone Number
- Map



EASY MODE CATEGORIES

When the Expert Mode is canceled, the following three categories will be displayed as Easy Mode.

- Home
- Address/Street

HOW DO I PROGRAM A DESTINATION?

- Point of Interest (POI)

INFO:

- Use the **Address Book** key and the **Point of Interest (POI)** key in the same way as in Expert Mode.
Please refer to “Setting with Address Book key” and “Setting with Point of Interest (POI) key” on pages 5-3 and 6-2.
- If the **Short Menu** key is highlighted in green in the [SETTING] screen, the screen is in Easy Mode. In this case, the keys displayed are different from the screen in Expert Mode.
- If you set a destination or waypoints, they will be displayed with icons.
- If you want to go to places close to the stored locations or facilities, use categories such as facility, nearby facility or memory for easier setting.
- When using either the Point of Interest

(POI) or nearby Points of Interest categories, the names called up can be set as the destination if you do not scroll the screen. If you want to choose a different place on the screen from the one called up, you will have to scroll the screen.

SETTING WITH **Address Book** KEY

The Address Book will allow you to store locations in the memory. This is especially useful for locations that you visit frequently.


Please refer to “Setting up and editing the address book” on page 7-2.



1. Press the **DEST** button.
2. Select the **Address Book** key on the [DEST. SETTINGS] screen.

The [DEST. SETTINGS (Address Book)] screen will be displayed.

HOW DO I PROGRAM A DESTINATION?

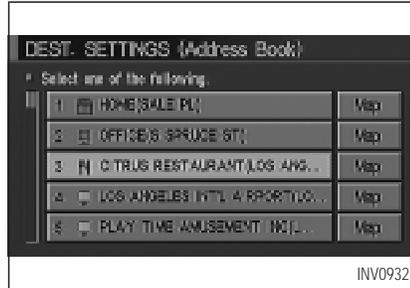

3. Select the item key of your destination (waypoints) on the [DEST. SETTINGS (Address Book)] screen.




4. To set the destination (waypoints), refer to “Making the system guide the route with detailed options” on page 5-27.



5. To slightly alter the destination.

Select the **Map** key to display the map screen of the area around the specified destination (waypoints).

HOW DO I PROGRAM A DESTINATION?

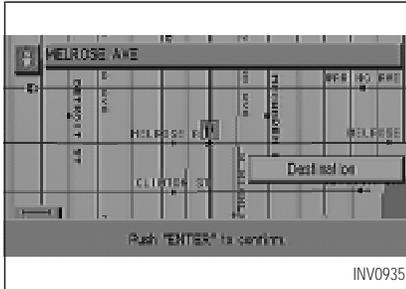

6. If necessary, operate the joystick to adjust the location of the destination (waypoint). Press the PUSH ENTER button. Select the **Destination** key to confirm. The [DEST. SETTINGS (Address Book)] screen will be displayed.

To set the destination (waypoint), refer to “Making the system guide the route with detailed options” on page 5-27.

SETTING WITH **Previous Dest.** KEY

This system memorizes the last 10 destinations previously chosen.


To set new destinations or waypoints from the previous destinations.



1. Press the **DEST** button.
2. Select the **Previous Dest.** key on the [DEST. SETTINGS] screen.

A total of 10 destinations and locations previ-

ously set will be displayed.

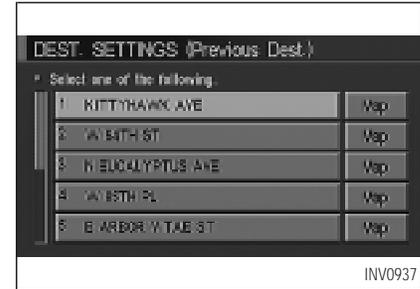


3. Select the item key of your destination (waypoints) on the [DEST. SETTINGS (Previous Dest.)] screen.

HOW DO I PROGRAM A DESTINATION?




4. To set the destination (waypoints), refer to “Making the system guide the route with detailed options” on page 5-27.

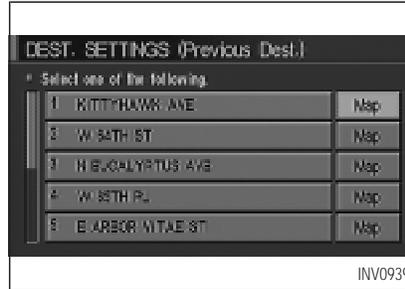

5. To slightly alter the destination.

Select the **Map** key to display the map screen of the area around the specified destination (waypoints).

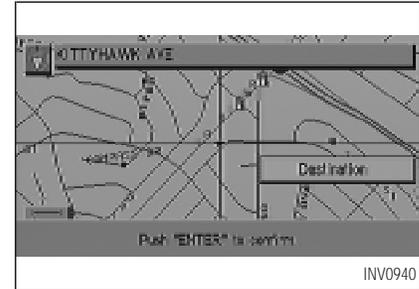

6. If necessary, operate the joystick to adjust the location of the destination (waypoints). Press the PUSH ENTER button. Select the **Destination** key to confirm. The [DEST. SETTINGS (Previous Dest.)] screen will be displayed.
- To set the destination (waypoints), refer to “Making the system guide the route with detailed options” on page 5-27.

SETTING WITH **Address/Street** KEY

Sets the destination (waypoints) from the street

HOW DO I PROGRAM A DESTINATION?

names and addresses that you enter.

There are two search methods; direct search by the street names, and search by the street names after the state and/or the city are defined.



1. First press the **DEST** button.
2. Select the **Address/Street** key.

NOTE:

If a house number is entered and it is not a “direct hit” for house numbers already

stored in the database, then only a map to the general vicinity will be displayed.



Setting with the **List** key

The **List** key is used when you know the names of the destination and waypoints.

1. A keyboard will be displayed on the [DEST. SETTINGS (Address/Street)] screen. Enter the street name you want to set.

INFO:

It is not possible to enter names if they are not

stored in the DVD-ROM.



2. Enter the street name of your destination. For example, enter **T**, then **U**.
3. Enter **U**, then select the **List** key. The list screen of street names which begin with **TU** will appear.

HOW DO I PROGRAM A DESTINATION?



- If less than 5 suggested streets remain, they will be displayed automatically.
- The city names and street names will be displayed.
- Use the joystick to scroll the display.
- When the **Next Search** key is selected, it is possible to narrow down cities. To use this function, refer to "Setting with the **City** key" on page 5-11.
- When the **PREVIOUS** button is pressed,

the screen to input street names will be displayed.

4. Select one street of your destination.



5. Enter the house number.

Select the **OK** key.


INFO:

It may be not possible to specify a location after selecting the **OK** key. In that case, a list of locations which correspond to the entered house number will be displayed.



6. To set the destination (waypoints), refer to "Making the system guide the route with detailed options" on page 5-27.

HOW DO I PROGRAM A DESTINATION?

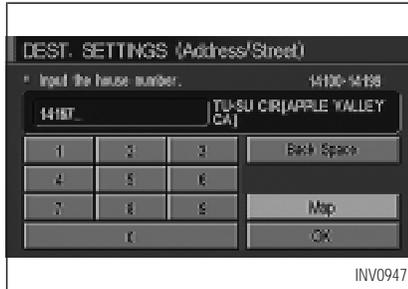


7. To slightly alter the destination.

Select the **Map** key to display the map screen of the area around the specified destination (waypoints).

INFO:

- An approximate location corresponding to the entered house number is displayed. If necessary, correct the location using the joystick.
- The location displayed by the calculation using the house number may differ from the

actual location. In that case, correct the location using the joystick.

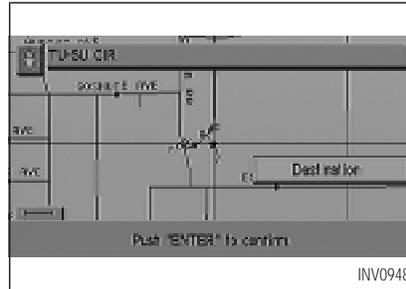

8. If necessary, operate the joystick to adjust the location of the destination (waypoint). Press the PUSH ENTER button. Select the **Destination** key to confirm. The [DEST. SETTINGS (Address/Street)] screen will be displayed.

To set the destination (waypoint), refer to "Making the system guide the route with detailed options" on page 5-27.



Setting with the **State** key

The **State** key is used when you select a state to set the destination.

1. Select the **State** key.

HOW DO I PROGRAM A DESTINATION?



2. The display shows the screen to select states.
Input a state name.



- When the Last 5 States key is selected in step 2, the history of the previous five settings will be listed.



3. The display shows the state list.
Select a state name.

HOW DO I PROGRAM A DESTINATION?



4. The screen returns to the [DEST. SETTINGS (Address/Street)] screen.

When the state is set, the display shows the selected state next to the [State] key.

Input the street name.

Please refer to "Setting with the [List] key" on page 5-7.



Setting with the [City] key

The [City] key is used when you select a city to set the destination.

1. Select the [Address/Street] key on the [DEST. SETTINGS (Address/Street)] screen.
Select the [City] key.
- The display shows the screen to retrieve cities.



2. Input a city name.



When the [Last 5 Cities] key is selected in

HOW DO I PROGRAM A DESTINATION?

step 2, the history of the previous five settings will be listed.

INFO:

It is not possible to select cities if they are not in the state you set.



3. The display shows the city list.
Select a city of your choice.



4. The screen returns to the [DEST. SETTINGS (Address/Street)] screen.


When the city is set, the display shows the selected city side **City** key.

Input the street name of your choice.

Proceed to "Setting with the **List** key" on page 5-7.

SETTING WITH **Intersection** KEY

This will allow you to set an intersection as a destination (waypoints).

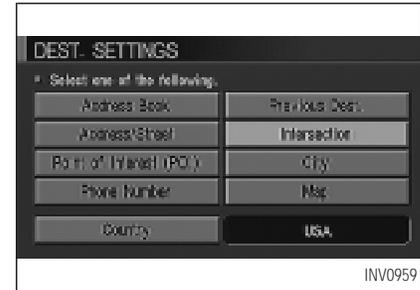

1. Press the **DEST** button.
2. Select the **Intersection** key.
A keyboard will be displayed.

HOW DO I PROGRAM A DESTINATION?



Setting with the **List** key

The **List** key is used when you know the names of the destinations and waypoints.

1. Enter the first street name where the destination (waypoints) is located using the keyboard, then select the **List** key.



2. Select the first street name using the same procedures.

INFO:

- When the **Next Search** key is selected, it is possible to narrow down states and cities. To use this function, refer to "Setting with the **City** key" on page 5-17.
- For a road where lanes with different traffic directions are shown separately, the list shows first street name, second street name, ...

- When entering a street name, enter a minor street name as the first street and the calculation will be easier and quicker.



3. Enter the 2nd (intersecting) street name, then select the **List** key.

INFO:

If there are less than 5 streets which intersect the first street, they will be displayed automatically.

HOW DO I PROGRAM A DESTINATION?



4. Select the name of the second street.

The [DEST. SETTINGS (Intersection)] screen will appear.




5. To set the destination (waypoints), refer to “Making the system guide the route with detailed options” on page 5-27.



6. To slightly alter the destination.

Select the **Map** key to display the map screen of the area around the specified destination (waypoints).

HOW DO I PROGRAM A DESTINATION?

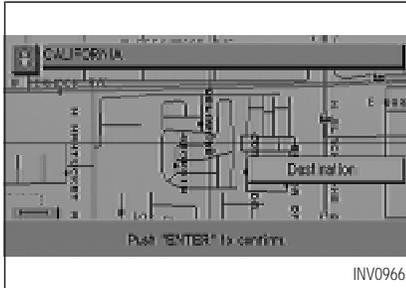

7. If necessary, operate the joystick to adjust the location of the destination (waypoint). Press the PUSH ENTER button. Select the **Destination** key to confirm. The [DEST. SETTINGS (Intersection)] screen will be displayed.


To set the destination (waypoint), refer to “Making the system guide the route with detailed options” on page 5-27.

NOTE:

When the corresponding data does not exist under the following conditions, the

street name list may not be displayed:

- A street name is being input after the **City** key has been selected.
- List is being displayed by selection of the **List** key.

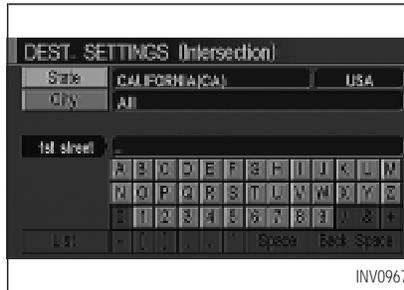

Setting with the **State** key

The **State** key is used when you select a state to set the destination.

1. Select the **State** key.



2. The display shows the screen to select states.

Input a state name.


HOW DO I PROGRAM A DESTINATION?




Setting with the **City** key

The **City** key is used to retrieve an intersection from the specified city to set the destination.

1. Select the **City** key.
 - The display shows the screen to retrieve cities.

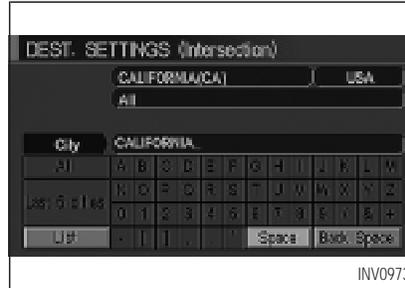

2. Input a city name.

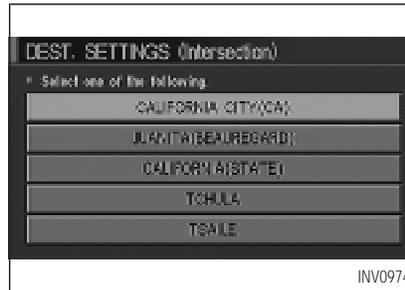


When the **Last 5 Cities** key is selected in

step 2, the history of the previous five settings will be listed.

INFO:

It is not possible to select cities if they are not in the state you set.

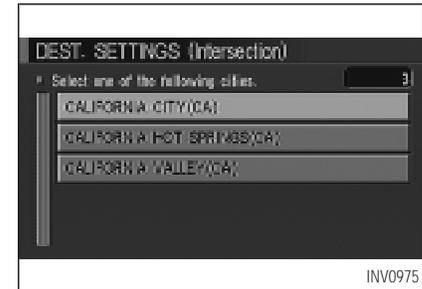

3. The display shows the city list.
Select a city of your choice.

HOW DO I PROGRAM A DESTINATION?




4. The screen returns to the [DEST. SETTING (Intersection)] screen.

When the city is set, the display shows the selected city next to the [City] key.

Input the street name of your choice.

Proceed to “Setting with the [List] key” on page 5-13.

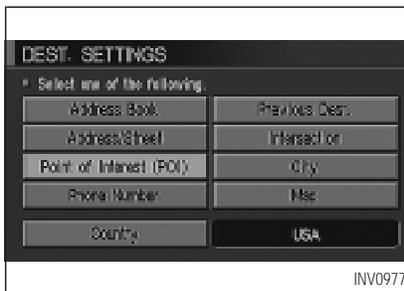

SETTING WITH [Point of Interest (POI)] KEY


The Infiniti Navigation System includes a database of Point of Interest (POI) locations such as restaurants, hotels, and gas stations. (refer to section 6.)

By using this feature, you can set a Point of Interest location as a destination. For details on how to use the POI feature, please refer to section 6.

SETTING WITH [City] KEY


Sets the destination (waypoints) on the map screen of the area in and around the input city.

1. Press the [DEST] button.

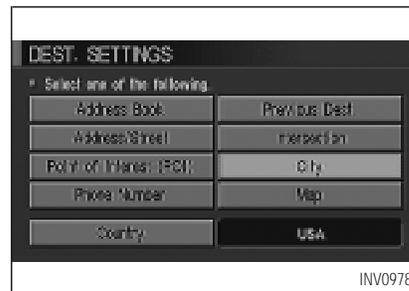

2. Select the [City] key on the [DEST. SETTINGS] screen.

HOW DO I PROGRAM A DESTINATION?

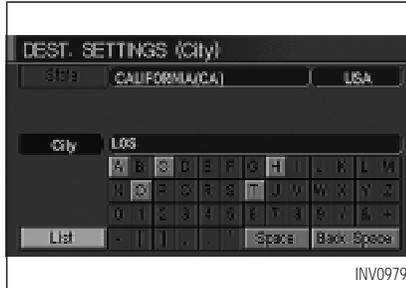

Setting with the **List** key

The **List** key is used when you know the names of the destination and waypoints.

1. Enter the characters of the city name which you wish to set as a destination (waypoints) using the keyboard on the [DEST. SETTINGS (City)] screen, then select the **List** key.

INFO:

- When the **List** key is selected, the data of the currently-listed cities will be displayed.

- If less than 5 suggested cities remain, they will be displayed automatically.



2. Select the city name of your destination (waypoints) on the [DEST. SETTINGS (City)] screen.




3. To set the destination (waypoints), refer to "Making the system guide the route with detailed options" on page 5-27.

HOW DO I PROGRAM A DESTINATION?



4. To slightly alter the destination.

Select the **Map** key to display the map screen of the area around the specified destination (waypoints).

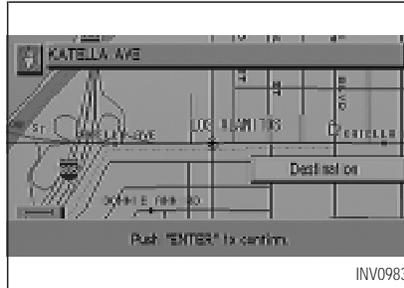

5. If necessary, operate the joystick to adjust the location of the destination (waypoints). Press the PUSH ENTER button. Select the **Destination** key to confirm.

The [DEST. SETTINGS (City)] screen will be displayed.

To set the destination (waypoints), refer to "Making the system guide the route with detailed options" on page 5-27.

- **List is being displayed by selection of the **List** key.**




Setting with the **State** key

The **State** key is used when you select a state to set the destination.


1. Select the **State** key.

HOW DO I PROGRAM A DESTINATION?

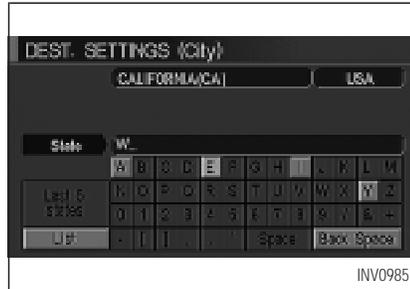


2. The display shows the screen to select states.

Input a state name.

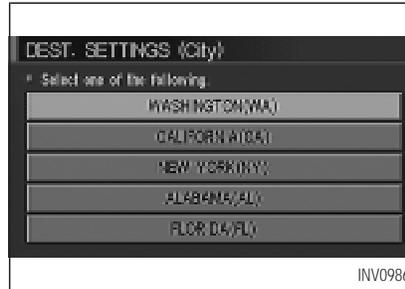

When the **Last 5 States** key is selected in step 2, the history of the previous five settings will be listed.

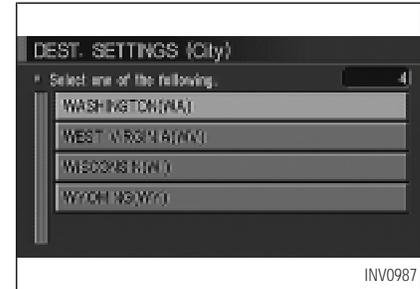

3. The display shows the state list.

Select a state name.

HOW DO I PROGRAM A DESTINATION?



4. The screen returns to the [DEST. SETTINGS (City)] screen.

When the state is set, the display shows the selected state next to the [State] key.

Input the street name.

Please refer to "Setting with the [List] key" on page 5-19.

SETTING WITH [Phone Number] KEY


Sets the destination (waypoints) on the map

screen of the area and around the input phone number.

1. Press the [DEST] button.



2. Select the [Phone Number] key on the [DEST. SETTINGS] screen.

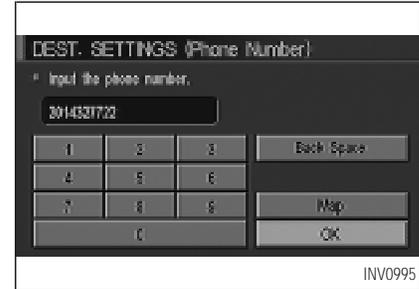


3. Enter the ten-figure phone number, destination (waypoints) using the keyboard on the [DEST. SETTINGS (Phone Number)] screen.
4. If you select the [OK] key, the [DEST. SETTINGS (Phone Number)] screen will be displayed.

HOW DO I PROGRAM A DESTINATION?




5. To set the destination (waypoints), refer to "Making the system guide the route with detailed options" on page 5-27.

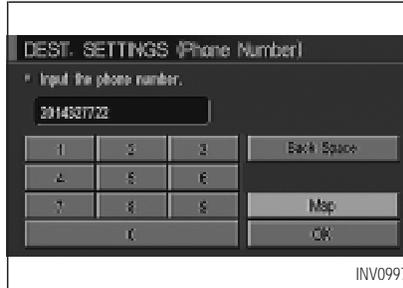

6. To slightly alter the destination.

Select the **Map** key to display the map screen of the area around the specified destination (waypoints).

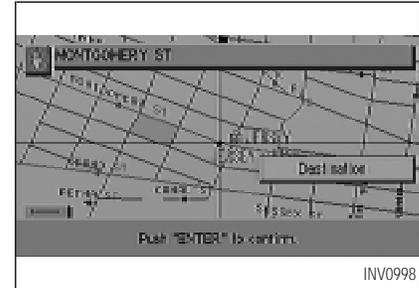

NOTE:

If you select the **Map** key in step 4, the map screen of the area around the specified destination (waypoints) will be displayed.

If necessary, operate the joystick to adjust the location of the destination (waypoints).

Press the PUSH ENTER button.

Select the **Destination** key to confirm.

To set the destination (waypoints), refer to

HOW DO I PROGRAM A DESTINATION?

“Making the system guide the route with detailed options” on page 5-27.




INFO:

When a hospital is set as a destination, a telephone number of the destination will be displayed.

SETTING WITH **Map** KEY

This will enable you to zoom into the map for detail and set the desired location. This works best when you know the location geographically, or want to check the geographical sur-

roundings on the map before setting the destinations.

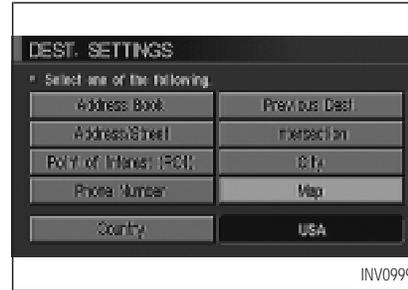

1. Press the **DEST** button.


2. Select the **Map** key.

The map of the entire area will be displayed.



3. Operate the joystick to choose the destination (waypoints).

HOW DO I PROGRAM A DESTINATION?

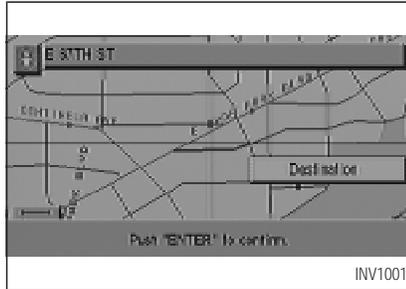

- Adjust the location using the joystick, and press the PUSH ENTER button.
- Select the **Destination** key.
The [DEST. SETTINGS] screen will appear.




- Please refer to "Making the system guide the route with detailed options" on page 5-27.
- INFO:

When the **OK** key is selected in the [DEST. SETTINGS] screen, route calculation starts. If you want to add destinations, select the **Waypoint** key.

SETTING WITH **Country** KEY

When the **Address/Street**, **Intersection**, **City**, or **Point of Interest (POI)** key is used to set the destination (waypoints) in other countries, they are retrieved from the areas in the country which has been set in the country category. When setting the destination (waypoints) in other countries, select a country first.

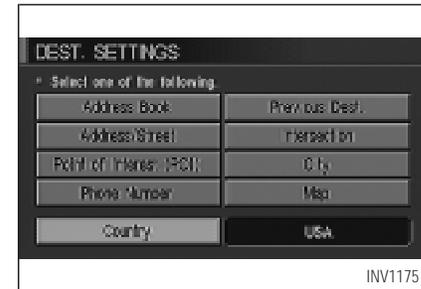

- Press the **DEST** button.

HOW DO I PROGRAM A DESTINATION?

The [DEST. SETTINGS] screen will be displayed.

Select the **Country** key.



2. Select the **Country** key and each time the PUSH ENTER button is pressed, USA replaces CANADA, and vice versa.
3. Then, the selected country will be displayed at the right of the **Country** key.

SETTING WITH **Home** KEY

Sets the home as a destination.

INFO:

In the Expert Mode, this key will not be displayed. Turn on the highlighted green **Short Menu** key in the [SETTINGS] screen.



1. Press the **DEST** button.
2. Select the **Home** key.



3. The [DEST. SETTINGS] screen will be displayed.

Set the **OK** key.

To set the destination (waypoints), refer to "Making the system guide the route with detailed options" on page 5-27.

INFO:

If the home is not registered in the Address Book, the [EDIT ADDRESS BOOK (Address/Street)] screen will be displayed.

HOW DO I PROGRAM A DESTINATION?


Please refer to “Setting with key” on page 5-6.

HAVING THE SYSTEM GUIDE YOU TO THE DESTINATIONS



WARNING

To operate the navigation system or to use the screen functions, first park the vehicle in a safe place and set the parking brake. Using the system while driving can distract the driver and may result in a serious accident.

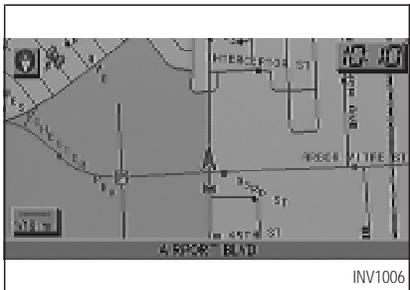

MAKING THE SYSTEM GUIDE THE ROUTE WITH DETAILED OPTIONS

By choosing the destination from the menu, you can choose detailed options such as waypoints and calculation conditions and have the system guide you from the current position to the destination.

Setting the destination

First, you will have to set the destination.

1. Select a destination using one of the meth-

ods described earlier in this chapter:

- Address Book
- Previous Destination
- Address/Street
- Intersection
- Point of Interest (POI)
- City
- Phone Number
- Map
- Home

2. Set the route priorities and select the key to calculate the route.


HOW DO I PROGRAM A DESTINATION?



INFO:

- If you select the **OK** key at this point, route calculation will start without any waypoints.
- Press the **PREVIOUS** button to display the **[EDIT ROUTE]** screen.

Setting the waypoints

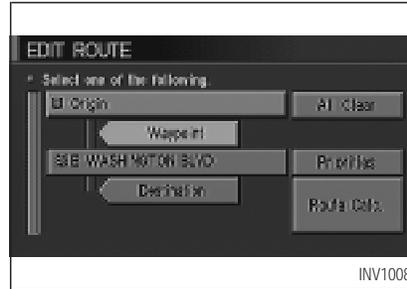


After you set a destination, you can set waypoints.

INFO:

- When the **ROUTE** button is pressed on the map and the **Edit Route** key is selected, the **[EDIT ROUTE]** screen will be displayed.
- The maximum number of destinations and waypoints that can be set is six (6).

Please refer to "Expert mode categories" on page 5-2.

1. Select the **Waypoint** key or **Destination** key on the **[EDIT ROUTE]** screen.

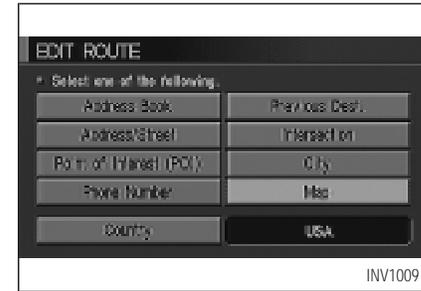

The **[EDIT ROUTE]** screen will be displayed.

2. Select a waypoint destination using one of the destination selection procedures outlined earlier in the chapter.

HOW DO I PROGRAM A DESTINATION?



Select the conditions with high priorities.

If you want to get to your destination in the shortest time, select the **Shortest Time** key.

Select the key on the screen to turn the indicator light ON or OFF.

INFO:


- When you select the **OK** key at this point, route calculation will start without any additional waypoints.
- Press the **PREVIOUS** button to display

the [EDIT ROUTE] screen.

- It is also possible to set a waypoint by selecting the **Waypoint** key in the [DEST. SETTING] screen.

Setting the priorities for route calculation

After the setting of destinations and waypoints is completed, set the calculation conditions such as route type with high priorities.

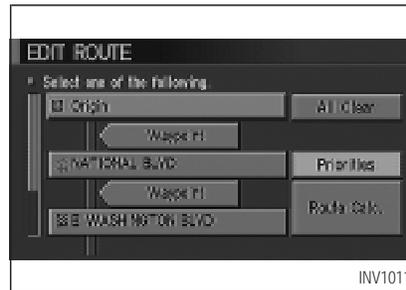

1. Select the **Priorities** key.

The screen for setting calculation conditions will appear. The conditions with the indicator light ON will have high priority.

INFO:

When the **ROUTE** button is pressed on the map and the **Edit Route** key is selected, the [EDIT ROUTE] screen will be displayed.



2. Select the conditions with high priorities. Select the key on the screen to turn the indicator light ON or OFF.

HOW DO I PROGRAM A DESTINATION?

Shortest Time key:

The route to the destination is calculated so that you can reach the destination in the shortest time. In some cases, a freeway or toll road with detours may be recommended.

NOTE:

It may not be the shortest time in all cases.

Shortest Distance key:

The route to the destination is calculated so that it is the shortest distance.

NOTE:

It may not be the shortest distance in all cases.

Minimize Toll Road key:

The route to the destination is calculated with minimum use of toll roads.

Minimize FWY key:

The route to the destination is calculated with minimum use of freeways.

Use Time Restricted Roads key:

The route using time restricted roads is calculated.



When this key is selected and the **OK** key is pressed, a confirmation screen will be displayed.

When the **Yes** key is pressed, route calculation will start.

INFO:

The system considers time restricted roads as whole-day restricted. When the key is set to OFF, time restricted roads will not be included in route calculation.



WARNING


When the route is calculated with this key ON, be sure to obey traffic regulations.

Use Ferry Route key:

Select this key if you prefer routes with ferry lines.

HOW DO I PROGRAM A DESTINATION?

Route calculation and guidance

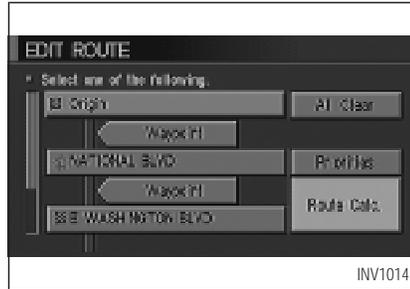


After setting all the items required, you may proceed to route calculation for guidance. After the route calculation is completed, the guidance will start automatically.

INFO:

When the **ROUTE** button is pressed on the map and the **OK** key is selected, the [EDIT ROUTE] screen will be displayed.

Select the **Route calc.** key.

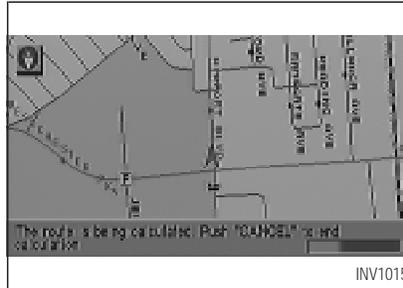

Route calculation screen will be displayed.

The suggested route will be displayed with a thick blue line. If you enter this route, the voice guide will start.

INFO:

- If you want to cancel the route calculation, press the **CANCEL** button.
- If you set a place which is not suitable as a destination, the suggested route will not be displayed. In such a case, the **OK** key will be displayed on the screen. Select the

OK key. Reset a correct destination.




- If route calculation is not possible with all the set preferences, the system may look up a route that does not exactly correspond to the preferences.
- When deleting the settings of destination or waypoints, press the **ROUTE** button.

Enlarged intersection display

When the vehicle approaches a guide point such as an intersection, the enlarged map of the point will be displayed.

HOW DO I PROGRAM A DESTINATION?

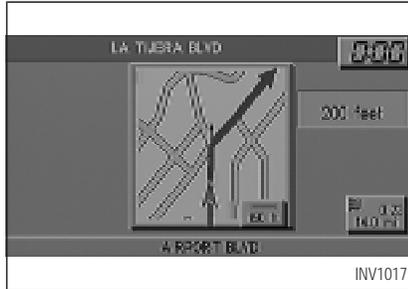

INFO:

- When no operation is executed with the enlarged map displayed, the map stays displayed.
- If route numbers are included in the map data, route numbers will be displayed on the left side of the screen.
- If street names are displayed in two lines, route numbers will not be displayed.

NOTE:

- When the guide point is close to the

guidance start point, the enlarged map may not be displayed.

- The guide point name may not be displayed.
- The position of the vehicle icon on the enlarged map may differ from the position on the current display.

1. Press the **MAP** or **PREVIOUS** button.

The map screen will appear.



INFO:

To display the enlarged map, press the **MAP** button or **PREVIOUS** button.

2. When the vehicle arrives at the neighborhood of the destination, the route guidance will end automatically.

INFO:


- To alternate between the map and the enlarged screen, press the **MAP** button or **PREVIOUS** button.
- In the map screen, the distance to the next guide point and the turning direction will be displayed on the right side of the screen.

ADJUSTING AND DELETING THE PRE-SET DESTINATION (WAYPOINTS)


Using the joystick, you can **adjust the destination** (waypoints).

1. Press the **ROUTE** button.

HOW DO I PROGRAM A DESTINATION?

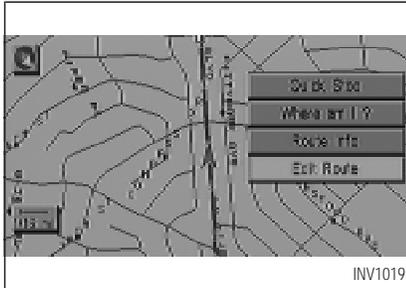


2. Select the **Edit Route** key.

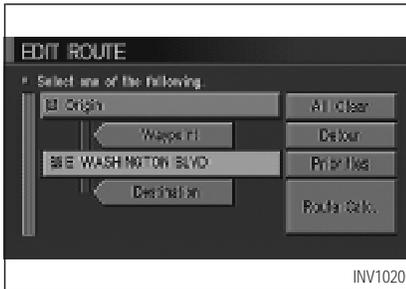

3. Choose the destination (waypoints) you


want to adjust on the [EDIT ROUTE] screen.

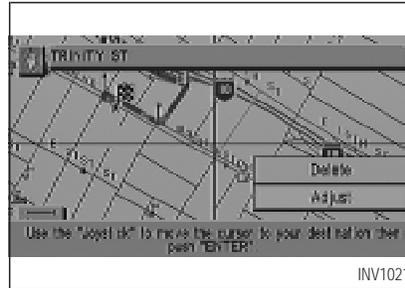

4. The map screen will be displayed for adjusting. Use the joystick to adjust the location.

INFO:


When you move the joystick, the **Adjust** key will be displayed.

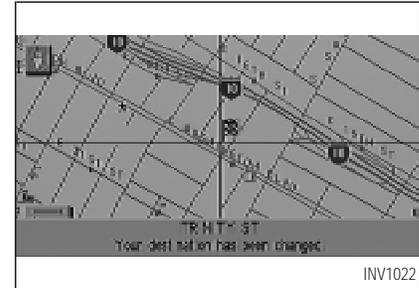

5. Select the **Adjust** key.


The new destination (waypoints) will be set.

HOW DO I PROGRAM A DESTINATION?

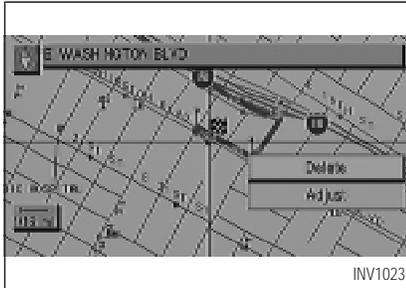


TO DELETE A DESTINATION

1. To delete the destination (waypoint), choose the destination (waypoint) in step 3 and select the **Delete** key.

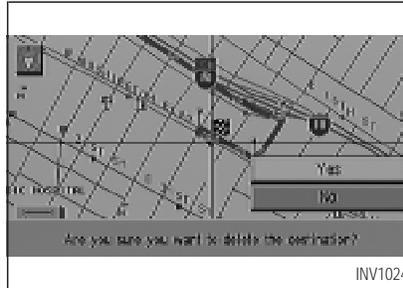

2. Select the **Yes** key.

The pre-set destination (waypoints) will be deleted.

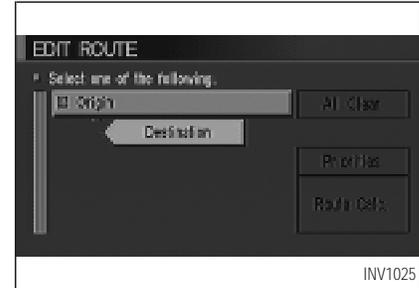


3. Press the **Map** button to return to the map screen.

INFO:

- To set a new destination (waypoints), refer to "Expert mode categories" or "Easy mode categories" on page 5-2.
- If you reset the new destination (waypoints), the older destination (waypoints) will be deleted. If you have requested a route calculation, the previous suggested route will be deleted from memory.


HOW DO I PROGRAM A DESTINATION?

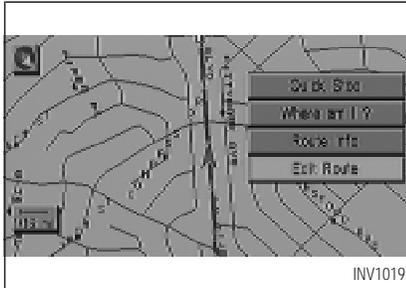


ALL CLEAR

The destination and waypoint can be deleted at one time.

1. Press the **ROUTE** button.
Several keys will be displayed on the right of the screen.
Select the **Edit Route** key.

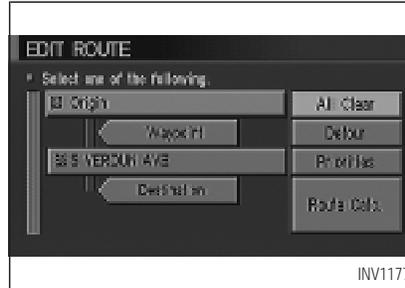


2. The [EDIT ROUTE] screen will be displayed.
Select the **All Clear** key.

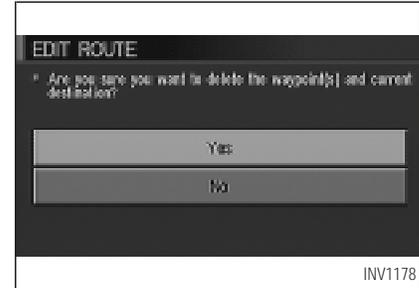

3. Select the **Yes** key.

HOW DO I PROGRAM A DESTINATION?

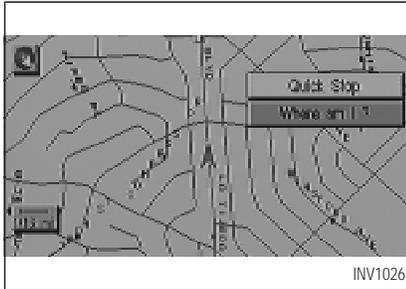

QUICK STOP

The system will display pre-defined POI's (Points of Interest) in the current vicinity of the vehicle and the distances to them. These POI's can be gas stations, hotels, restaurants, ATM's or customer-programmed facilities. This function will operate while the vehicle is moving.

1. Press the **ROUTE** button.

The display shows several keys on the right of the screen.

Select the **Quick Stop** key.



2. The display shows the [QUICK STOP] screen.

Select the category of your choice.

INFO:

Five categories are displayed on the screen. The last one can be customized. When you use a POI category frequently, it is convenient to use the quick stop function. Please refer to "Quick stop customer setting" on page 5-37.



3. The cuisine selection screen is displayed only when the **RESTAURANT** key is selected. Select the **All** key or **Fast Food** key.

HOW DO I PROGRAM A DESTINATION?



- The display shows the direction and distance from the current vehicle position to the selected facility.

Select the facility name you want to set as a destination (waypoints).



- Set route priorities, then select the **OK** key. Route calculation to the destination will be started.

INFO:

If quick stop is set after the destination was set, the system starts the route calculation to the location as the waypoint. Five waypoints can be registered at the same time.



QUICK STOP CUSTOMER SETTING

- Press the **SETTING** button.
- Select the **Navigation** key on the [SETTINGS] screen.

HOW DO I PROGRAM A DESTINATION?



3. Select the **Quick Stop Customer Settings** key on the **[NAVIGATION SETTINGS]** screen.



4. Select a facility you frequently visit. For example, select the **INFINITI DEALER** key. When it is set, the screen returns to the previous screen.

Press the **MAP** button to return to the map.




5. Press the **ROUTE** button. Then, select the **Quick Stop** key, and press the **PUSH ENTER** button. The display shows the selected facility in the last row.

HOW DO I PROGRAM A DESTINATION?



INFO:

When a hospital is set as a destination, a telephone number of the destination will be displayed.

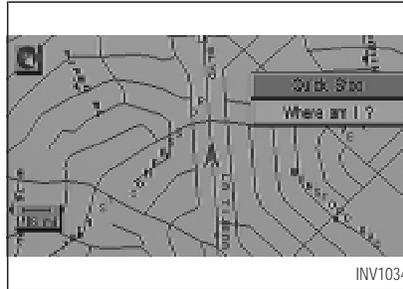


WHERE AM I ?

This key is used to find the name of the street on which the vehicle is currently located.

1. Press the **ROUTE** button.

Several keys appear on the right of the screen. Select the **Where am I?** key.

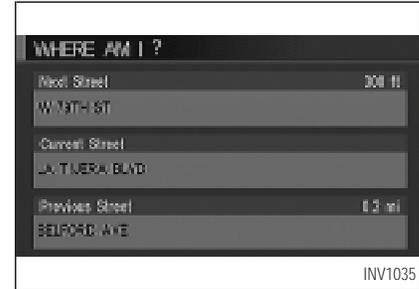

2. The display shows the [WHERE AM I?] screen, which includes the next, current, and previous streets. Each one shows the streets which the vehicle is approaching, currently traveling on, and those streets the vehicle was previously traveling on. Press the **MAP** or **PREVIOUS** button to return to the map.

6 HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?


Setting with Point of Interest (POI) key...	6-2
Setting with the List key.....	6-2
Setting with the Category key.....	6-4
Setting with the State key.....	6-7
Setting with the City key.....	6-9
Setting with the Nearby key.....	6-11
POI categories	6-12
Setting the nearby display icons.....	6-13

HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?


SETTING WITH

Point of Interest (POI) **KEY**

The keys in Point of Interest (POI) are List, Category, Nearby, State and City, explained below.

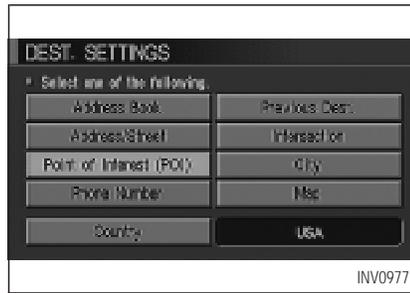

1. First press the **DEST** button.
2. Select the **Point of Interest (POI)** key on the **[DEST. SETTING (POI)]** screen.

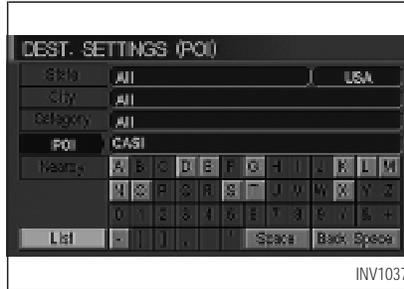

SETTING WITH THE **List** KEY

The **List** key is used when you know the exact names of the destinations and waypoints.

1. Input the facility name for your destination.

NOTE:

For speedier search, input the state, city and category before searching for your desired destination.


INFO:

If the system detects that the number of corresponding facilities or cities is five or less, the display shows the list screen automatically.



2. The display shows the screen to select a facility or **Info** key.

HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

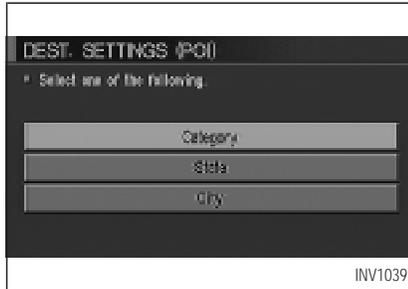


When the **Next Search** key is selected, it is possible to narrow down categories, states and cities.

To use this function, refer to "Setting with the **Category** key", "Setting with the **State** key" and "Setting with the **City** key" on pages 6-4, 6-7 and 6-9.

INFO:

It is not possible to select the key which is set to narrow down.

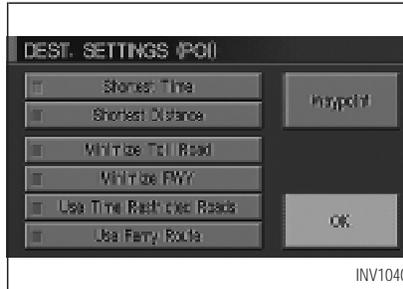

3. When a facility name is selected, the display shows the [DEST. SETTINGS (POI)] screen to set the destination.



To set priorities, select the **OK** key. Then, the route calculation will be started. When you alter the destination or set waypoints, select the **Waypoint** key.

Please refer to "Making the system guide the route with detailed options" on page 5-27.



- When the **Info** key next to the facility name of your choice is selected in step 2, the display shows the detailed [Address] and [Telephone number] of the selected facility, and the **Map** and **Enter** keys.

HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

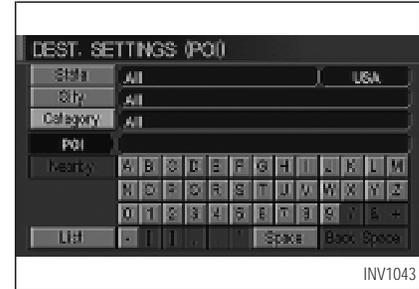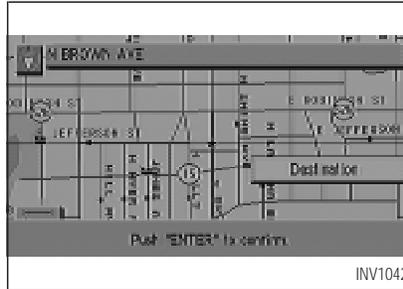

- When setting the facility as the destination, select the **OK** key. The display shows the [DEST. SETTING (POI)] screen to set the destination.

Set priorities and select the **OK** key. Then, the route calculation will be started. When you alter the destination or set waypoints, select the **Waypoint** key. Please refer to "Making the system guide the route with detailed options" on page 5-27.


- When the **Map** key is selected, the display shows the map. When the PUSH ENTER button is pressed, the display shows the **Destination** key.

SETTING WITH THE **Category** KEY


The **Category** key is used when you select a facility category to set the destination.

- Select the **Category** key.


HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

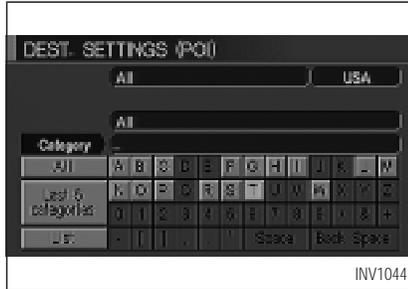

- The display shows the screen to select categories.
Input a category name.

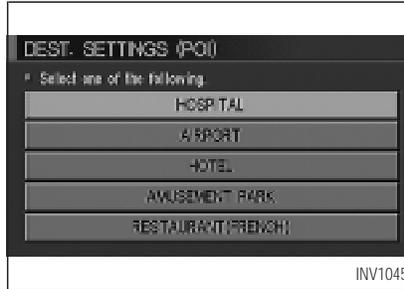

- When the **Last 5 Categories** key is selected in step 2, the history of the previous five settings will be listed.

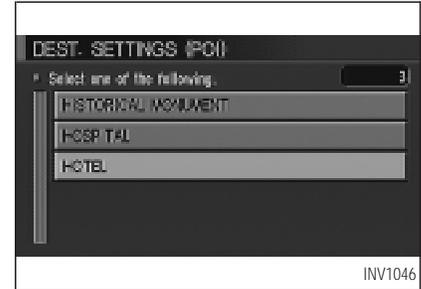


- The display shows the category list.
Select a category name.

INFO:

When the **RESTAURANT** key is selected, the screen to input the cuisine type will be displayed.


HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

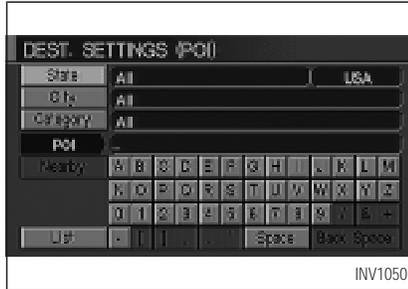

SETTING WITH THE **State** KEY


The **State** key is used when you select a state to set the destination.

1. Select the **State** key.

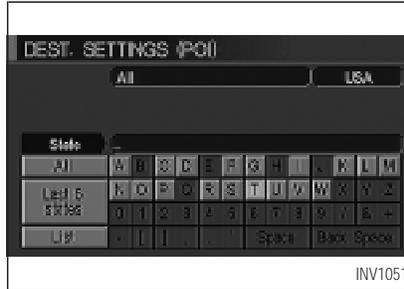


2. The display shows the screen to select states.

Input a state name.

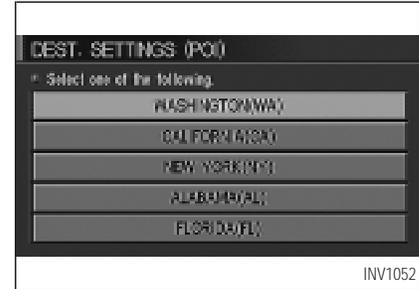


When the **Last 5 States** key is selected in step 2, the history of the previous five settings will be listed.

HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

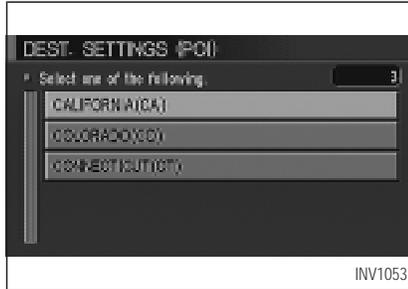

3. The display shows the state list.
Select a state name.

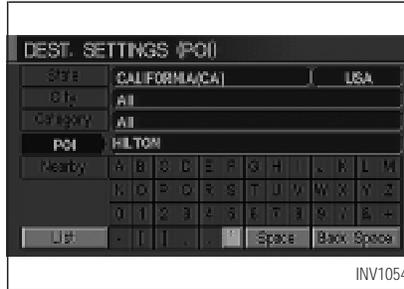


4. The screen returns to the [DEST. SETTINGS (POI)] screen.

When the state is set, the display shows the selected state next to the [State] key.
Input the state name.

INFO:


If you do not know the state name you want to go to, select the [List] key so that the state names will be listed in alphabetical order.

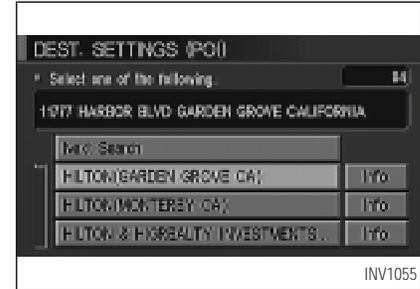

5. When a state name is input, the system retrieves the state name according to the input letters.

Please refer to "Setting with the [List] key" on page 6-2.

HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

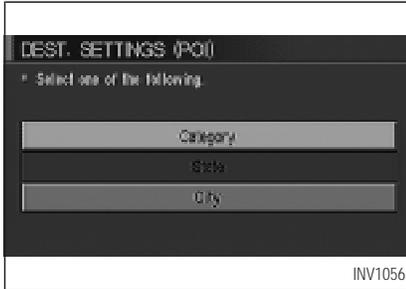


When the **Next Search** key is selected, it is possible to narrow down categories and cities.

To use this function, refer to “Setting with the **Category** key” and “Setting with the **City** key” on pages 6-4 and 6-9.

INFO:


It is not possible to select a key which has been removed from the search.

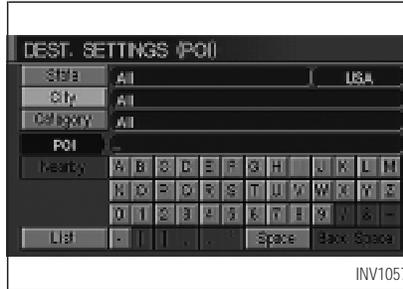


SETTING WITH THE **City** KEY

The **City** key is used to retrieve a facility from the specified city to set the destination.

1. Select the **City** key.
- The display shows the screen to retrieve cities.

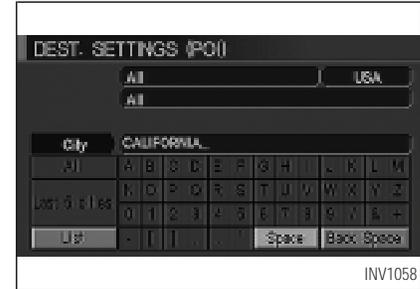


2. Input a city name.

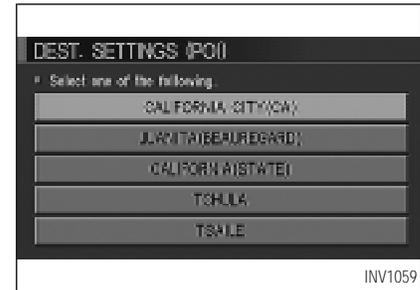


When the **Last 5 Cities** key is selected in

HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

step 2, the history of the previous five settings will be listed.

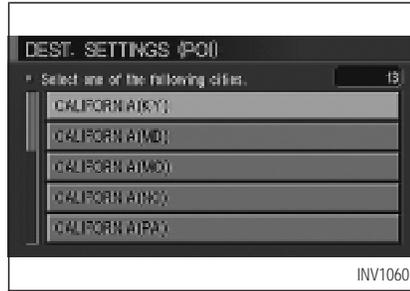

3. The display shows the city list.
Select a city of your choice.

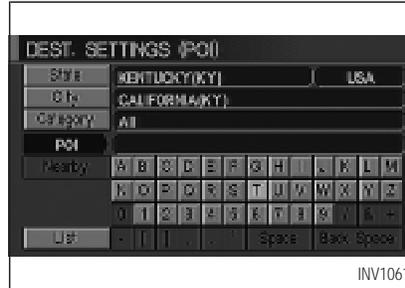


4. The screen returns to the [DEST. SETTINGS (POI)] screen.

When the city is set, the display shows the selected city beside the [City] key.
Input the facility name of your choice.

INFO:

- If you do not know the facility name, select the [Category] key to retrieve a facility. When the facility is set from the [Category] key, the display shows the selected facility under the [Category] key.


- It may take some time to show the list, depending on categories.

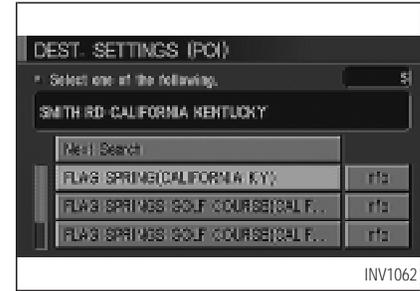

5. When the facility name is input, the system retrieves the facility name according to the selected city and the input letters. Then, the display shows the screen to select a facility and [Info] key.

Please refer to "Setting with the [List] key" on page 6-2.

HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

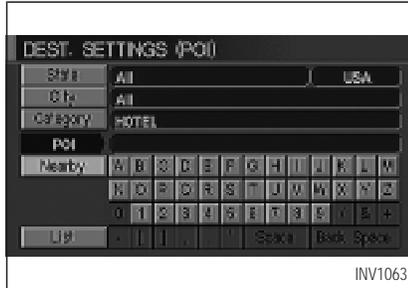

SETTING WITH THE **Nearby** KEY

The **Nearby** key is used to retrieve a facility within 30 miles (50 km) from the current vehicle location.


1. Select the **Point of Interest (POI)** key on the [DEST. SETTINGS (POI)] screen.
2. Set category according to page 6-4.
3. Select the **Nearby** key.

INFO:

- Facilities in the selected category will be

listed from the nearest to the farthest.

- The **Nearby** key is available only when a category is set. Set a category first.

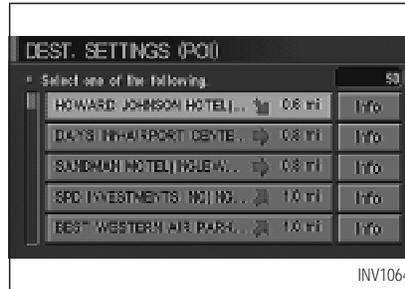

- When there are any nearby facilities based on the selected category, the display shows the list of facility names, directions and distance from the current vehicle location, and **Info** keys.

Please refer to "Setting with the **List** key" on page 6-2.

HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

POI CATEGORIES

AIRPORT	FERRY TERMINAL	PARKING GARAGE
AMUSEMENT PARK	GAS STATION	PARKING LOT
ATM	GOLF COURSE	PERFORMING ARTS
AUTO SERVICE & MAINTENANCE	GROCERY STORE	POLICE STATION
AUTOMOBILE CLUB	HISTORICAL MONUMENT	RENTAL CAR AGENCY
BANK	HOSPITAL	REST AREA
BORDER CROSSING	HOTEL	RESTAURANT
BOWLING CENTER	ICE SKATING RINK	SCHOOL
BUS STATION	INFINITI DEALER	SHOPPING
BUSINESS FACILITY	LIBRARY	SKI RESORT
CASINO	MARINA	SPORTS CENTER
CITY CENTER	MOVIE THEATER	SPORTS COMPLEX
CITY HALL	MUSEUM	TOURIST ATTRACTION
COLLEGE AND UNIVERSITY	NIGHTLIFE	TOURIST INFORMATION
COMMUNITY CENTER	NISSAN DEALER	TRAIN STATION
COMMUTER RAIL STATION	OTHERS	WINERY
CONVENTION/EXHIBITION CENTER	PARK & RIDE	
COURT HOUSE	PARK/RECREATION AREA	

HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

SETTING THE NEARBY DISPLAY ICONS


Five types of facilities can be displayed on the map using respective icons, including:

- ATMs
- Gas stations
- Hotels
- Restaurants
- Rest areas

1. Press the **SETTING** button on the control panel.




2. Select the **Navigation** key on the [SETTINGS] screen.

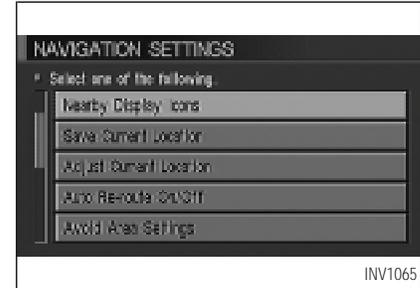

3. Select the **Nearby Display Icons** key on the [NAVIGATION SETTINGS] screen.

The [NEARBY DISPLAY ICONS] screen will be displayed.

HOW DO I USE THE POINT OF INTEREST (POI) FEATURE?

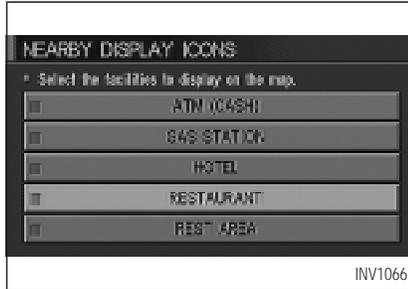


4. Select the facility you wish to display, and press the PUSH ENTER button.

INFO:

Every time the PUSH ENTER button is pressed, the indicator lights of the items are turned ON and OFF alternately.

ON: To display nearby icons.

OFF: To stop displaying nearby icons.

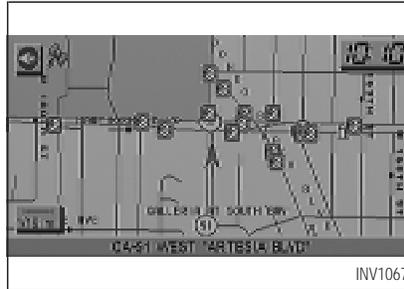

The icons of the selected facilities will be displayed.

INFO:

When the **MAP** button is pressed, the current location will be displayed.

When the **PREVIOUS** button is pressed, the previous screen will reappear.



INFO:

When a hospital is set as a destination, a telephone number of the destination will be displayed.

7 HOW DO I USE THE ADDRESS BOOK FEATURE?

Setting up and editing the address book....	7-2
Setting up the address book	7-2
Using various categories to store locations	7-2
Storing current vehicle position	7-3
Storing locations of your choice.....	7-4
Confirming the stored locations	7-5
Editing the address book.....	7-6
Changing stored names	7-6
Changing the icons	7-7
Adjusting the stored address book entries.....	7-11
Deleting stored locations	7-12

HOW DO I USE THE ADDRESS BOOK FEATURE?

SETTING UP AND EDITING THE ADDRESS BOOK

You can store locations in the address book for quicker access, or name the location and set a special icon on the map.

SETTING UP THE ADDRESS BOOK

You can store your favorite places or the places you frequently visit. By storing them, you can call them quickly on the display, enabling easier setting of these destinations.


USING VARIOUS CATEGORIES TO STORE LOCATIONS

You can choose various categories in the menu to store the locations. The categories are: Address/Street, Points of Interest (POI), Phone Number, Map, Intersection, City and Previous Dest.

1. Press the **SETTING** button.




2. Select the **Navigation** key.

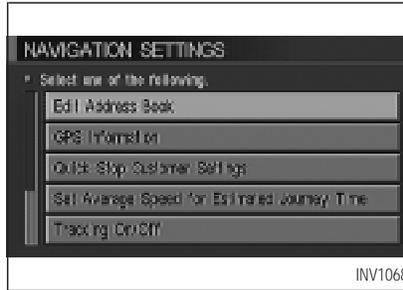

The [NAVIGATION SETTINGS] screen will be displayed.


3. Select the **Edit Address Book** key.

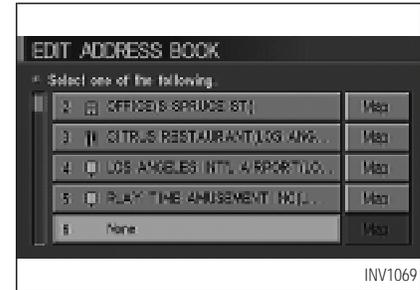

The [EDIT ADDRESS BOOK] screen will be displayed.

4. Choose an unused number location on the address book list.

HOW DO I USE THE ADDRESS BOOK FEATURE?

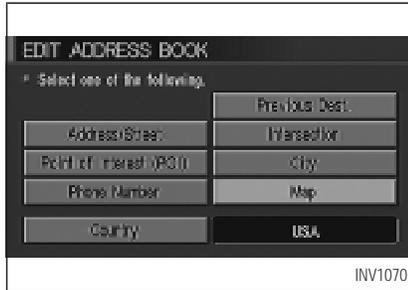

5. Store location.

Set a location to be stored in the same way as when setting a destination (waypoints).

Please refer to “Export Mode Categories” on page 5-2.

INFO:

- Press the **[MAP]** button to go back to get the current vehicle display.
- The maximum number of the stored locations is 50, including your home and office.


- If you want to store places close to POI, it is quicker to use the **[Points of Interest (POI)]** key.

STORING CURRENT VEHICLE POSITION

1. Press the **[SETTING]** button.



2. Select the **[Navigation]** key.

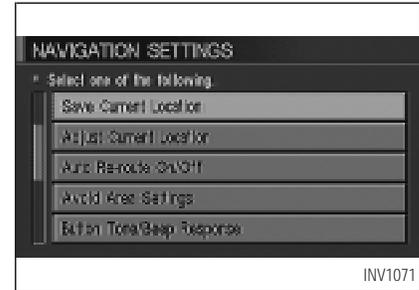


3. The **[NAVIGATION SETTINGS]** screen will be displayed.

4. Select the **[Save Current Location]** key.

The current location of the vehicle will be stored in the next available address book location, and be displayed on the vehicle icon screen.

HOW DO I USE THE ADDRESS BOOK FEATURE?

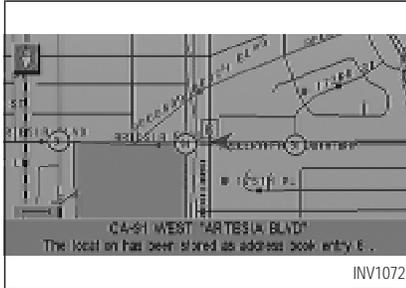


INFO:

- If the number of the stored locations exceeds 50, a message will appear "Memory is full. Delete old one to store new one".
- If you store more than one location at the same place, the location stored in the database with the largest identification number will be displayed.
- If you store the location by the location store function, the stored name may differ, depending on the scale used in the display.

- The unused and smallest identification number will be assigned to the newly set location.


STORING LOCATIONS OF YOUR CHOICE

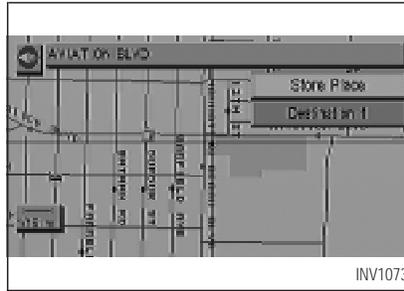

You can use the joystick to store desired locations.

1. Scroll the map to the desired location with the joystick, then press the PUSH ENTER button. The display shows several keys on the right of the screen.

2. Select the **Store Place** key.

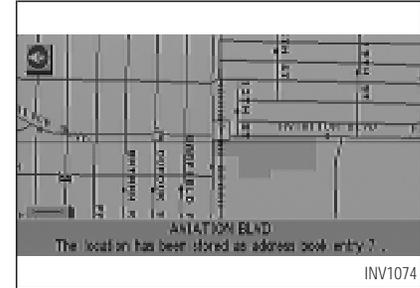

The registered number will be displayed at that location on the map.

INFO:

Press the **MAP** or **PREVIOUS** button to go back to the current vehicle display.

HOW DO I USE THE ADDRESS BOOK FEATURE?


CONFIRMING THE STORED LOCATIONS

To confirm that the locations have been stored:

1. Press the **SETTING** button.




2. Select the **Navigation** key.

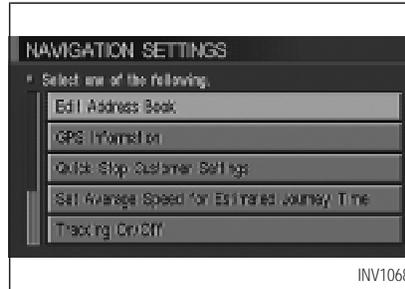


The [NAVIGATION SETTINGS] screen will be displayed.

3. Select the **Edit Address Book** key.

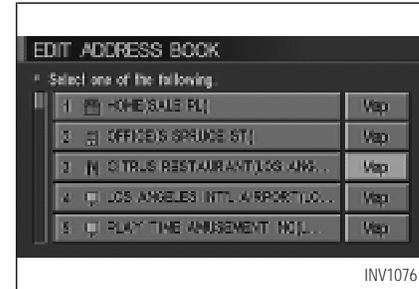

4. Choose the **Map** key next to the location that you want to confirm.

HOW DO I USE THE ADDRESS BOOK FEATURE?

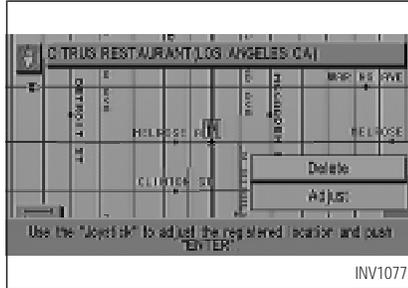


The stored location will be displayed on the map.

INFO:

- If you want to confirm several stored locations, press the **PREVIOUS** button.
- To go back to the map display, press the **MAP** button.

EDITING THE ADDRESS BOOK

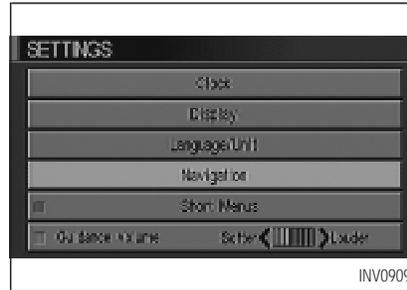

You can alter the names or the icons of the stored locations.


CHANGING STORED NAMES

1. Press the **SETTING** button.




2. Select the **Navigation** key.
3. Select the **Edit Address Book** key.

HOW DO I USE THE ADDRESS BOOK FEATURE?

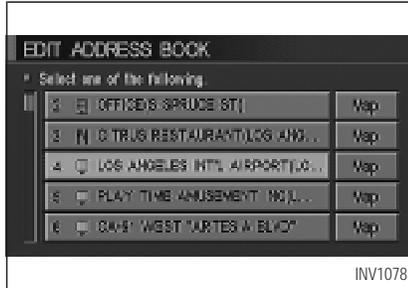

4. Choose the stored location you want to change the name of.

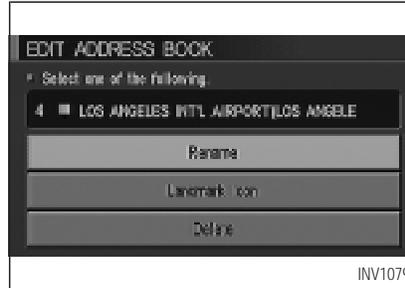

5. Select the **Rename** key.
The change name screen will be displayed.



6. Select the **Set** key after entering the new name.

INFO:

To go back to the map display, press the **MAP** button.

CHANGING THE ICONS


1. You can display the icon at a stored location.

Press the **SETTING** button.

HOW DO I USE THE ADDRESS BOOK FEATURE?




2. Select the **Navigation** key.

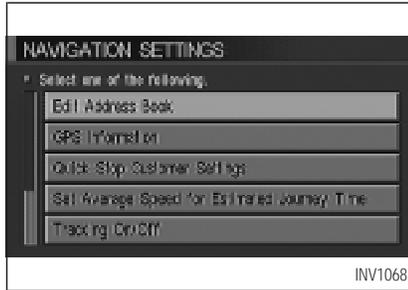


The [NAVIGATION SETTINGS] screen will be displayed.

3. Select the **Edit Address Book** key.

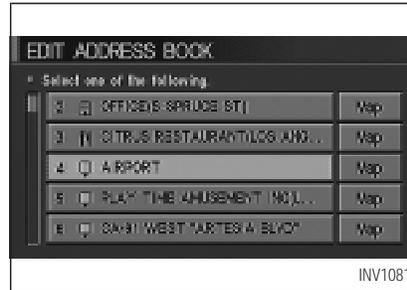

4. Choose a stored location where you want to set the icon.

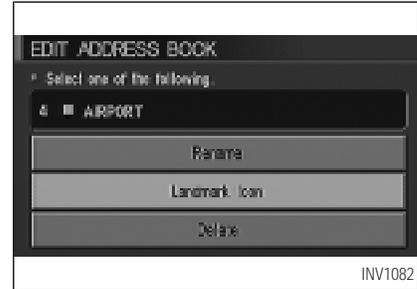

5. Select the **Landmark Icon** key.


HOW DO I USE THE ADDRESS BOOK FEATURE?



6. Choose an icon.

The picture displayed on the left [icon] is a planview icon and the picture displayed on the right [icon] is a Birdview™ icon.

The icon of the stored location will be set.

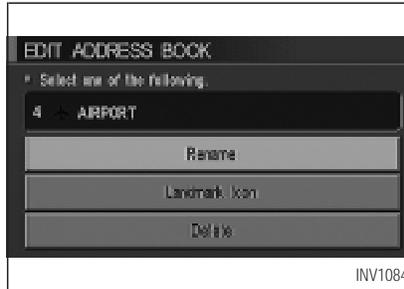

INFO:

- To go back to the screen displaying the current vehicle position, press the **MAP** button.
- If you press the **PREVIOUS** button, the screen will go back to the screen displayed in step 5.
- If you alter the icon of the stored location, the icon on the map will also change.

HOW DO I USE THE ADDRESS BOOK FEATURE?

Legend of icons which can be set for the stored locations



HOW DO I USE THE ADDRESS BOOK FEATURE?


ADJUSTING THE STORED ADDRESS BOOK ENTRIES

You can easily adjust the point of the stored location with the joystick.

1. Press the **SETTING** button.




2. Select the **Navigation** key.

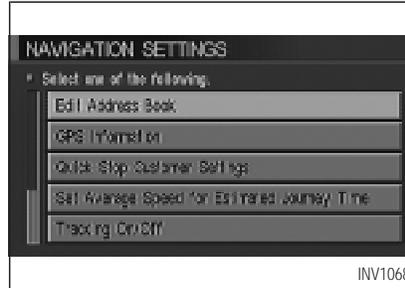


The [NAVIGATION SETTINGS] screen will be displayed.

3. Select the **Edit Address Book** key.

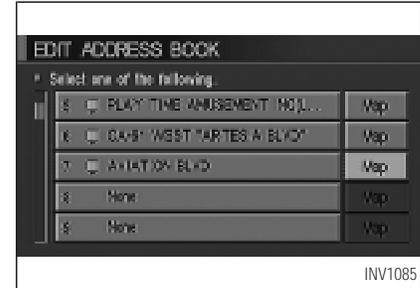


4. Choose the **Map** key next to the stored location you want to adjust.

HOW DO I USE THE ADDRESS BOOK FEATURE?

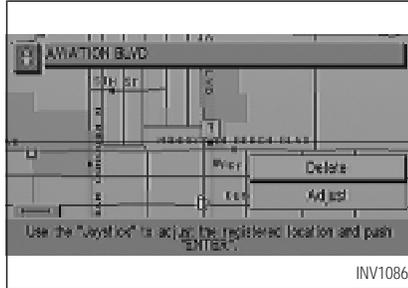

5. Use the joystick to set the new location.

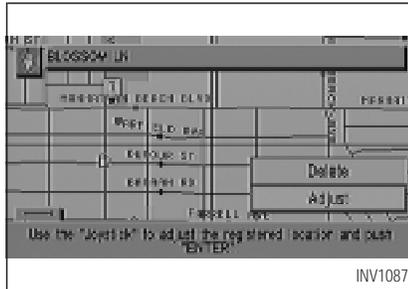

6. Select the **Adjust** key.

The location is updated after the update message is shown. The screen goes back to the screen displayed in step 4.

INFO:

To go back to the screen displaying the current vehicle position, press the **MAP** button.


DELETING STORED LOCATIONS

You can delete the stored locations you no longer need from the system memory.

1. Press the **SETTING** button.




2. Select the **Navigation** key.

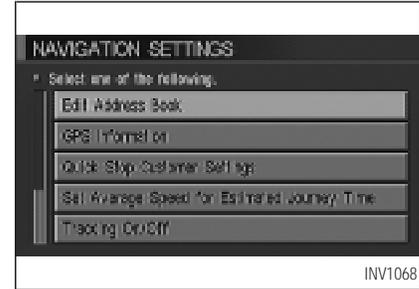


HOW DO I USE THE ADDRESS BOOK FEATURE?

- The [NAVIGATION SETTINGS] screen will be displayed.


Select the **Edit Address Book** key.

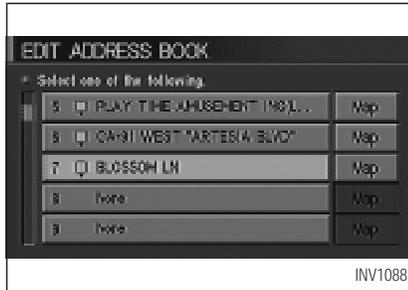

- Select the location you want to delete.

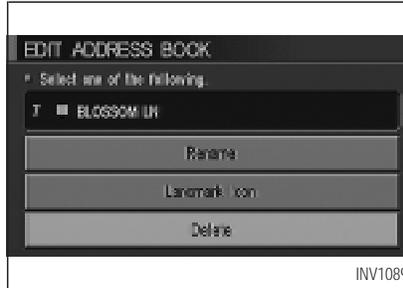

- Select the **Delete** key.

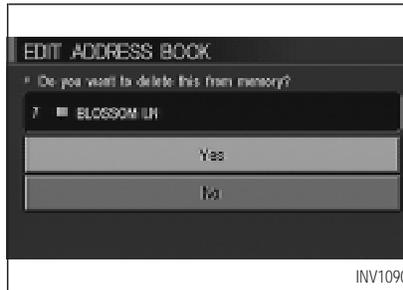

- The system will ask for a confirmation. If

correct, select the **Yes** key. The location will be deleted. After the deletion message is shown the screen goes back to the screen displayed in step 4.

INFO:

To go back to the screen displaying the current vehicle position, press the **MAP** button.

8 HOW DO I USE THE AVOID AREA FEATURE?

Setting avoid areas.....	8-2
Setting with the selected location key	8-5
Renaming the avoid areas	8-5
Deleting the avoid areas	8-6
Setting with the Map key	8-7

HOW DO I USE THE AVOID AREA FEATURE?

SETTING AVOID AREAS

Setting avoid areas will give you a route away from areas you wish to avoid.

INFO:

If the vehicle icon is in the avoid area, route calculation cannot be completed.

1. Press the **SETTING** button.




2. Select the **Navigation** key.



3. The display shows the [NAVIGATION SETTINGS] screen.

Select the **Avoid Area Setting** key.

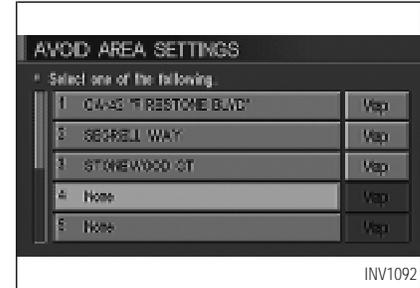

4. The display shows the [AVOID AREA SETTINGS] screen.

Select a key which is not set as an avoid area.

INFO:

It is possible to set up to 10 areas to avoid.

HOW DO I USE THE AVOID AREA FEATURE?




5. The display shows categories which can be used to set an avoid area.

For example, use the **Map** key to set an avoid area.

Select the **Map** key.


INFO:

For setting with other categories, please refer to "Expert mode categories" on page 5-2.

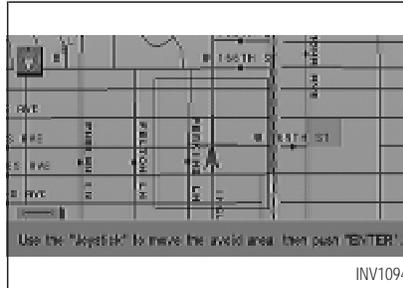

6. The display shows the map which centers the area to be set as an avoid area.

Use the **ZOOM IN** or **ZOOM OUT** button to adjust the map reduction scale.

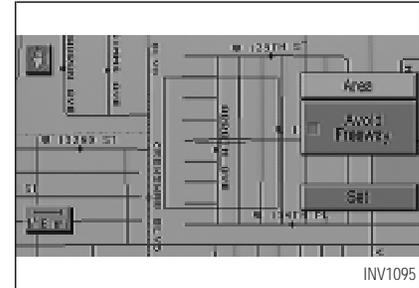


7. Use the joystick to adjust the location.

INFO:

Area size: Max. 5 x 5 miles (8 x 8 km)

HOW DO I USE THE AVOID AREA FEATURE?

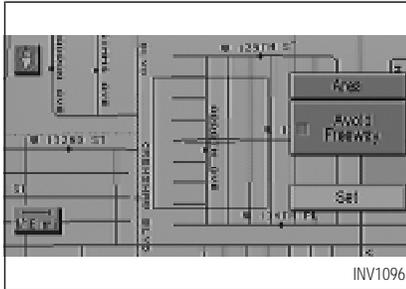


8. The display shows the keys on the right of the screen.

Select the **Set** key.

INFO:

- If you want to avoid the freeway in that area, select the **Avoid Freeway** key to turn on the green indicator on the key. (Indicator ON: avoid, OFF: do not avoid)
- When altering the size of the avoid area, select the **Area** key. The area size is increased or decreased by three scales.

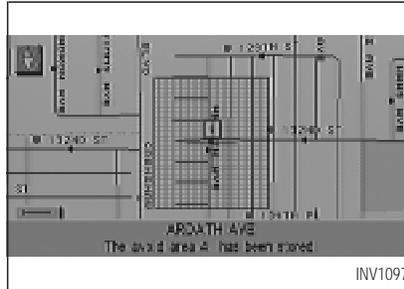

- The avoid area is set, and the grid will be displayed on the screen.

INFO:

The grid color will be displayed in green or blue.

(Avoid Freeway ON: green, OFF: blue)

If the route guidance is set, the display shows the **[AVOID AREA SETTINGS]** screen.




- Please refer to “Making the system guide the route with detailed options” on page 5-27.

If the route guidance is not set, the display shows the current vehicle location.

HOW DO I USE THE AVOID AREA FEATURE?

SETTING WITH THE SELECTED LOCATION KEY

When the stored avoid area is selected, the avoid area can be renamed or deleted.

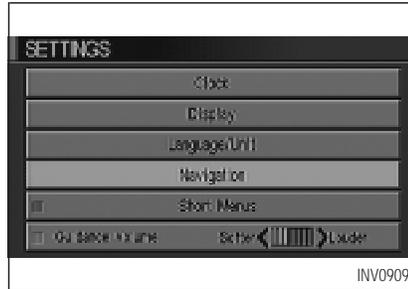


RENAMING THE AVOID AREAS

1. Press the **SETTING** button.
2. Select the **Navigation** key.



3. The display shows the [NAVIGATION SETTINGS] screen.

Select the **Avoid Area Setting** key.

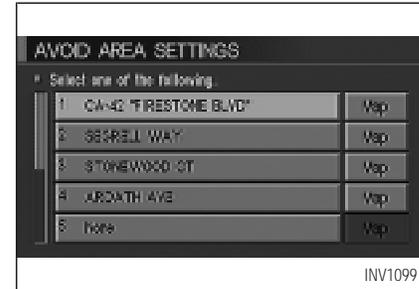

4. The display shows the [AVOID AREA SETTINGS] screen.

Select a key which is set as an avoid area.

HOW DO I USE THE AVOID AREA FEATURE?



5. Select the **Rename** key.



6. The display shows the keyboard.

Enter the area name using the keyboard.
When the **Set** key is selected, the avoid area is renamed, and the screen returns to the previous screen.

INFO:
When the **Back Space** key is selected, the cursor moves back to the previous letter. When the **Space** key is selected, the cursor proceeds to make one space.



DELETING THE AVOID AREAS

1. Select the **Delete** key on the screen in step 5 under "Renaming the avoid areas".



2. Select the **Yes** key.

The avoid area is deleted.


If the route guidance is set, the display shows the [AVOID AREA SETTINGS] screen.

INFO:

When the **No** key is selected, the avoid area

HOW DO I USE THE AVOID AREA FEATURE?

will not be deleted, and the screen returns to the previous screen.

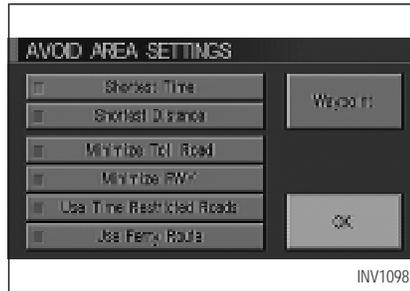

3. Please refer to “Making the system guide the route with detailed options” on page 5-27.

If the route guidance is not set, the display shows the current vehicle location.

SETTING WITH THE **Map** KEY

When the stored avoid area is selected, the avoid area can be adjusted or deleted.

Press the **SETTING** button.



Adjusting the stored avoid areas


1. Select the **Navigation** key.



2. The display shows the [NAVIGATION SETTINGS] screen.


Select the **Avoid Area Setting** key.

HOW DO I USE THE AVOID AREA FEATURE?

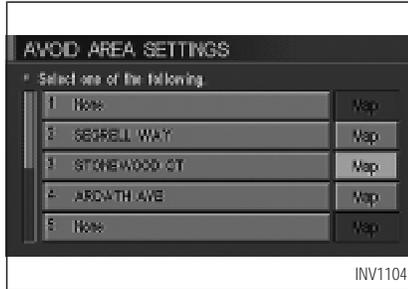

3. The display shows the [AVOID AREA SETTINGS] screen.

Select the **Map** key of stored avoid areas.

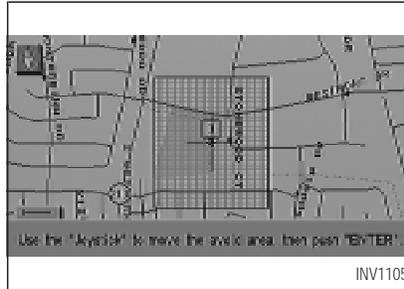

4. Use the joystick to adjust the location.



5. Press the PUSH ENTER button.


The display shows the keys on the right of the screen.

Select the **Set** key.

INFO:

- If you want to avoid the freeway in that area, select the **Avoid Freeway** key to turn on the green indicator on the key. (Indicator ON: avoid, OFF: do not avoid)
- When altering the size of avoid area, select the **Area** key. The area size is increased or decreased by three scales.

HOW DO I USE THE AVOID AREA FEATURE?

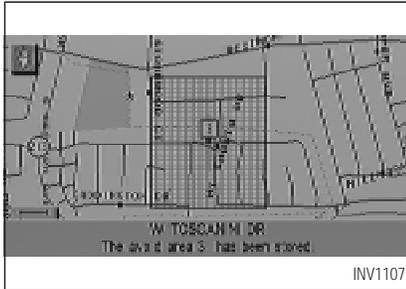

6. The avoid area is set, and the grid is displayed on the screen.

If the route guidance is set, the display shows the [AVOID AREA SETTINGS] screen.



7. Please refer to “Making the system guide the route with detailed options” on page 5-27.


If the route guidance is not set, the display shows the current vehicle location.



Deleting the stored avoid areas

1. Select the **Delete** key on the screen shown in step 5 under “Adjusting the stored avoid areas”.

HOW DO I USE THE AVOID AREA FEATURE?

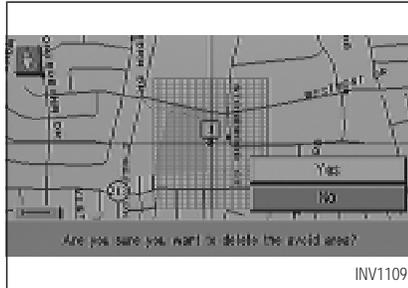


2. Select the **Yes** key.

The avoid area is deleted.

If the route guidance is set, the display shows the [AVOID AREA SETTINGS] screen.

INFO:

When the **No** key is selected, the avoid area will not be deleted, and the screen returns to the previous one.

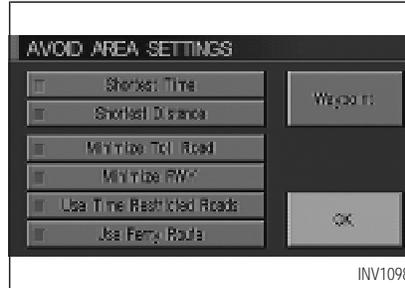

3. Please refer to “Making the system guide the route with detailed options” on page 5-27.

If the route guidance is not set, the display shows the current vehicle location.

9 HOW DO I USE THE AUTOMATIC REROUTING FEATURE?

Re-routing when the vehicle is off the suggested route.....	9-2
Automatic re-routing.....	9-2
Detouring from the route temporarily	9-3

HOW DO I USE THE AUTOMATIC REROUTING FEATURE?


RE-ROUTING WHEN THE VEHICLE IS OFF THE SUGGESTED ROUTE

When you have strayed from the suggested route during the route guidance, you can request a re-route from the current location using the automatic re-routing function.


AUTOMATIC RE-ROUTING

This setting will re-route automatically even if the driver turns off the suggested road. The auto re-route will bring the vehicle to the destination. You will have to set the system for automatic re-routing.

1. Press the **SETTING** button.

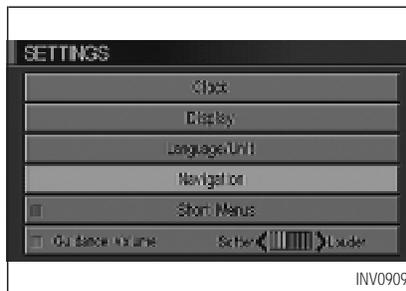


2. Select the **Navigation** key.

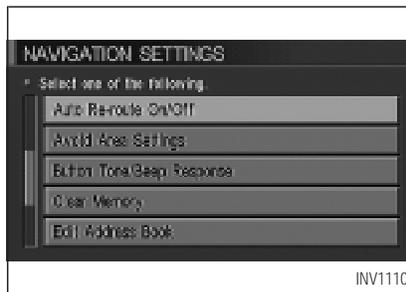

3. The display shows the [NAVIGATION SETTINGS] screen.

Select the **Auto Re-route On/Off** key.

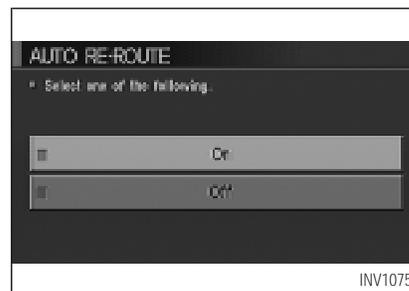

4. When turning on/off the auto reroute, select the **On** or **Off** key.
When the PUSH ENTER button is pressed, the selected key will be illuminated.
5. Press the **MAP** button.

The map screen will re-appear, and the system will start route calculation automatically.

HOW DO I USE THE AUTOMATIC REROUTING FEATURE?

INFO:

- When optional routes are not found, the original route will be displayed.
- When the vehicle runs off the suggested route with the automatic re-routing function activated, route re-calculation will be attempted so that the vehicle returns to the original route. However, if the vehicle stays off the route, the system will calculate a new route.


DETOURING FROM THE ROUTE TEMPORARILY

If you encounter a traffic jam, you can ask the system to calculate a detour with the pre-set distance.


NOTE:

The **detour** feature is only available when a destination has been set.


1. Press the **ROUTE** button.

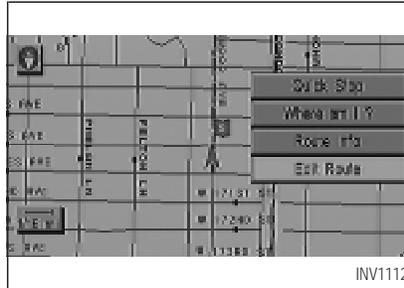

2. Select the **Edit Route** key.

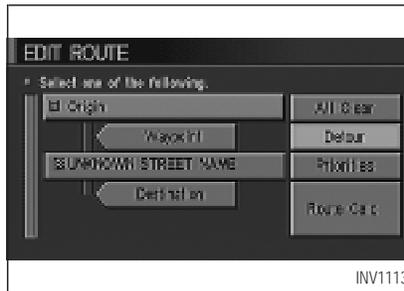

3. Select the **Detour** key.

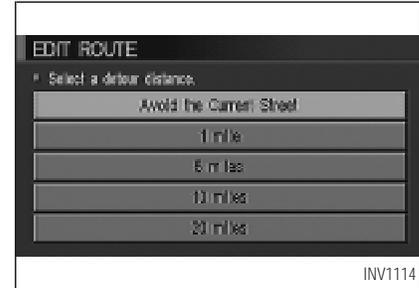

4. Set distance for detour calculation.

The system will look for a detour according to the distance set from the current location.

INFO:

- When the **Avoid the Current Street** key is selected, a detour route to approximately 20 miles (30 km) will be calculated if the distance to the next guide point intersection exceeds 20 miles (30 km).
- If an alternative route cannot be found, the

HOW DO I USE THE AUTOMATIC REROUTING FEATURE?

previous route before calculation will be displayed.

- If the vehicle is traveling at high speed, the suggested detour may start from the point the vehicle has already passed.

10 HOW DO I USE THE VOICE GUIDANCE FEATURE?

About voice guidance	10-2
Basics of voice guidance.....	10-2
Adjusting the guide volume	10-2
Directions given and the distance to the road points	10-3
Notification of an intersection on an ordinary road.....	10-3
Notification of consecutive intersections on an ordinary road.....	10-3
Notification of an entrance to a freeway.....	10-3
Notification of a freeway junction.....	10-3
Notification of an exit from a freeway.....	10-3
Requesting current voice information	10-3
Notes on the voice guidance.....	10-4

HOW DO I USE THE VOICE GUIDANCE FEATURE?

ABOUT VOICE GUIDANCE



To operate the navigation system or to use the screen functions, first park the vehicle in a safe place and set the parking brake. Using the system while driving can distract the driver and may result in a serious accident.

BASICS OF VOICE GUIDANCE

The voice guidance will verbally tell you which direction to turn when the vehicle approaches the intersection in which you have to make a turn to reach the destination.

NOTE:

Directional guidance provided by the navigation system does not take carpool lane driving into consideration, especially when carpool lanes are separated

from other road lanes.

- There may be some cases in which the voice guidance and the actual road conditions do not correspond. This may occur because of discrepancies between the actual road and the information on the DVD or due to the vehicle's speed.
- In case the content of the voice guidance does not match the actual road conditions, follow the information obtained from traffic signs or notices on the road.

ADJUSTING THE GUIDE VOLUME



1. Press the **SETTING** button on the control panel.
2. When turning on/off the voice guidance, push the **PUSH ENTER** button. When the **Guidance Volume** key is illuminated with a green indicator, it is activated. When turning up/down the voice guidance, touch the **Louder** or **Softer** key. The voice will become louder/softer.

HOW DO I USE THE VOICE GUIDANCE FEATURE?

DIRECTIONS GIVEN AND THE DISTANCE TO THE ROAD POINTS

Depending on the road types, the direction will differ.

INFO:

Depending on the vehicle speed, the distance may vary.

NOTIFICATION OF AN INTERSECTION ON AN ORDINARY ROAD

"In a half mile, right (left) turn."

"In a quarter mile, right (left) turn."

"Right (left) turn ahead."

NOTIFICATION OF CONSECUTIVE INTERSECTIONS ON AN ORDINARY ROAD

"In a half mile, right (left) turn."

"In a quarter mile, right (left) turn, then left (right) turn."

"Right (left) turn ahead, then left (right) turn."

NOTIFICATION OF AN ENTRANCE TO A FREEWAY

"In a half mile, freeway entrance on your right onto (road number and direction)."

"In a quarter mile freeway entrance on your right onto (road number and direction)."

"Freeway entrance on your right onto (road number and direction)."

NOTIFICATION OF A FREEWAY JUNCTION

"In about two miles, keep to the right (left) onto (road number and direction)."

"In about one mile, keep to the right (left) onto (road number and direction), then in quarter keep to the left (right)."

"Keep to the right (left) onto (road number and

direction), then in quarter of a mile keep to the left (right) onto (road number and direction)."

"Keep to the left (right) onto (road number and direction)."

NOTIFICATION OF AN EXIT FROM A FREEWAY

"In a half mile, exit on your right."

"Take the second exit on your right."

REQUESTING CURRENT VOICE INFORMATION



HOW DO I USE THE VOICE GUIDANCE FEATURE?

This is available during route guidance, from the time after the route calculation is completed until the vehicle arrives at the destination.

Press the **VOICE** button.

The current condition will be announced.

INFO:

- If you press the **VOICE** button when you are off the suggested route and when the automatic re-route function is off, the voice will announce: "Proceed to the highlighted route."
- If you press the **VOICE** button when you are going in the wrong direction, the voice will announce: "Please make a legal U-turn if possible."

NOTES ON THE VOICE GUIDANCE

- The voice guidance in this system should be regarded as a supplementary function. When driving your vehicle, check the route

on the map display and follow the actual road and all traffic regulations.

- The voice guidance is activated only for junctions with certain conditions. In some cases you may need to turn, even if there is no voice guidance.
- The content of the voice guidance may vary, depending on the direction of the turn and the type of junction with other roads.
- The route guidance will be activated at various times depending on the situation.
- When the vehicle is off the suggested route, route guidance is not available. The system will not inform you of this; please refer to the map display and request rerouting.
- At freeway junctions, the road numbers and directions may not accurately correspond with the voice guidance.
- At freeway exits, the street names may not

accurately correspond with the voice guidance.

- The displayed street names may sometimes differ from the actual names or "UNKNOWN STREET NAME" may be displayed.

Please refer to "Automatic re-routing" on page 9-2.

- When the green indicator on the **Guidance Volume** key is not illuminated, the voice guidance is not available.
- The voice guidance will start when the vehicle enters the suggested route. Before entering the route, refer to the map display for the direction.
- When the vehicle approaches a waypoint, the voice will say, "You have arrived at waypoint 1 (2, 3, 4,...)." The guidance will switch to the next route section. While the voice guidance is not available, please refer to the map display for the direction.

HOW DO I USE THE VOICE GUIDANCE FEATURE?

- When the vehicle approaches a destination, the voice will say, "You have arrived at your destination. Ending route guidance." For the remainder of the way, please find your direction on the map display.
- In some cases, the voice guidance ends before arrival at the destination. In such cases, drive the vehicle by referring to the destination icon displayed on the map screen.
- When the system can judge on which side the destination (waypoint) is located, the voice guidance will say "on the right" after announcing the arrival at the destination.
- Voice guidance may not operate as specified or may not operate at all due to the angle of roads at intersection entrances and exits.

11 HOW DO I ADJUST THE DISPLAY?

Screen information — Planview display	11-2	Setting automatic beep sound.....	11-16
Screen information — Birdview™ display	11-2	Setting the display mode.....	11-17
Switching between Birdview™ and Planview displays.....	11-3	Adjusting the display brightness.....	11-17
Zooming in and out of the map.....	11-6	Adjusting the display contrast.....	11-18
Changing the display direction (in Planview display).....	11-7	Switching the display color.....	11-19
Scrolling the map	11-8	How to use the D/N button.....	11-19
Displaying the complete route to the destination	11-9	Display off	11-20
Displaying turn list	11-10	Setting display duration	11-21
Requesting the simulation drive to the destination	11-11	Setting the clock.....	11-21
Cancel simulation.....	11-12	Adjusting the time	11-22
Displaying the track.....	11-12	Setting daylight saving time.....	11-22
GPS information display	11-13	Adjusting the time to the GPS.....	11-22
Updating the current vehicle location and the direction	11-14	Selecting the time zone	11-23
		How to handle the display	11-23
		Characteristics of liquid crystal display.....	11-23
		Maintenance of the display.....	11-24

HOW DO I ADJUST THE DISPLAY?

SCREEN INFORMATION — PLANVIEW DISPLAY



Direction key:

This indicates and sets the direction of the map on the display.

Please refer to “Changing the display direction (in Planview display)” on page 11-7.

Map scale:

This display indicates the scale on the current map.

Vehicle icon:

This icon indicates your vehicle and the direction of travel.

GPS indicator:

This will tell you the strength of the GPS signal received.

Please refer to “Accuracy of positioning” on page 2-2.




This will indicate the approximate distance of route and traveling time to the destination. This indicator will appear when you set the destination with the route guidance ON.



Press the **MAP** or **PREVIOUS** button to show the enlarged intersection display.

SCREEN INFORMATION — Birdview™ DISPLAY

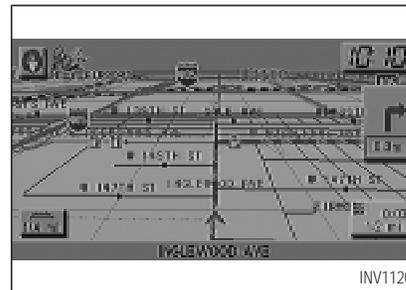

Map scale:


This display indicates the scale on the current map.

By using the **ZOOM IN** / **ZOOM OUT** buttons, you can change the scale of the map.

Height and distance on Birdview™ display is shown in the table on page 11-3.

HOW DO I ADJUST THE DISPLAY?

Height of view	Distance between grids	Depth of distance
512,000 feet (160,000 m)	160 miles (256 km)	approx. 2,240 miles (approx. 1,792 km)
128,000 feet (40,000 m)	40 miles (64 km)	approx. 560 miles (approx. 896 km)
64,000 feet (20,000 m)	20 miles (32 km)	approx. 280 miles (approx. 448 km)
32,000 feet (10,000 m)	10 miles (16 km)	approx. 140 miles (approx. 224 km)
16,000 feet (4,800 m)	4.0 miles (8 km)	approx. 70 miles (approx. 112 km)
8,000 feet (2,400 m)	2.0 miles (4 km)	approx. 35 miles (approx. 56 km)
4,000 feet (1,200 m)	1.0 mile (2 km)	approx. 17-1/2 miles (approx. 28 km)
2,000 feet (600 m)	1/2 mile (1 km)	approx. 8-3/4 miles (approx. 14 km)
1,000 feet (300 m)	1/4 mile (500 m)	approx. 4-3/8 miles (approx. 7 km)

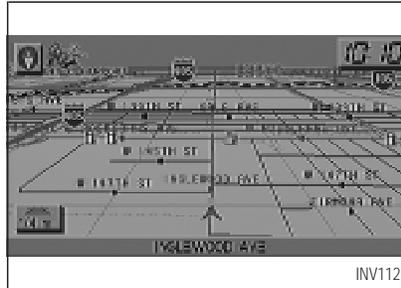


<Example> Height of view: 1,000 feet (300 m)



<Example> Height of view: 16,000 feet (4,800 m)

SWITCHING BETWEEN Birdview™ and PLANVIEW DISPLAYS

Birdview™ screen displays the view from above, looking down toward the direction the vehicle is traveling. This combines the detailed display close to the vehicle and the long distance view in one screen.

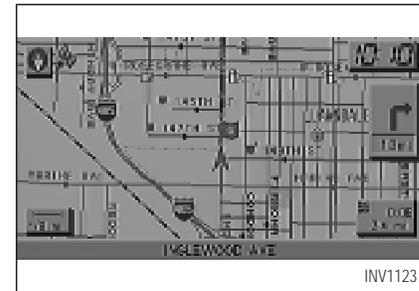


HOW DO I ADJUST THE DISPLAY?



3. The display shows the [NAVIGATION SETTINGS] screen.

Select the **View** key.

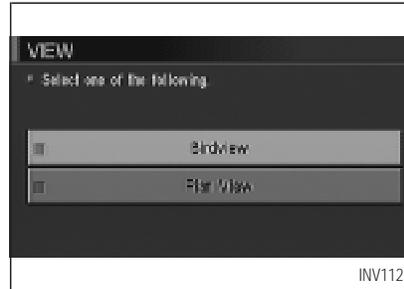

4. Select the **Birdview** or **Planview** key.

INFO:

Some locations or buildings may be labeled differently in Planview display and Birdview™ display.

About Birdview™ display

The destination (waypoints) cannot be set in Birdview™ display using the map method.

Set them in Planview display.

- It always appears with the current forward direction up.
- When the system is re-drawing the display in Birdview™ display, the distance the vehicle travels becomes longer, and/or the degree the vehicle turns becomes larger than in the Planview display in order to complete re-drawing.
- The names of the roads and locations may differ, depending on where the name appear on the screen.
- In order to avoid having too much detail on the map, all road names are not always shown on the screen. When the display re-draws the map, a road name which is shown on the previous screen may not appear on the new screen.

HOW DO I ADJUST THE DISPLAY?

ZOOMING IN AND OUT OF THE MAP

Use the **ZOOM IN** / **ZOOM OUT** buttons to change the scale of the display and height view.

Nine map scales are available from the most detailed (1 : 10,000) to the widest view (1 : 20.48 million).

Each time the **ZOOM IN** button is pressed, the map scale will change one level to display a more detailed map.

Each time the **ZOOM OUT** button is pressed, the map scale will change one level to display a map that shows a wider area.

The chosen map scale will be displayed on the left side of the screen.


INFO:

By pressing the button repeatedly, you can skip the levels to reach the map of desired scale.


Scale level on the Planview display

Map scale	Actual distance
1 : 20.48 million	160 miles (256 km)
1 : 5.12 million	40 miles (64 km)
1 : 1.28 million	10 miles (16 km)
1 : 320,000	2.5 miles (4 km)
1 : 160,000	1 mile (2 km)
1 : 80,000	1/2 mile (1 km)
1 : 40,000	1/4 mile (500 m)
1 : 20,000	1/8 mile (200 m)
1 : 10,000	1/16 mile (100 m)

Scales on the Birdview™ are listed on page 11-3.

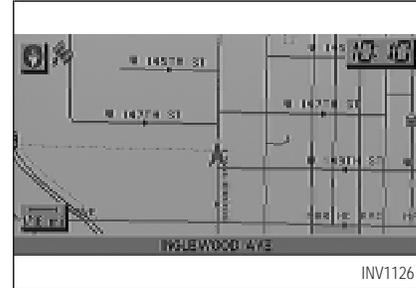

<Example> Most detailed level (1: 10,000)

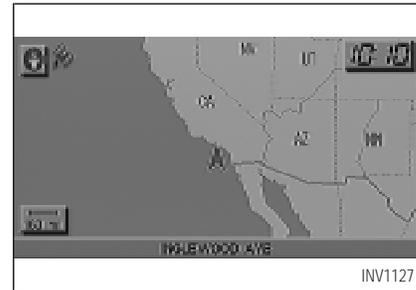


<Example> The widest level (1: 20.48 million)


HOW DO I ADJUST THE DISPLAY?

CHANGING THE DISPLAY DIRECTION (IN PLANVIEW DISPLAY)

1. Press the **SETTING** button.

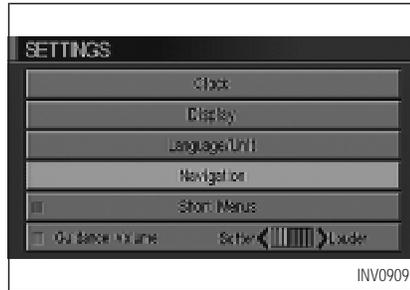


2. Select the **Navigation** key on the [SETTINGS] screen.

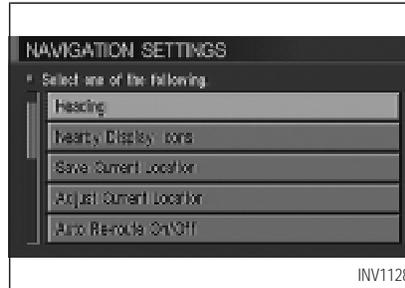

3. Select the **Heading** key on the [NAVIGATION SETTINGS] screen.

The [HEADING] screen will be displayed.

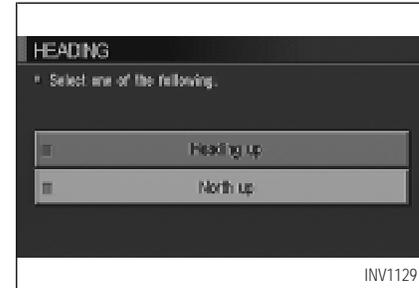

4. Select the **Heading Up** key or the **North Up** key.


The map is displayed as follows:

Heading Up : The map shows the current forward direction up.


North Up : The map shows North up.

HOW DO I ADJUST THE DISPLAY?

<Display with North up>

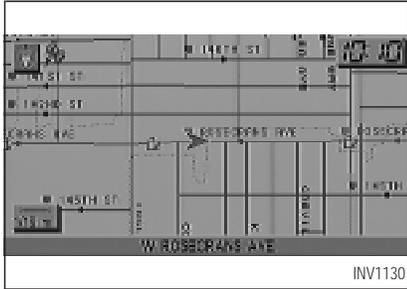

<Display with the forward direction up>

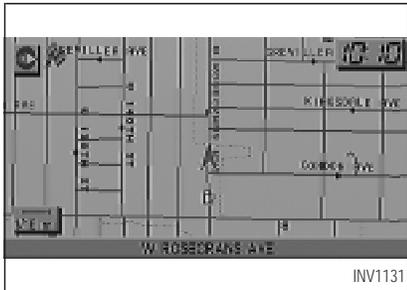


INFO:

- When the key is selected, the green indicator light will light up.
- When the **[MAP]** button is pressed after the display setting, the **[CURRENT LOCATION]** screen will appear.

When the **[PREVIOUS]** button is pressed, the previous screen will reappear.

SCROLLING THE MAP

You can manually scroll the map to check the location of your choice.

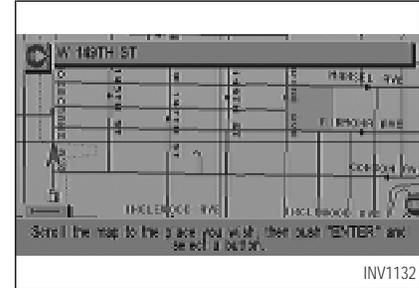

1. Operating the joystick.

The map scrolls in the same direction as the joystick movement.

INFO:


While the vehicle is traveling, a single operation will move within the displayed area of the screen.

2. Press the **[MAP]** button to go back and show the current vehicle position.


HOW DO I ADJUST THE DISPLAY?

INFO:

You can also select the **PREVIOUS** button to go back.

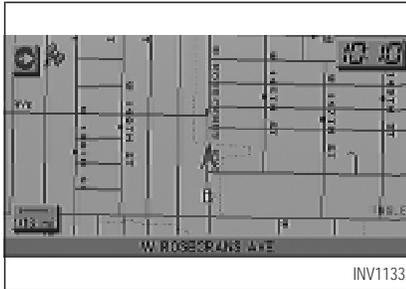

DISPLAYING THE COMPLETE ROUTE TO THE DESTINATION

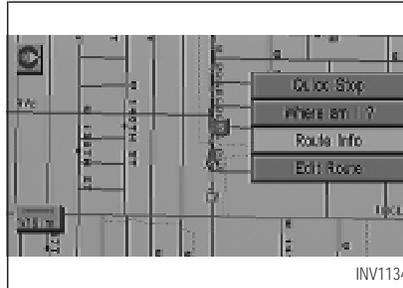

You can request to display the complete suggested route to the destination.

1. Press the **ROUTE** button.


Keys will be displayed on the screen.



2. Select the **Route Info** key.


3. Select the **Complete Route** key.

HOW DO I ADJUST THE DISPLAY?

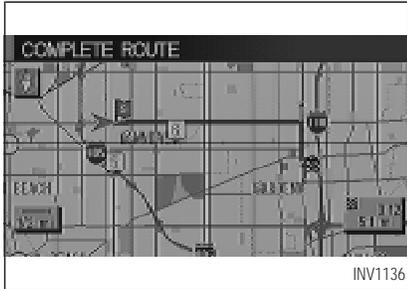


The complete suggested route to the destination will be displayed.

DISPLAYING TURN LIST

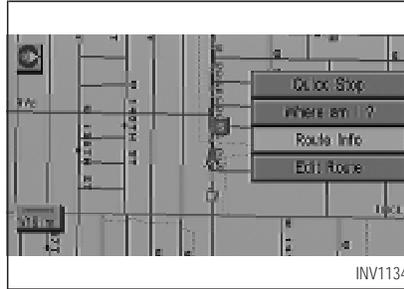

You can display the list of guide points to the destination during route calculation.

1. Press the **ROUTE** button.
2. Select the **Route Info** key.

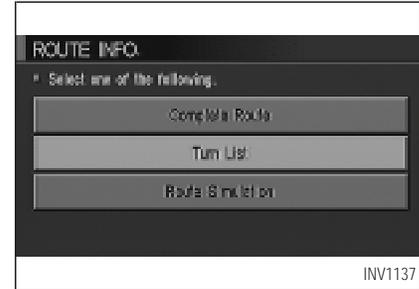

3. Select the **Turn List** key.



A list of destinations, waypoints and guide

HOW DO I ADJUST THE DISPLAY?

points will be displayed. Guidance will be made at each guide point which direction to turn.

The distance between the guide points and the travel time will also be displayed.

It may take time to prepare the turn list. In such cases, the **Turn List** key will be highlighted and you can not select it until calculation is completed.

INFO:


- In the turn list, turning points more than 60 miles (100 km) away from the current vehicle location will not be displayed.
- When calculated routes include a freeway, information about freeway entrances and exits will also be displayed.

REQUESTING THE SIMULATION DRIVE TO THE DESTINATION


You can simulate driving the entire suggested route to the destination on the screen.

1. Press the **ROUTE** button.


Keys will be displayed on the screen.

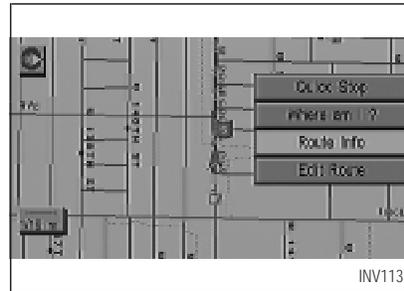

2. Select the **Route Info** key.

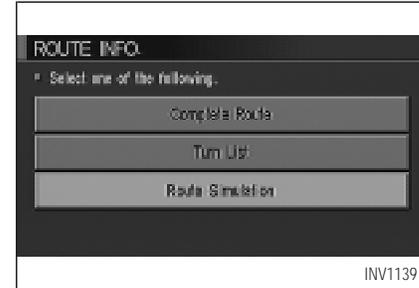

3. Select the **Route Simulation** key.

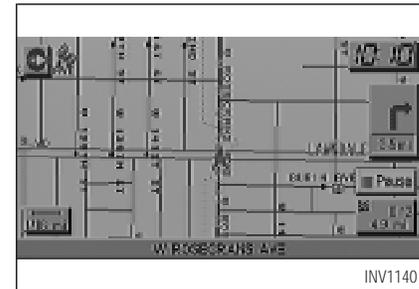

The screen will display a simulated drive with

HOW DO I ADJUST THE DISPLAY?

voice guidance on the suggested route to the destination.


- When the **CANCEL** or **DEST** button is pressed, or the vehicle starts to run, the route simulation will be canceled.



CANCEL SIMULATION

- Press the **ROUTE** button during simulation.

Select the **Route Info** key.

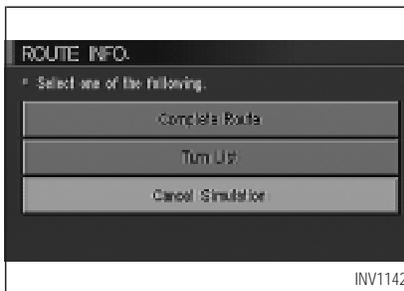

- The [ROUTE INFO.] screen will be displayed.

Select the **Cancel Simulation** key.

INFO:

When the **CANCEL** or **DEST** button is pressed, or the vehicle starts to run, the route simulation will be canceled.

INFO:


If you select the **Pause** key, simulation is

paused. If you select the key again, the simulation will restart.

DISPLAYING THE TRACK

You can have the system track the road you have taken, and display it with indication marks or locus indicators (○).

- Press the **SETTING** button.

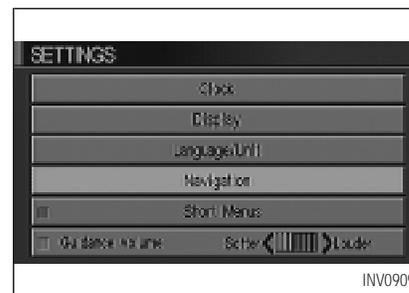


- Select the **Navigation** key on the [SETTINGS] screen.


HOW DO I ADJUST THE DISPLAY?



3. Select the **Tracking On/Off** key.

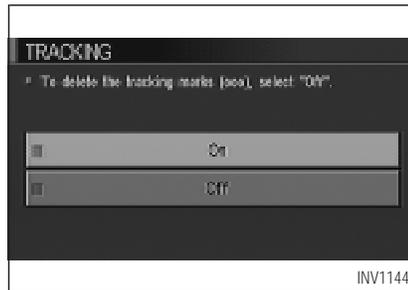

4. Select the **On** key.

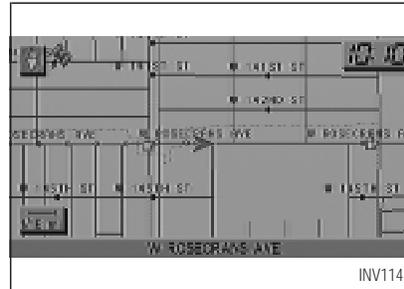

5. Press the **MAP** button.

The location of the vehicle will be displayed.

INFO:

- You can select the **On** key to display the locus indicator (○), and the **Off** key to get rid of it.
- The locus indicator (○) may be spaced differently, according to the scale of the map.
- If you reset the current vehicle location, the locus indicator (○) will be cleared.

GPS INFORMATION DISPLAY


The following GPS information will be displayed on the screen: latitude, longitude, altitude, signal reception, and satellite locations.

1. Press the **SETTING** button.




2. Select the **Navigation** key on the [SETTINGS] screen.

HOW DO I ADJUST THE DISPLAY?

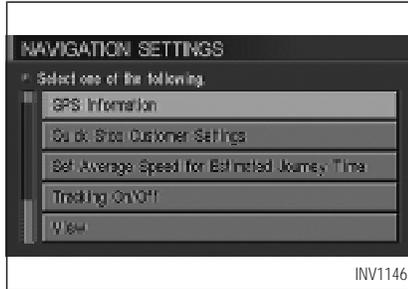

3. Select the **GPS Information** key.

GPS information will be displayed.

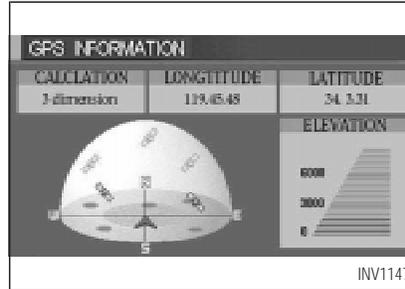

INFO:


- The satellite with a strong enough signal will be indicated in green.
- The display will read, [3-dimensional positioning], [2-dimensional positioning], or [positioning not possible], depending on the signal strength. (Altitude will not be displayed in 2-dimensional positioning.)
- When the **MAP** button is pressed, the [CURRENT LOCATION] screen will appear. When the **PREVIOUS** button is pressed,

the [NAVIGATION SETTINGS] screen will appear.

UPDATING THE CURRENT VEHICLE LOCATION AND THE DIRECTION


If the vehicle icon does not indicate the correct location or the direction does not match the actual road, you can adjust them on the map screen.

1. Press the **SETTING** button.

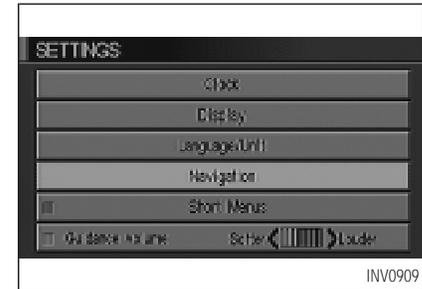


HOW DO I ADJUST THE DISPLAY?


2. Select the **Navigation** key on the [SETTINGS] screen.

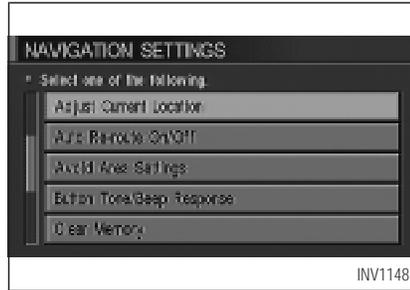

3. Select the **Adjust Current Location** key on the [NAVIGATION SETTINGS] screen.

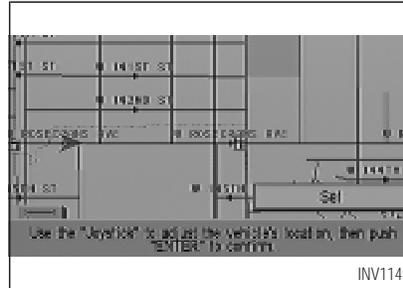

4. Align the correct location to the cross point on the map using the joystick, and select the **Set** key. The current location will be corrected, and the direction adjustment screen will appear.

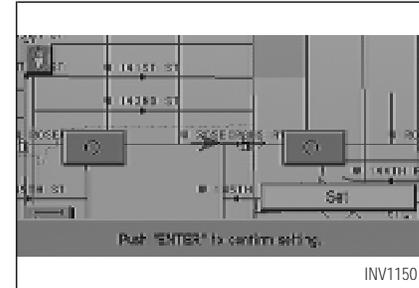


5. Adjust the direction using the  and  key.

The arrow on the display shows the direction of the vehicle icon.

6. Select the **Set** key.

HOW DO I ADJUST THE DISPLAY?

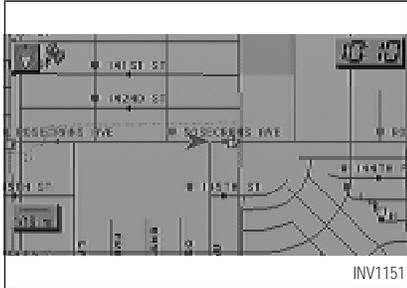


INFO:

- It is not possible to update the vehicle location when the vehicle is moving.
- Depending on the driving conditions, the vehicle icon may not exactly correspond to the actual location of the vehicle. To verify position, refer to map books or check actual landmarks.
- If you notice that the system is displaying a different road from the one the vehicle is actually traveling, and the vehicle icon does

not go back to the right road after traveling approximately 6-1/4 miles (10 km), update the vehicle location.

SETTING AUTOMATIC BEEP SOUND

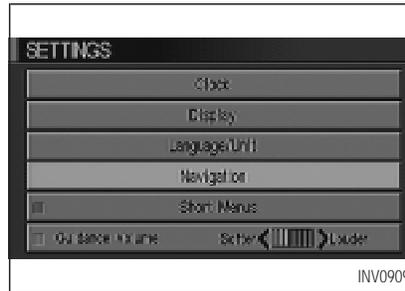

You can set the automatic beep sound. (Activated during automatic rerouting, etc.)

1. Press the **[SETTING]** button.

The **[SETTINGS]** screen will be displayed.


Select the **[Navigation]** key.



2. The **[NAVIGATION SETTINGS]** screen will be displayed.

Select the **[Button Tone/Beep Response]** key.

HOW DO I ADJUST THE DISPLAY?

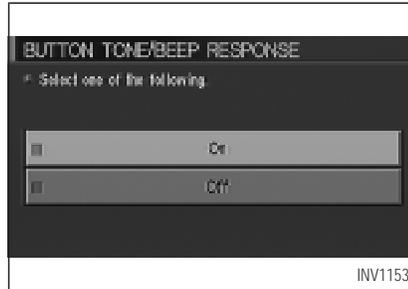

3. The [BUTTON TONE/BEEP RESPONSE] screen will be displayed.

When turning on/off the beep sound, select the **On** or **Off** key.

When the PUSH ENTER button is pressed, the selected key will be illuminated.

INFO:

Press the **MAP** button to return to the map.


SETTING THE DISPLAY MODE

You can alter the display mode.


ADJUSTING THE DISPLAY BRIGHTNESS

You can choose the best brightness for the display.

1. Press the **SETTING** button.

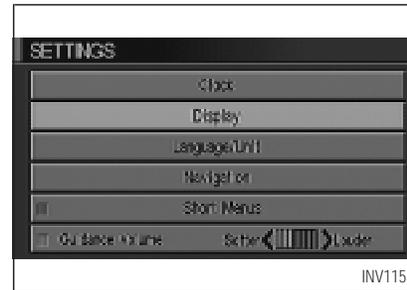


2. Select the **Display** key.

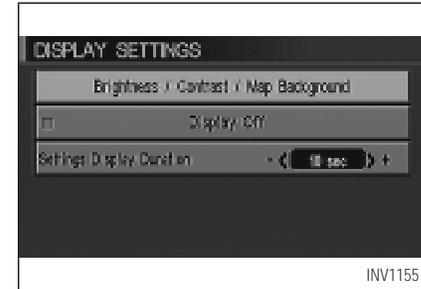

3. The [DISPLAY SETTINGS] screen will be displayed.

Select the **Brightness/Contrast/Map Background** key.

HOW DO I ADJUST THE DISPLAY?

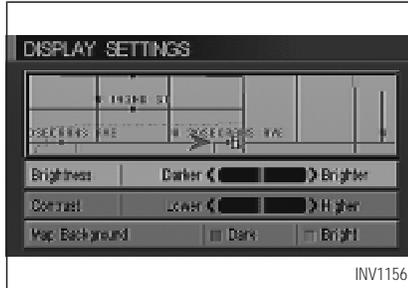

4. Select the **Brightness** key.

When the joystick is tilted to the right, the screen will brighten, and darken when tilted to the left.

INFO:

The screen displayed before pressing the **SETTING** button will be displayed as a sample screen on the [DISPLAY SETTINGS] screen.


ADJUSTING THE DISPLAY CONTRAST

You can choose the best contrast for the display.

1. Press the **SETTING** button.




2. Select the **Display** key.

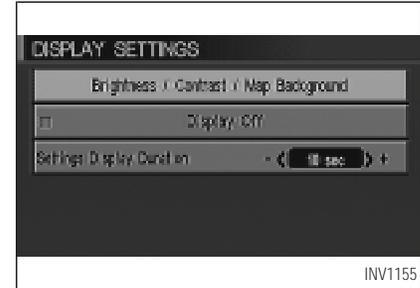

3. The [DISPLAY SETTINGS] screen will be displayed.
Select the **Brightness/Contrast/Map Background** key.

HOW DO I ADJUST THE DISPLAY?

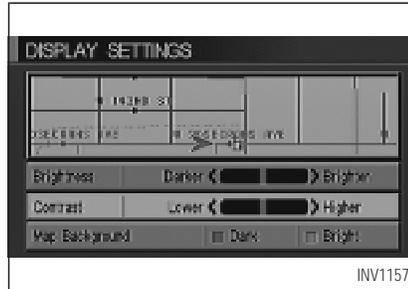


4. Select the **Contrast** key.


When the joystick is tilted to the right, contrast of the screen will be higher, and will be lower when tilted to the left.

SWITCHING THE DISPLAY COLOR

1. Press the **SETTING** button.

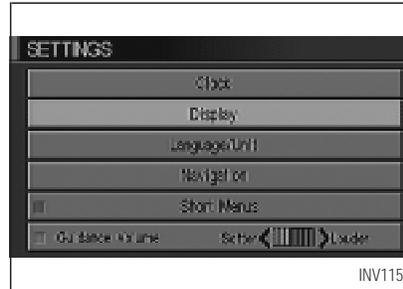


2. Select the **Display** key.

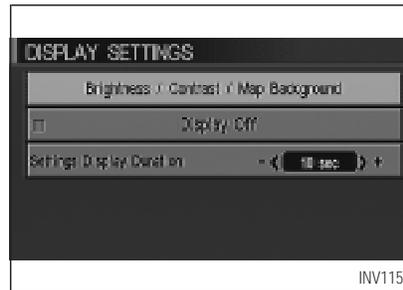

3. The [DISPLAY SETTINGS] screen will be

displayed.

Select the **Brightness/Contrast/Map Background** key.

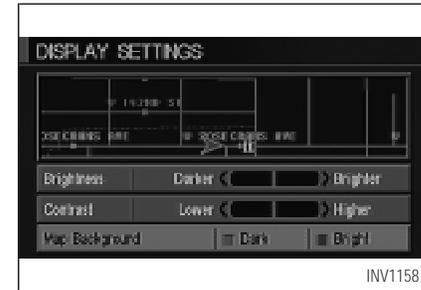

4. Select the **Map Background** key.
The display brightness will be altered.

HOW TO USE THE **[D/N]** BUTTON

1. Press the **[D/N]** button.

HOW DO I ADJUST THE DISPLAY?



- When the **[D/N]** button is pressed, the screen will repeatedly switch between normal lighting and dimmer lighting independently of turning on or off of illumination.

DISPLAY OFF

The display can be turned off with the following procedure.

- Press the **[SETTING]** button.



- Select the **[Display]** key.



- The **[DISPLAY SETTINGS]** screen will be

displayed.

Select the **[Display Off]** key.

The indicator of the **[DISPLAY OFF]** will turn green.



- A comment will be displayed for 5 seconds and the display will turn off.

To restart the display, press the **[SETTING]** button and select the **[Display Off]** key again.

INFO:

- When the **[INFO]** and **[MAP]** buttons are


pressed with the display turned off, the screen shows normally, then the display turns off again.

- When the [D/N] button is pressed with the display turned off, the display brightness is changed when the screen is re-displayed.

SETTING DISPLAY DURATION

You can set the confrontation continuance operation time.

1. Press the [SETTING] button.

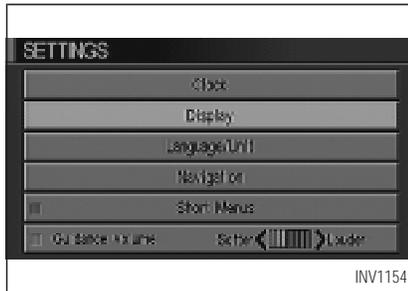

2. Select the [Display] key.



3. The [DISPLAY SETTINGS] screen will be displayed.
Select the [Setting Display Duration] key.

INFO:

When you finish setting the confrontation continuance operation time, the display will return to the previous display automatically.

SETTING THE CLOCK

The clock uses the GPS signal to determine the time.

HOW DO I ADJUST THE DISPLAY?

The clock should only need to be adjusted if the vehicle is driven into a new time zone or for daylight savings time.


1. Change to the current vehicle location screen.
2. Select the [Setting] key.



3. Select the [Clock] key on the [SETTINGS] screen.

HOW DO I ADJUST THE DISPLAY?

ADJUSTING THE TIME

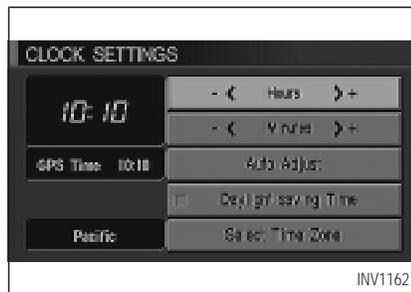

Select the **Hours** or **Minutes** key and tilt the joystick to the right or left to adjust the time.


The time will change step by step.

INFO:

After completion of the setting, press the **PREVIOUS** button.

SETTING DAYLIGHT SAVING TIME

Turn ON or OFF daylight saving time.

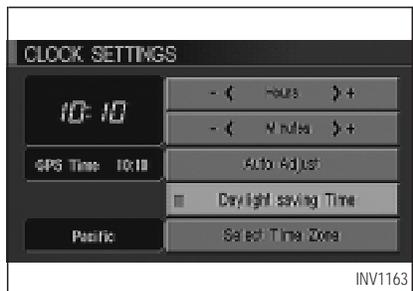


1. Every time the **Daylight Saving Time** key is selected, the light turns ON and OFF alternately.

ON: The displayed time advances by one hour.

OFF: The current time is displayed.

ADJUSTING THE TIME TO THE GPS

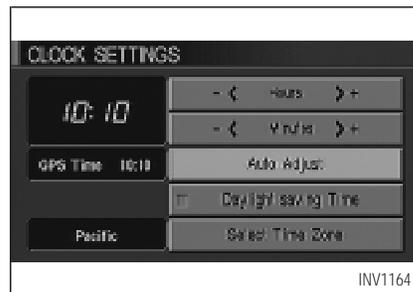


1. Select the **Auto Adjust** key.

The time will be reset to the GPS time.

HOW DO I ADJUST THE DISPLAY?

SELECTING THE TIME ZONE

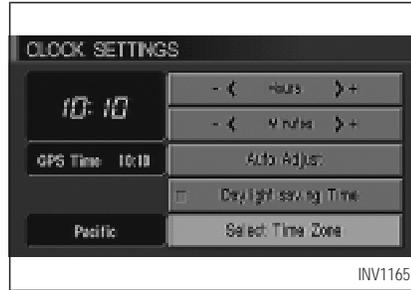

1. Select the **Select Time Zone** key.

The [TIME ZONE] screen will appear.



2. Select one of the following zones depending on the current location.
 - **Pacific** zone
 - **Mountain** zone
 - **Central** zone
 - **Eastern** zone
 - **Atlantic** zone
 - **Newfoundland** zone

After selection, the [CLOCK SETTINGS] screen will appear.

The GPS time (manual time) corresponding to the selected zone will be displayed.

INFO:

Pacific zone has been set as the initial (default) setting.

HOW TO HANDLE THE DISPLAY

The display uses liquid crystal and should be handled with care.



WARNING

Never disassemble the display. It has some areas with extreme high voltage. Touching it may result in serious personal injury.

CHARACTERISTICS OF LIQUID CRYSTAL DISPLAY

- If the temperature inside the vehicle is es-

HOW DO I ADJUST THE DISPLAY?

pecially low, the display will stay relatively dim or the movement of the images may be slow. These conditions are normal; when the temperature rises, the display will function normally.

- You may notice darker or brighter dots in the display; this is inherent in monitor displays and is not a malfunction.
- You may also notice a remnant of the previous display image on the screen. This afterimage is inherent in displays and is not abnormal.

INFO:

The screen may become distorted by strong magnetic fields.

MAINTENANCE OF THE DISPLAY



CAUTION

- *To clean the display, never use a rough cloth, alcohol, benzine, thinner, any kind of solvent, or paper towel with chemical cleaning agent. They will scratch or deteriorate the panel.*
- *Do not splash any liquid such as water or car fragrance on the display. Contact with liquid will cause the system to malfunction.*

If you need to clean the display screen, use a dry soft cloth. If additional cleaning is necessary, use a small amount of neutral detergent with a soft cloth. Never soak the exterior with water or detergent.

12 HOW DO I USE THE VEHICLE INFORMATION?


Vehicle information display	12-2
Trip computer information.....	12-2
Fuel economy information.....	12-2
Maintenance information.....	12-3
Route guidance to a fuel station when fuel is low.....	12-4

HOW DO I USE THE VEHICLE INFORMATION?

VEHICLE INFORMATION DISPLAY

Vehicle information can be displayed. If fuel is low or the system malfunctions, a warning will be displayed.

1. Press the **INFO** button.

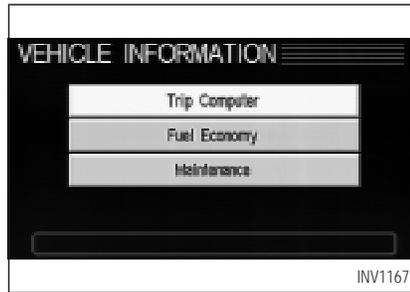

2. Choose an item using the joystick and press the PUSH ENTER button.
3. After setting, press the **PREVIOUS** button to return to the previous screen.

TRIP COMPUTER INFORMATION



1. When the **Trip computer** key is selected, the [TRIP COMPUTER INFO.] screen will be displayed.

Elapsed Time, Driving Distance and Average Speed will also be displayed.

2. To reset, select the **RESET** key before driving the vehicle.

FUEL ECONOMY INFORMATION




1. When the **Fuel Economy** key is selected, the [FUEL ECONOMY INFO.] screen will be displayed.

Average fuel economy and distance to empty will be displayed for reference.

2. To reset the Average Fuel Economy, select the **RESET** key.



HOW DO I USE THE VEHICLE INFORMATION?

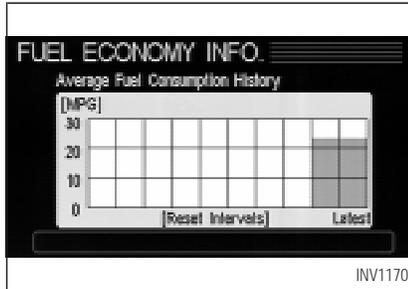

3. When the **Fuel Economy Record** key is selected, the [ECONOMY INFO.] screen will be displayed.

The average fuel consumption history will be displayed in graph along with the average for the previous Reset-to-Reset period.

MAINTENANCE INFORMATION

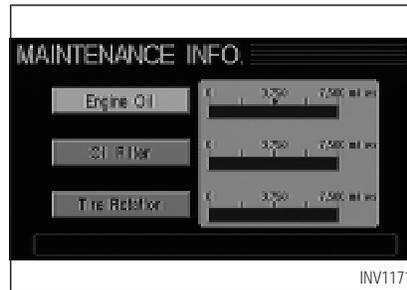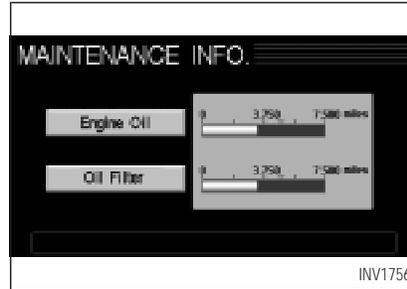

1. When the **Maintenance** key is selected,

the [MAINTENANCE INFO.] screen will be displayed.

2. To set the maintenance information for the Engine Oil, Oil Filter or Tire Rotation (if so equipped), choose an item using the joystick and press the PUSH ENTER button.



3. The [ENGINE OIL] screen will be displayed.
4. To reset, select the **RESET** key.
5. Set the distance of the maintenance schedule.

To determine the maintenance interval, refer to vehicle's Owner's Manual.

HOW DO I USE THE VEHICLE INFORMATION?

To automatically display the [MAINTENANCE INFO.] screen when setting trip distance is reached, select the [Display Maintenance Notification] key and press the PUSH ENTER button.

ROUTE GUIDANCE TO A FUEL STATION WHEN FUEL IS LOW

When fuel is low, it is possible to display routes to the nearest fuel station.

1. Press the [INFO] button.



2. The [WARNING] screen will be displayed. Select the [Gas Station] key.



3. The [QUICK STOP] screen will be displayed.

The list of selected facilities with each direction and distance will be displayed. Select one of them in the list.



4. Set route priorities, then press the [OK] key. The route calculation to the destination will be started.

INFO:

If quick stop is set after the destination was set, the system will start the route calculation to the location as the waypoint.

Please refer to "Quick stop" on page 5-36.

13 INFORMATION ON MAP DATA DISCS

How to order map data DVD-ROM updates	13-2
How to handle the DVD-ROM	13-2
About the navigation map	
DVD-ROM.....	13-3
Icons	13-3
Abbreviations definition list.....	13-6


INFORMATION ON MAP DATA DISCS

HOW TO ORDER MAP DATA DVD-ROM UPDATES

To order updated mapping DVD-ROMs or additional DVD-ROMs, please contact the INFINITI NAVIGATION SYSTEM HELP DESK at:

- ADDRESS: P.O. Box 2082, Burlingame, CA 94011
- E-MAIL: customersupport@zenrin.com
- WEB SITE: www.zenrin.com
- PHONE: (800) 662-6200
- HOURS: 6:00 AM to 4:00 PM (Pacific Time)

HOW TO HANDLE THE DVD-ROM

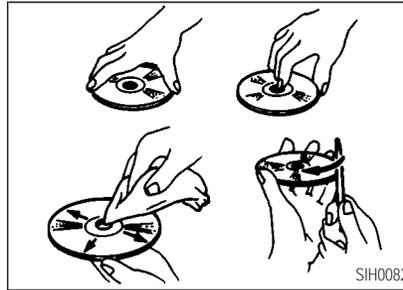

CAUTION

- *Handle a DVD-ROM by its edges. Never touch the surface of the disc.*
- *To clean a disc, wipe the surface from the center to the outer edge*

using a clean, soft cloth. Do not wipe the disc using a circular motion.

Do not use a conventional record cleaner, benzene, thinner or alcohol intended for industrial use.

- *A new disc may be rough on its inner and outer edges. Remove the rough edges using the side of a pen or pencil as illustrated.*
- *Never attempt to use a DVD-ROM that has been cracked, deformed, or repaired using adhesive. Doing so may cause damage to the equipment.*
- Handle the DVD-ROM carefully to avoid contamination or flaws. Otherwise, signals may not be read properly.

INFORMATION ON MAP DATA DISCS

- Do not write, draw or attach anything on any side of the DVD-ROM.
- Do not store the DVD-ROM in locations with direct sunlight or in high temperatures or humidity.
- Always place discs in the storage case when they are not being used.
- Do not put on any sticker or write anything on either surface of the DVD-ROM.

ABOUT THE NAVIGATION MAP DVD-ROM

1. This navigation map DVD-ROM has been prepared by ZENRIN CO., LTD. under license from Navigation Technologies Corporation. ZENRIN CO., LTD. has added, processed and digitized data based on the digital road map data of Navigation Technologies Corporation. Due to the production timing of the map data, some new roads may not be included in this map data or some of the names or roads may be dif-

ferent from those at the time you use this DVD-ROM.

2. Traffic control and regulation data used in this DVD-ROM may be different from those at the time you use this DVD-ROM due to the data production timing. When driving your vehicle, follow the actual traffic control signs and notices on the roads.
3. Reproducing or copying this map software is strictly prohibited by law.

Published by Nissan North America, Inc.

© 2000 Navigation Technologies. All rights reserved. "Certain business data provided by infoUSA.com, Inc. Copyright 2000, All rights reserved".

ICONS

Icon legend follows:

INFORMATION ON MAP DATA DISCS

Legend of the icons used on the map



Airport



Historical Monument



Police Station



Amusement Park



Hotel or Motel



Rest Area



City Hall



Museum



Shopping Center



Court House



Open Parking Area



Sports Complex



Ferry Terminal



Parking Garage



Tourist Office



Golf Course



Petrol Station





University/College

INFORMATION ON MAP DATA DISCS

Legend of the 3-D icons

Note: Only some limited landmarks are displayed with 3-D icons on the BirdView™ display. In some areas, no 3-D icons may be displayed depending on the location.

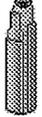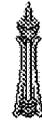														
Building									United	GE	Whitehouse	Pentagon	US capital	
														
Empire	Chrysler	Tower							Airport	Amusement park	Aquarium	Astronomical observation	Bridge	
														
Church	China Town	City hall	HOLLYWOOD sign	Lighthouse	Marine tower	Museum	Park	Race track	Castle					
														
Ship	Ski slope	University	Zoo	The statue of Liberty	Stadium									

INFORMATION ON MAP DATA DISCS

ABBREVIATIONS DEFINITION LIST

Abbreviation	Meaning
ACCS	ACCESS
ACRS	ACRES
ALY	ALLEY
APPR	APPROACH
AVE	AVENUE
BCH	BEACH
BND	BEND
BLF	BLUFF
BLVD	BOULEVARD
BRG	BRIDGE
BRK	BROOK
BYP	BYPASS
BYWY	BYWAY
CYN	CANYON
CSWY	CAUSEWAY
CTR	CENTER
CHSE	CHASE
CIR	CIRCLE
CLFS	CLIFFS
CLB	CLUB
COR	CORNER
CT	COURT
CV	COVE

CRK	CREEK
CRES	CRESCENT
XING	CROSSING
CURV	CURVE
DL	DALE
DR	DRIVE
EST	ESTATES
EXP	EXPRESS
EXPY	EXPRESSWAY
EXT	EXTENSION
FRY	FERRY
FLD	FIELD
FLDS	FIELDS
FLTS	FLATS
FRD	FORD
FWY	FREEWAY
GDNS	GARDENS
GTWY	GATEWAY
GLN	GLEN
GRV	GROVE
HVN	HAVEN
HTS	HEIGHTS
HWY	HIGHWAY
HL	HILL

HLS	HILLS
HOLW	HOLLOW
JCT	JUNCTION
KY	KEY
KNL	KNOLL
KNLS	KNOLLS
LNDG	LANDING
LN	LANE
LCK	LOCK
MNR	MANOR
MDWS	MEADOWS
ML	MILL
MT	MOUNT
MTN	MOUNTAIN
OPAS	OVERPASS
PKWY	PARKWAY
PSGE	PASSAGE
PNES	PINES
PL	PLACE
PLZ	PLAZA
PT	POINT
PROM	PROMENADE
RNCH	RANCH
RDG	RIDGE

INFORMATION ON MAP DATA DISCS

Abbreviation	Meaning
RD	ROAD
SHRS	SHORES
SPGS	SPRINGS
SQ	SQUARE
ST	STREET
SUBD	SUBDIVISION
SMT	SUMMIT
TER	TERRACE
TRCE	TRACE
TRAK	TRACK
TRL	TRAIL
TUNL	TUNNEL
TPKE	TURNPIKE
VLY	VALLEY
VIA	VIADUCT
VW	VIEW
VLG	VILLAGE
VIS	VISTA

14 TROUBLESHOOTING GUIDE

Customer assistance	14-2
Basic operations	14-3
Vehicle icon	14-4
Map DVD-ROM	14-6
Destination, waypoints or menu contents cannot be chosen or set	14-6
Voice guidance	14-8
Route calculation	14-9

TROUBLESHOOTING GUIDE

CUSTOMER ASSISTANCE

For assistance or inquiries about the Infiniti Navigation System, please contact:

The Infiniti Navigation Helpdesk at 800-662-6200 or visit the Infiniti website at www.infiniti.com.

TROUBLESHOOTING GUIDE

BASIC OPERATIONS

Symptom	Possible cause	Remedy
No image comes on.	The brightness adjustment is at the lowest setting.	Adjust it brighter.
No map comes on the screen.	No map DVD-ROM is inserted, or it is inserted upside down.	Insert the DVD-ROM correctly.
	The map display mode is switched off.	Press the MAP button.
No voice guide is available. or The volume is not high enough.	The volume is not set correctly or turned off.	Adjust the volume correctly.
The screen is too dim. The movement is slow.	The temperature in the vehicle is low.	Wait for the temperature to rise.
There are darker or brighter dots in the display.	It is inherent to displays. This condition is characteristics of liquid crystal displays.	This condition is not abnormal.

- Stored location in the address book and other memory functions may be lost if the car's battery is disconnected or becomes discharged for a long time.
If this should occur, service the car's battery as necessary and re-enter the address book information.

TROUBLESHOOTING GUIDE

VEHICLE ICON

Symptom	Possible cause	Remedy
The location names differ, between Planview and Birdview*.	This is because the displayed information is reduced so that the screen does not become too crowded. There is also a chance that names of the roads or locations will be repeatedly displayed. The name appearing on the screen may be different because of the processing procedure.	It should not be regarded as abnormal.
The vehicle icon is not shown correctly.	The vehicle might have moved with the ignition off, for example on a ferry boat or car transporter.	Drive the vehicle with GPS on for some distance.
The screen does not switch to night screen even after turning the headlights on.	The last setting is the daytime screen, when the lights were last turned on.	Turn the headlights on again, go to [DISPLAY SETTINGS] screen and set it to the night screen.
The map does not scroll even when the vehicle is traveling.	The display is not switched to the map screen.	Press the  button.
The vehicle icon does not show up.	The display is not switched to the map screen.	Press the  button.
GPS indicator on the screen remains gray.	GPS signals are not received because the vehicle is indoors or in the shade of buildings.	Move the vehicle to outdoors with a clear view of the sky.
	GPS signals are not received because some objects are placed on the instrumental panel.	Remove the objects from the instrumental panel.
	GPS satellites are in poor locations.	Please wait for the satellites to move to better locations.

TROUBLESHOOTING GUIDE

VEHICLE ICON

Symptom	Possible cause	Remedy
The location of vehicle icon does not match the actual position.	Driving on slippery road surface	If the position marker does not move to the correct position even after the vehicle has been driven approximately 6 miles (10 km), adjust the current location. If necessary, adjust the moving speed of the vehicle.
	Driving on slanted area	
	Rough or violent driving	If the position marker does not move to the correct position even after the vehicle has been driven approximately 6 miles (10 km), adjust the current location.
	GPS indicator remains gray.	Please check the GPS indicator on the screen to see if it remains gray. If it remains gray, drive the vehicle to a place where the GPS can be received.
	Because the vehicle has tire chains on, or the system was transferred to a different vehicle, errors (gain or loss) result in calculating the speed from the speed pulse.	The location of the vehicle icon will move by driving the vehicle for 30 minutes (in case it is running at 18-3/4 miles/hour (30 km/h)). If you still notice errors, adjust moving speed.
	The map data has an error or is incomplete (if the location error always happens in the same area).	Please wait for the update of the Map DVD-ROM.

TROUBLESHOOTING GUIDE

MAP DVD-ROM

Symptom	Possible cause	Remedy
The message "Error" appears after operation.	Map DVD-ROM is soiled or partially damaged.	Check the DVD-ROM and wipe it clean with a soft cloth, following cautions and instructions on page 13-2.
		If you see any damage, replace the DVD-ROM.

DESTINATION, WAYPOINTS OR MENU CONTENTS CANNOT BE CHOSEN OR SET

Symptom	Possible cause	Remedy
Turn list is not displayed.	Route search does not occur.	Set designation areas and perform route search.
	Car marker does not appear on recommended route.	Drive on the recommended route.
	Route guide is OFF.	Turn the route guide ON.
In rerouting, the waypoints are not included in the calculation.	The system has judged that the vehicle has already passed the point to be chosen or set.	If you want to go to that point again, edit the route again.

TROUBLESHOOTING GUIDE

DESTINATION, WAYPOINTS OR MENU CONTENTS CANNOT BE CHOSEN OR SET

Symptom	Possible cause	Remedy
Route information is not displayed.	Route calculation has not yet been requested.	Set the destination and request route calculation.
	The vehicle icon is not on the suggested route.	Please drive the vehicle along the suggested route.
	Route guidance is off.	Turn the route guidance on.
Route is not calculated automatically.	The vehicle is not running on a route from which calculation can occur.	Enter a route from which calculation can occur from. Alternatively, you can calculate the route manually. In this case, the entire route will be calculated again.
It is impossible to request a detour.	Your vehicle is not running on the suggested route.	Restart route calculation or enter the suggested route.
The detour found is the same as the previous suggestion.	The system took many conditions into consideration, but the same result was obtained.	This condition is not abnormal.
It is impossible to set the waypoints.	The number of waypoints exceeds 5.	It is impossible to set more than 5 waypoints. Please decrease the number of the waypoints.
Some items in the menu cannot be selected.	The vehicle is moving.	Park the vehicle in a safe place and select the desired items to the suggested route.

TROUBLESHOOTING GUIDE

VOICE GUIDANCE

Symptom	Possible cause	Remedy
The voice guidance is not available.	Voice guidance is only available at certain intersections marked with  . In some cases, the guidance is not available even when the vehicle should make a turn.	This condition is not abnormal.
	The vehicle is off the suggested route.	Go back to the suggested route or request route calculation again.
	Voice guidance is set OFF.	Turn the voice guidance ON.
	Route guidance is set OFF.	Turn the route guidance ON.
The guidance content does not correspond to the actual condition.	The content of the voice guidance may vary, depending on the types of junctions to make turns on.	Follow the actual rules and regulations you are driving on.

TROUBLESHOOTING GUIDE

ROUTE CALCULATION

Symptom	Possible cause	Remedy
Although the system is set with the moving direction as the preference, it does not find the route by matching the preference.	There is no route found in that direction.	This condition is not abnormal.
Route is not indicated.	There is no road that can be found by this system close to the destination.	Reset the destination closer to the road displayed in orange. Especially with roads which have separate lanes for opposite directions, be careful in setting the destination or waypoints on it, because results may differ depending on the lane you choose.
	The starting point to the destination is too close.	Set more distant destinations.
	The present location is about 1,100 miles (1,770 km) away from the destination.	Set the destination to within 1,100 miles (1,770 km).
The route is not displayed continuously at waypoints, for example, that are not calculated route from the vehicle's current position.	Suggested routes may be displayed discontinuously near waypoints as route calculation is done at each waypoint.	This condition is not abnormal.
The suggested route the vehicle has traveled is erased.	Suggested routes are stored in memory by the blocks; if the vehicle travels past waypoint block 1, the previous data will be erased.	This condition is not abnormal.

TROUBLESHOOTING GUIDE

ROUTE CALCULATION

Symptom	Possible cause	Remedy
A route with many detours is suggested.	If there are restrictions (such as one-way traffic) on roads close to the starting point or destination, the system may suggest a detoured route.	Try slightly moving the starting point or destination.
The landmark description does not correspond to the actual one.	This may be caused by insufficient or incorrect data on the DVD-ROM.	Exchange the Map DVD-ROM. The new DVD-ROM will be updated.
The suggested route does not exactly connect to the starting point, waypoints, or destination.	There is no data for route calculation closer to these points.	Set these points on the main road displayed in thick orange. Please note that in some cases even main roads lack the data for route calculation.

15 INDEX

A

Address book (Editing)	7-6
Address book (Setting)	7-2
Address/Street	5-6
Automatic re-routing	9-2
Avoid areas (Editing)	8-5
Avoid areas (Setting)	8-2

B

Birdview™ display	11-2
-------------------------	------

C

Clear memory	4-19
Clock	11-21
Complete route	11-9

D

Destination (Adjusting)	5-32
Destination (Deleting)	5-32

Destination (Setting)	5-2
Detour	9-3
Display (Direction)	11-7
Display (Error)	4-23
Display (Maintenance)	11-23
Display (Setting)	11-17

E

Enlarged intersection display	5-31
-------------------------------------	------

G

GPS (Global Positioning System)	2-2
GPS information	11-13

H

Heading	11-7
---------------	------

I

Icon (Changing)	7-7
-----------------------	-----

Icon (Legend)	7-10, 13-4, 13-5
Information on screen (Planview/Birdview™)	11-2
Intersection	5-12

J

Joystick	4-6
----------------	-----

L

Liquid crystal display (LCD)	11-23
------------------------------------	-------

M

Map DVD-ROM	13-2, 14-6
Map coverage areas	2-4

N

Nearby display icons	6-13
----------------------------	------

P

Point of Interest (POI)	6-2
-------------------------------	-----

INDEX

Preferences for route calculation..... 5-29
Previous Dest. 5-5

Q

Quick stop..... 5-36
Quick stop customer settings..... 5-37

R

Reference symbols..... 1-2
Route calculation and guidance 5-31
Route guidance 4-21

S

Safe operation 1-2
Safety note 1-2
Scrolling the map 11-8
Setup start-up screen 4-16
Simulation drive..... 11-11
Storing current vehicle position 7-3

T

Tracking 11-12
Troubleshooting..... 14-1
Turn list 11-10

U

Updating the current vehicle location and the
direction 11-14

V

Voice guidance 10-2
Voice guidance (Notes) 10-4

W

Waypoint (Adjusting) 5-32
Waypoint (Deleting) 5-32
Waypoint (Setting) 5-28
Where am I? 5-39

Z

Zoom in (IN)..... 11-6
Zoom out (OUT) 11-6

KEY

Address Book	key	5-3	Clock	key	11-21	Intersection	key	5-12
Address/Street	key	5-6	Complete route	key	11-9	Landmark Icon	key	7-8
Adjust Current Location	key	11-14	Country	key	5-25	Language/Unit	key	4-9
All Clear	key	5-35	Destination	key	5-27	Louder	key	10-2
Area	key	8-4, 8-8	Display	key	11-17	Map	key	5-24
Auto Re-route On/Off	key	9-2	Display Off	key	11-20	Minimize FWY	key	5-30
Avoid Area Settings	key	8-2	◀ Destination	key	5-28	Minimize Toll Road	key	5-30
Avoid the Current Street	key	9-3	Detour	key	9-3	Navigation	key	4-9
Avoid Freeway	key	8-4, 8-8	Edit Address Book	key	7-2	Nearby	key	6-11
Brightness/Contrast/Map Background	key	11-17	Edit Route	key	9-3	Nearby Display Icons	key	6-13
Button Tone/Beep Response		11-16	GPS information	key	11-13	North Up	key	11-7
Category	key	6-4	Guidance Volume	key	10-2	Pause	key	11-12
Cancel Simulation	key	11-12	Heading	key	11-7	Phone Number	key	5-22
City	key (DEST. SETTINGS)	5-18	Heading Up	key	11-7	Point of Interest (POI)	key	6-2
Clear Memory	key	4-19	Home	key	5-26	Previous Dest.	key	5-5
			I AGREE	key	4-16	Priorities	key	5-29

Quick Stop key.....	5-36	Tracking On/Off key.....	11-12	PREVIOUS	4-6
Quick Stop Customer Settings key.....	5-37	Turn List key.....	11-10	ROUTE	4-13
Rename key.....	7-7, 8-6	Use Ferry Route key	5-30	SETTING	4-8
Return All Settings to Default key.....	4-21	Use Time Restricted Roads key.....	5-30	VOICE	10-4
Route Calc. key.....	5-31	View key.....	11-3	ZOOM IN	11-6
Route Info key.....	4-13	Waypoint key.....	5-29	ZOOM OUT	11-6
Route Simulation key.....	11-11	◀Waypoint key.....	5-28	▲	4-15
Save Current Location key.....	7-3	Where am I? key.....	5-39		
Set Average Speed for Estimated Journey Time key.....	4-20	↻ / ↺ key	11-15		
Setting Display Duration key	11-21	BUTTON			
Short Menu key.....	3-4	CANCEL	4-6		
Shortest Distance key	5-30	DEST	4-11		
Shortest Time key.....	5-30	D/N	11-19		
Softer key	10-2	INFO	12-2		
Store Place key.....	7-3	Joystick and PUSH ENTER.....	4-6		
		MAP	5-32		