




# Choose the CostGuard plan that's right for you.




## 1. Powertrain Coverage:


 **Gasoline/Diesel Engine:** Cylinder block, heads, all internal lubricated parts including: pistons, piston rings and pins, crankshaft and main bearings, connecting rods and rod bearings, camshaft and bearings, pushrods, rocker arms, timing chain/belt and gears, tensioner assembly, valves, valve springs, seats and guides, valve push rods and lifters, followers, oil pump. Primary fuel pump, fuel injection lines/rails, nozzles, injection pump, manifold absolute pressure and mass airflow sensors. Manifolds, flywheel, ring gear, flex plate, core plugs, harmonic balancer. Valve covers, timing cover, oil pan, vacuum pump, engine mounts, water pump, seals and gaskets for covered components. Rotary Engine: All parts listed above for Gasoline Engine, plus rotor seals, rotor chamber, eccentric shaft and bearings, and all other internal parts of a rotary engine.


 **Transmission:** Transmission case, all internal lubricated parts including: bands, clutch pack, gears, pumps, shafts, shift forks, shift rails, synchronizers, solenoids, torque converter, bell housing, vacuum modulator, seals, gaskets, transmission mounts and transmission pan. Includes transfer case, all internal lubricated parts, seals and gaskets for covered components.


 **Front/Rear Wheel Drive:** Axle/final drive housing, all internal lubricated parts, axle shafts, differential cover, universal joints and yokes, constant velocity and double offset joints, wheel bearings, drive shaft center bearings, propeller shafts, locking hub mechanisms, seals and gaskets for covered components.


**2. Basic Coverage:** All components listed above in addition to the following components:

 **Steering:** All internal lubricated parts in the steering box and rack and pinion component, power steering pump and power cylinder, seals and gaskets for covered components. The steering box is covered only when damaged by an internal lubricated part covered under the contract.


 **Air Conditioner:** Evaporator, condenser, compressor, compressor clutch, seals and gaskets for covered components only.


 **Front Suspension:** Upper and lower control arms, control arm shafts and bushings, king pins and king pin bushings, ball joints, front spindles, front wheel bearings, seals and gaskets for covered components.


 **Brakes:** Master cylinder, calipers, power booster, wheel cylinders, hydraulic lines (metal only) and fittings, seals and gaskets for covered components only.


 **Electrical:** Alternator, voltage regulator, windshield wiper motor, manual switches, starter motor, and starter solenoid and ignition module.


**3. Plus Coverage:** All components listed in sections 1 and 2 above in addition to the following components:


 **Steering:** Control valve and cylinder, cooler, metal lines only, main and intermediate steering shafts and couplings.

 **Air Conditioning and Heating:** Receiver/drier, idler pulley, tensioner assembly, field coil, accumulator, temperature control programmer, power module and seals. A/C high/low pressure compressor cutoff switches, pressure cycling switch, heater core and heater A/C blower motor.

 **Front/Rear Suspension/Struts:** Steering knuckles, spindle supports, stabilizer shaft, bushings, rear wheel bearings, and struts (excluding cartridge).

 **Brakes:** Proportioning valve, ABS sensors, modules/computers, and wiring.

 **Electrical:** Distributor, main engine wiring harnesses, windshield washer pump, electronic level control compressor (including sensor and limiter valve), power window motors and gears, power door locks, convertible top power motor, fuel management controls (including modules and sensors), ignition management controls (including modules and sensors), electronic and standard instrument clusters, compass, thermometer, automatic temperature control, keyless entry system, power antenna, power seat motors and adjusting mechanisms, electronic driver information display and module and speed control.


 **Cooling and Fuel:** Radiator, radiator fan, fan clutch and motor, fuel tanks and fuel lines (metal only), and fuel sending unit.


**COVERAGE**  
CONTINUED ON BACK


**Check first with your dealership to ensure they offer CostGuard.  
A similar or like vehicle protection plan may be available.**


## 4. CostGuard Complete Coverage:


CostGuard Complete covers all vehicle components listed in the CostGuard Plus plan in addition to the sample of vehicle components noted in RED.


 **Gasoline/Diesel Engine:** Cylinder block, heads, all internal lubricated parts including: pistons, piston rings and pins, crankshaft and main bearings, connecting rods and rod bearings, camshaft and bearings, pushrods, rocker arms, timing chain/belt and gears, tensioner assembly, valves, valve springs, seats and guides, valve push rods and lifters, followers, oil pump. Primary fuel pump, fuel injection lines/rails, nozzles, injection pump, manifold absolute pressure and mass airflow sensors. Manifolds, flywheel, ring gear, flex plate, core plugs, harmonic balancer. Valve covers, timing cover, oil pan, vacuum pump, engine mounts, water pump, seals and gaskets for covered components. Rotary Engine: All parts listed above for Gasoline Engine, plus rotor seals, rotor chamber, eccentric shaft and bearings, and all other internal parts of a rotary engine. Oil cooler, supercharger air control valve, supercharger waste gate, supercharger intercooler, supercharger air bypass valve, serpentine belt tensioner, and air pump.


 **Transmission:** Transmission case, all internal lubricated parts including: bands, clutch pack, gears, pumps, shafts, shift forks, shift rails, synchronizers, solenoids, torque converter, bell housing, vacuum modulator, seals, gaskets, transmission mounts and transmission pan. Includes transfer case, all internal lubricated parts, seals and gaskets for covered components. Clutch master cylinder, clutch slave cylinder, clutch pedal position switch, shift interlock switch, and transfer case actuator.



 **Front/Rear Wheel Drive:** Axle/final drive housing, all internal lubricated parts, axle shafts, differential cover, universal joints and yokes, constant velocity and double offset joints, wheel bearings, drive shaft center bearings, propeller shafts, locking hub mechanisms, seals and gaskets for covered components.


 **Steering:** All internal lubricated parts in the steering box and rack and pinion component, power steering pump and power cylinder, seals and gaskets for covered components. Control valve and cylinder, cooler, metal lines only, main and intermediate steering shafts and couplings. The steering box is covered only when damaged by an internal lubricated part covered under the contract. Steering column (internal parts), and steering damper.

 **Air Conditioning and Heating:** Evaporator, condenser, compressor, compressor clutch, seals and gaskets for covered components only. Receiver/drier, idler pulley, tensioner assembly, field coil, accumulator, temperature control programmer, power module and seals. A/C high/low pressure compressor cutoff switches, pressure cycling switch, heater core and heater A/C blower motor. Air door actuator motor, blower motor resistor, ambient temperature sensor/switch, pressure sensor/switch, refrigerant temperature sensor, and compressor clutch relay.

 **Front/Rear Suspension/Struts:** Upper and lower control arms, control arm shafts and bushings, king pins and king pin bushings, ball joints, front spindles, front wheel bearings, seals and gaskets for covered components. Steering knuckles, spindle supports, stabilizer shaft, bushings, rear wheel bearings, and struts (excluding cartridge). Coil springs, strut bar & bushings, torsion bar, and leaf springs & shackle.

 **Brakes:** Master cylinder, calipers, power booster, wheel cylinders, hydraulic lines (metal only) and fittings, seals and gaskets for covered components only, proportioning valve, ABS sensors, modules/computers, and wiring. ABS main relay, brake fluid level sensor/switch, brake fluid pressure sensor/switch, parking brake warning switch, vacuum booster check valve, parking brake release motor, and adjustable brake pedal motor.

  **Cooling and Fuel:** Radiator, radiator fan, fan clutch and motor, fuel tanks and fuel lines (metal only), and fuel sending unit. Fuel gauge, fuel door release actuator, fuel pump relay, fuel tank vent valve, inertia fuel shutoff switch, Engine coolant temperature switch, cooling fan motor relay/module, and temperature sensor.

 **Electrical:** Alternator, voltage regulator, windshield wiper motor, manual switches, starter motor, and starter solenoid and ignition module. Distributor, main engine wiring harnesses, windshield washer pump, electronic level control compressor (including sensor and limiter valve), power window motors and gears, power door locks, convertible top power motor, fuel management controls (including modules and sensors), ignition management controls (including modules and sensors), electronic and standard instrument clusters, compass, thermometer, automatic temperature control, keyless entry system, power antenna, power seat motors and adjusting mechanisms, electronic driver information display and module and speed control. Heated glass element switch & relay, wiring harnesses, oil pressure sender, coolant temperature sensor (gauge), brake light switch, parking brake switch, turn signal & hazard flasher, hazard switch, horn relay, door switch, neutral safety switch, transmission position switch/sensor, transmission speed sensor, transmission temperature sensor/switch, crank & camshaft position sensor, throttle position sensor, vehicle speed sensor, power steering pressure switch, fuel pump relay, knock sensor, cruise control clutch switch, wiper relay, mass air flow sensor, traction control switch, daytime running lamp control unit & relay, fog/driving lamp relay, power mirror motors, seat heater switch, trunk/lift gate switch, seat heaters, hood & trunk lift struts, power seat actuator, keyless entry module, memory position module, power door lock control module, power seat control module, seat heater control module, sunroof/moon roof module, sunroof relay, radio/stereo, and alarm system.

 **Additional covered components:** Convertible top hydraulic cylinder, canister purge solenoid, egr valve & control solenoid, and pressure feed back exhaust sensor.

Protection is subject to terms, conditions and exclusions. The CostGuard Complete level of coverage is an exclusionary program. For a detailed list, of what is not covered, please see your coverage booklet.



**Protective** 

2345 Waukegan Road, Suite 210  
Bannockburn, IL 60015  
Ph: 800.323.5771

The CostGuard vehicle service contract program is administered by a Protective company and backed by Lyndon Property Insurance Company, also a Protective company, in all states except New York. In New York this product is backed by Old Republic Insurance Company. In Florida the CostGuard program is administered by The Advantage Warranty Corporation, contact information above. Florida License #60071.