



# Mazda cx-3

2016 MAZDA SCHEDULED MAINTENANCE MENU

### **EVERY 8,000 KM OR 4 MONTHS**

- · Replace engine oil; Replace oil filter
- Inspect brake and clutch fluid, power steering fluid, washer fluid and coolant level
- Inspect air filter
- Inspect function of all lights
- Rotate tires (priced separately)
- Inspect all tires inflation and wear
- · Lubricate all locks and hinges

### **EVERY 24,000 KM OR 12 MONTHS**

Includes 8,000 km service, plus:

• Inspect and clean brake discs and pads, front and rear

### **EVERY 40,000 KM OR 24 MONTHS**

Includes 8,000 km service, plus:

• Replace cabin air filter

### **EVERY 48,000 KM OR 24 MONTHS**

Includes 24,000 km service, plus:

- Inspect fuel lines and hoses
- Inspect brake lines, hoses and connections
- Inspect steering operation and linkage
- Inspect front and rear suspension components, ball joints and wheel bearing axial play
- Inspect driveshaft dust boots
- Tighten bolts and nuts on chassis and body

#### **EVERY 56,000 KM**

Includes 8,000 km service, plus:

• Inspect drive belts & tensioner

#### **EVERY 72,000 KM OR 60 MONTHS**

Includes 24,000 km service, plus:

• Inspect exhaust system and heat shields

### **EVERY 96,000 KM OR 48 MONTHS**

Includes 48,000 km service, plus:

• Inspect emission hoses and tubes

### **EVERY 120,000 KM**

Includes 24,000 km service, plus:

• Replace spark plugs\*

### **EVERY 192,000 KM OR 120 MONTHS**

• Replace coolant\*\*, after that every 96,000 km or 60 months

### **ADDITIONAL OPERATIONS**

- Replace rear differential oil (AWD) at every 48,000 km if operated under certain conditions (see owner's manual) or if submerged in water
- Replace transfer oil (AWD), if submerged in water

At each visit, we'll provide you with an exclusive Vehicle Inspection Report,

which shows you the overall condition of your Mazda.

CLICK HERE FOR AN ENLARGED VERSION

COSTONES MARC:

NO. E. SERVICE APPOSITE

WE LEST IS DIGITY:

CONTINUED A SERVICE APPOSITE

WE LEST IS DIGITY:

CONTINUED A SERVICE APPOSITE

CONTINUED A SERVICE APPOSITE ASSOCIATION OF THE ASSOCIATION OF

### TO LEARN MORE, CLICK ON LOGO



48,000 km intervals.



Scheduled services may vary by year of vehicle. Please consult your Service Advisor for the specific maintenance intervals pertaining to your vehicle. 24,000 km service includes service performed at 8,000 km interval. 48,000 km service includes service performed at 8,000 and 24,000 km intervals. 96,000 km service includes service performed at 8,000, 24,000 and



Your Mazda Dealer will provide you with a completed service checklist on every maintenance visit. In addition, your Mazda will be road tested after any servicing relating to brakes, steering or driving performance, to help verify safe functioning. Information listed in this document is accurate at time of publication and is subject to change without notice. Ask your Mazda Dealer for more detailed information. This inspection list/schedule is intended as a guide only and should not be relied upon to ensure vehicle safety. See your Mazda dealer for full details, maintenance and inspection.

- \* Maintenance intervals may vary based on driving conditions. Please refer to owners manual.
- \*\* If vehicle equipped with FL22 coolant replace at 192,000 km or 10 years, after that every 96,000 km or 5 years. Use FL22 type coolant in vehicles with the inscription "FL22" on the radiator cap itself or the surrounding area. Use FL22 when replacing the coolant.



## VEHICLE HEALTH < CHECK



CUSTOMER NAME:		R.O. #:	SERVICE ADVISOR:	
VIN (LAST 6 DIGITS): LICENCE PLATE #: _		ODO	METER:	DATE:
<b>⋘ GOOD</b> - CHECKED OK	FAIR - REQUIRES FUTURE ATTENTION	<b> ▼ REPLACE</b> - REQUIRES	MMEDIATE ATTENTION CHECK	KED FOR OUTSTANDING RECALLS
PERIMETER INSPECTION  FRONT Lights/lamps Windshield Washer system Wipers/arms Body damage Horn operation		REAR Lights/lamps Washer system Wipers/arms Body damage	NEXT MAINTENAN  NEXT MAINTENANCE SERVICE  NEXT APPOINTMENT	DEALER CODE  OATE (MM/DD/YY)  TIME
VISUAL INSPECTION  UNDER HOOD  Fluid levels (brakes, stee clutch, window washer, coc manual/automatic transmi  Drive belt(s)  Air filter  Radiator, hoses/clamp and coolant condition  —————— °C  Heater hoses/clamps  Air conditioning hoses  Battery/cables/clamp	s to:	Suspension components Shocks & Struts Exhaust system CV drive axle boots (if equipped) CHECK FOR LEAKS Engine oil Transmission	COMMENTS & RECOMME	NDATIONS:
BRAKE INSPECTION  Lining/pad Rotor Caliper Lines/hose  Lining/pad Rotor Caliper Lines/hose Lining/pad Lining/p	LF RF	Lining/pad Rotor Caliper Lines/hose Lining/pad Rotor Caliper Lines/hose Lining/pad Rotor Caliper Lines/hose	MEASURE FRONT / REAR BR  LF  50%+ 20%-50% 0%-20%  LR  50%+ 20%-50% 0%-20%  Measurements Not Taken	RF 50%+ 20%-50% 0%-20% RR 50%+ 20%-50% 0%-20% Obeclined Brake Inspection
TIRE INSPECTION  WINTER TIRES  Tread Wear 32 <sup>nds</sup> Tread Wear 32 <sup>nds</sup> LF	RR LR RECOMMENDED: OF	PSI SPARE PSI  LL SEASON TIRES  Tread Wear 32nds  Tread Wear 32nds  Tread Wear 32nds  ALIGNMENT  REPLACEMENT BALANCE	20% - 50%	