
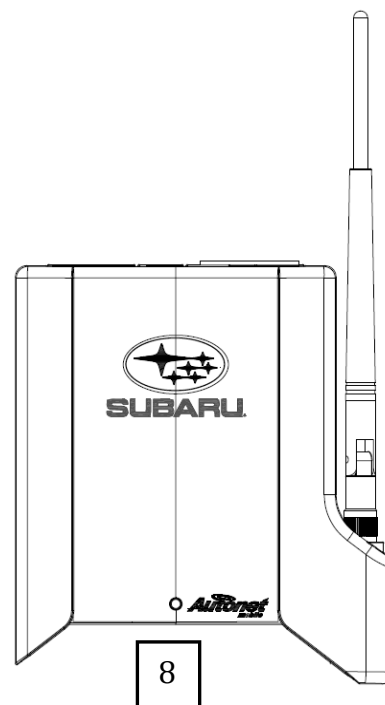
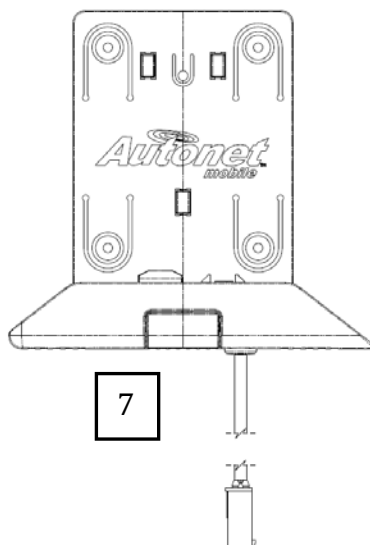



Note: This product is not compatible with Remote Engine Starter Accessory.

1. Kit Contents

Item	Description	Qty.
1	12V adapter plug, RA, 13" L	1
2	Well Nut, Rubber, M5	4
3	Harness hold-down clip	1
4	Screw, SS, Phillips, M5, 20mm L	4
5	Foam tape, 1" x 2" x 1/16", Black	1
6	Alcohol wipe	1
7	Mobile Internet Mounting Dock	1
8	Mobile Internet Main Housing	1

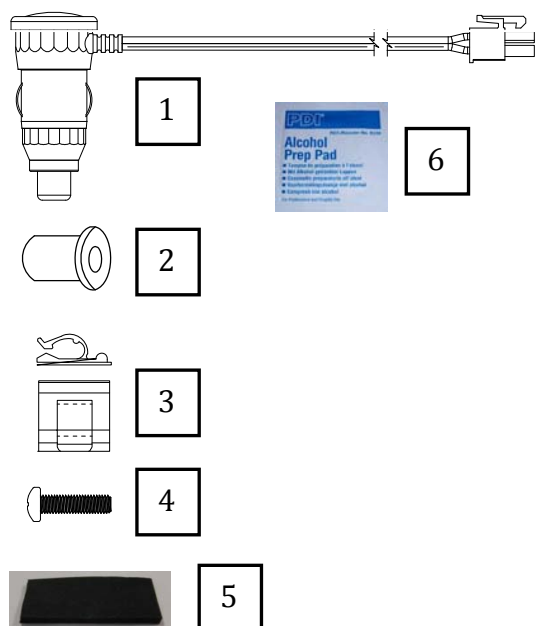

2. Tools Required

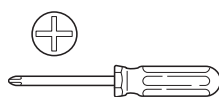

#2 Drive



Right angle drill with
3/8" drill bit



Masking
Tape



Deburring
tool

3. Instructions: Outback

1. Turn car ignition to the off position until requested to turn on in step 10.



2. On the driver's side rear quarter-panel interior trim, place and tape the provided template as shown (Cut out template on page 10), aligning the template into the 3 corners. Once aligned, mark hole centers and remove template prior to drilling. Using a right angle drill, drill 4 holes with a 3/8" drill with a 1/8" drill stop. Remove burrs from holes if necessary. (Please note bottom dock must clear the rear cargo tray.)



3. Using the provided four rubber well nuts, push nuts into all four holes until seated against the quarter panel interior trim.



4. Align docking station over all four well nuts, then hand-tighten all four M5 screws with Phillips screwdriver, # 2. (Please note the dock bottom must clear the plastic rear cargo tray.)



5. Remove 12V DC adapter from package and insert into back quarter-panel outlet as shown. Make sure adapter is completely seated into the socket.



6. Insert and attach the inline connector. Wrap the urethane tape around the dock connector as shown, allowing for removal of the mating connector, if necessary.



7. With the antenna swivel point facing towards you, move the antenna slightly at an angle as shown. Align router over docking station and seat into dock (unit should snap in smoothly). Route and tuck harness cable behind router and antenna. Swivel the antenna back to its upright position. Note: once the antenna is in the upright position it will be slightly bent at the top as in step 9 picture below, this is normal and will not affect the antenna performance.



Antenna
swivel point.

8. Wipe down area with alcohol wipe and place harness cable clip in area as shown. Then insert cable into clip to hold against inner wall.



9. When installation is complete, unit assembly should look as shown.



10. Turn key to the ON position and observe blue led status.


Status LED (Blue)	Indicates
Start-up	Blue LED is off for approximately 15-20 seconds
Initialization	Blue LED is in slow mode for approximately 20-30 seconds
LED fast blink	Device is initializing
LED solid	Device is connected

Once blue light has turned solid, Mobile Internet Device is ready to be used.



11. After launching an internet browser (Explorer, Firefox, etc.) with a laptop, PC or other WiFi enabled device, you should be able to view the Subaru login screen. Click on the login screen and it will redirect you to your default browser page.

(Please see User's guide for further information on activation, customization and usage of the router).

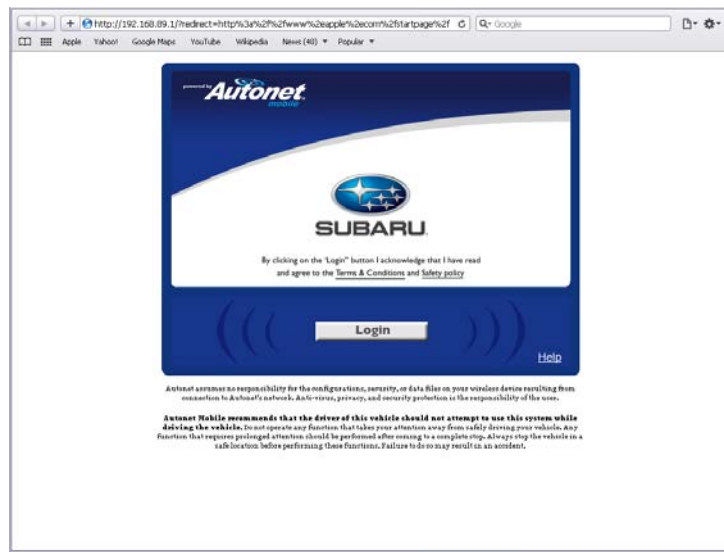

(Router must be activated prior to internet use.
One year activation required)

Happy Surfing!

