

VAN UPFIT PREP

Simplifying your upfit installation process






PROTECTION

Easy install that prevents damage to the factory floor.



SAFETY

Improved slip resistance over bare OEM floor.

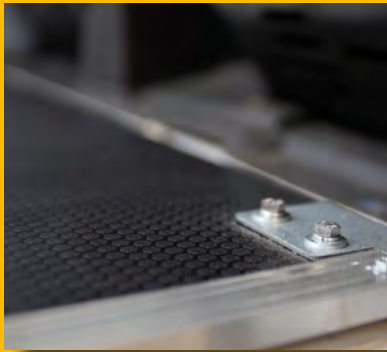

EASY INSTALL

Our kits are designed for a straightforward setup.

VAN UPFIT PREP

VAN FLOORS

CHEVROLET BRIGHTDROP	P. 24
CHEVROLET EXPRESS	P. 24
CHRYSLER PACIFICA, VOYAGER	P. 24
FORD TRANSIT	P. 25
GMC SAVANA	P. 24
MERCEDES-BENZ SPRINTER	P. 24
RAM PROMASTER	P. 25


INSTALL KITS

DRIVER	P. 27
PASSENGER	P. 27

Ranger Design Van Floors are custom-fit for almost all vans on the market and are fully compatible with our shelving systems. Each floor includes durable aluminum sills at the side and rear doors, ensuring long-lasting performance without thermal expansion.

Designed for safety and comfort, these floors distribute loads evenly and come with a 3-year warranty for peace of mind.

VAN UPFIT PREP – FLOORS

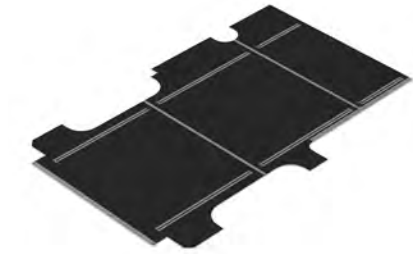

6540-GSR

Chevrolet Express, GMC Savana

Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	135"
WEIGHT	74 lbs
INSTALL TIME	1 hr
QUICKSHIP	Yes



6540-GSX

Chevrolet Express, GMC Savana

Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	155"
WEIGHT	89 lbs
INSTALL TIME	1 hr
QUICKSHIP	Yes



6541-BZL

Chevrolet BrightDrop 600

Drill-free E-Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	183.5"
WEIGHT	119 lbs
INSTALL TIME	0.5 hr
QUICKSHIP	Yes



6541-BZS

Chevrolet BrightDrop 400

Drill-free E-Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	153"
WEIGHT	77 lbs
INSTALL TIME	0.5 hr
QUICKSHIP	Yes

Installation of this floor requires Safety Partition 3020-CP (See p. 35)



6541-CP

Chrysler Pacifica, Voyager

Drill-free E-Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	121.6"
WEIGHT	64 lbs
INSTALL TIME	1.5 hr
QUICKSHIP	No



6541-DL

Mercedes-Benz Sprinter

Drill-free E-Floor for the Sprinter MY 2019+

MARINE-GRADE PLYWOOD	
WHEELBASE	170"
WEIGHT	112 lbs
INSTALL TIME	0.5 hr
QUICKSHIP	Yes

VAN UPFIT PREP – FLOORS



6541-DR

Mercedes-Benz Sprinter

Drill-free E-Floor for the Sprinter MY 2019+

MARINE-GRADE PLYWOOD	
WHEELBASE	144"
WEIGHT	82 lbs
INSTALL TIME	0.5 hr
QUICKSHIP	Yes



6541-DX

Mercedes-Benz Sprinter

Drill-free E-Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	170" Ext.
WEIGHT	122 lbs
INSTALL TIME	0.5 hr
QUICKSHIP	Yes



6541-FTL

Ford Transit

Drill-free E-Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	148"
WEIGHT	90 lbs
INSTALL TIME	1 hr
QUICKSHIP	Yes



6541-FTS

Ford Transit

Drill-free E-Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	130"
WEIGHT	77 lbs
INSTALL TIME	1 hr
QUICKSHIP	Yes



6541-FTX

Ford Transit

Drill-free E-Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	148" Ext.
WEIGHT	111 lbs
INSTALL TIME	1.3 hr
QUICKSHIP	Yes



6541-PL

RAM ProMaster

Drill-free E-Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	159"
WEIGHT	99 lbs
INSTALL TIME	0.7 hr
QUICKSHIP	Yes

VAN UPFIT PREP – FLOORS

VAN UPFIT PREP



6541-PM

RAM ProMaster
Drill-free E-Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	136"
WEIGHT	82 lbs
INSTALL TIME	0.5 hr
QUICKSHIP	Yes



6541-PS

RAM ProMaster
Drill-free E-Floor


MARINE-GRADE PLYWOOD	
WHEELBASE	118"
WEIGHT	70 lbs
INSTALL TIME	0.5 hr
QUICKSHIP	Yes



6541-PX

RAM ProMaster
Drill-free E-Floor

MARINE-GRADE PLYWOOD	
WHEELBASE	159" Ext.
WEIGHT	111 lbs
INSTALL TIME	0.7 hr
QUICKSHIP	Yes

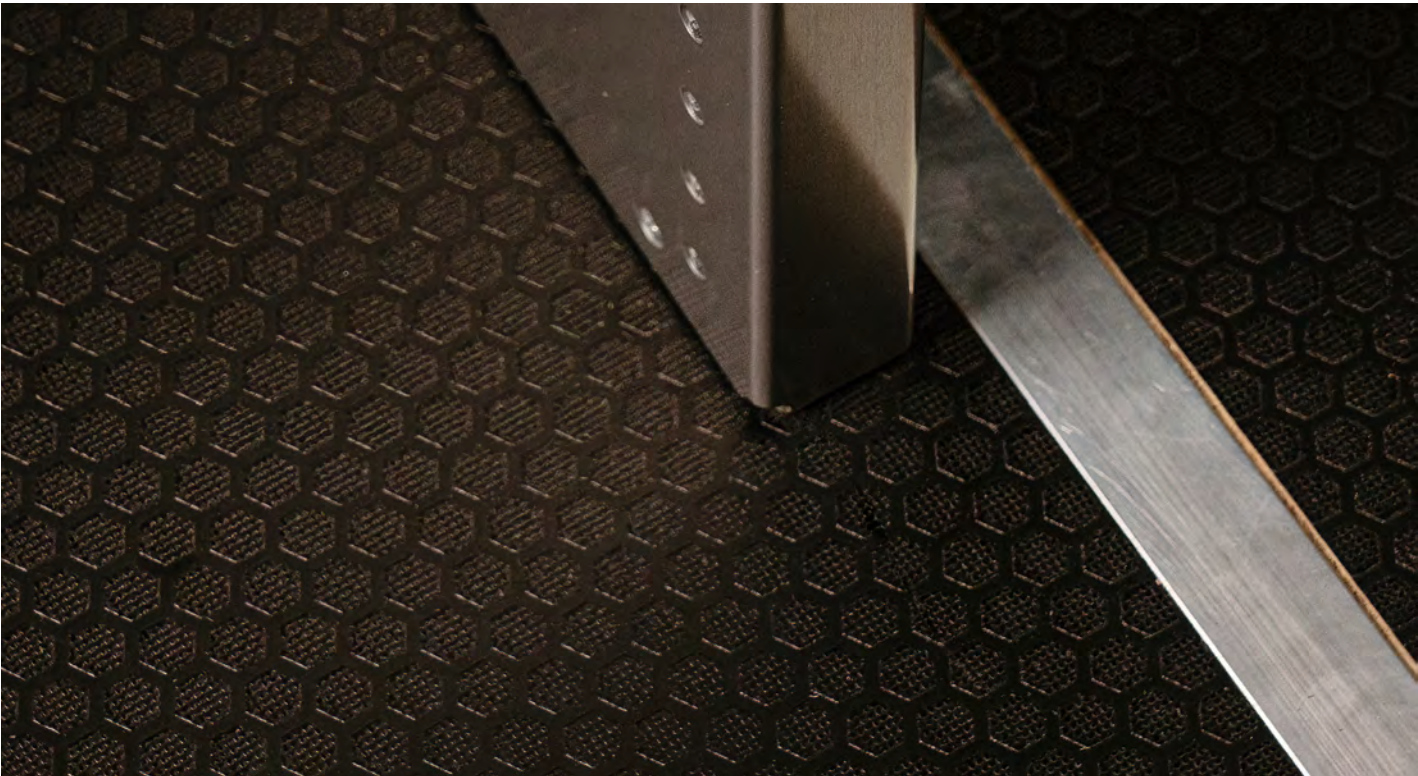

E-FLOOR (6541-PM)

VAN UPFIT PREP – INSTALL KITS



6550-FTL SHOWN HERE

DRIVER SIDE INSTALL KITS

ALUMINUM						
PART	VEHICLE	WHEELBASE	DESCRIPTION	WEIGHT	INSTALL TIME	QUICKSHIP
6550-BZL	CHEVROLET BRIGHTDROP 600	183"	Shelving install kit	26 lbs	0.5 hr	Yes
6550-BZS	CHEVROLET BRIGHTDROP 400	153"	Shelving install kit	19 lbs	0.5 hr	Yes
6550-FTL	FORD TRANSIT	148"	Shelving install kit, driver side	13 lbs	0.3 hr	Yes
6550-FTS	FORD TRANSIT	130"	Shelving install kit, driver side	12 lbs	0.3 hr	Yes
6550-FTX	FORD TRANSIT	148" Ext	Shelving install kit, driver side	16 lbs	0.3 hr	Yes
6550-PL	RAM PROMASTER	159"	Install track kit, driver side	13 lbs	0.5 hr	Yes
6550-PM	RAM PROMASTER	136"	Install track kit, driver side	11 lbs	0.5 hr	Yes
6550-PS	RAM PROMASTER	118"	Install track kit, driver side	9 lbs	0.5 hr	Yes
6550-PX	RAM PROMASTER	159" Ext	Install track kit, driver side	14 lbs	0.5 hr	Yes

Install kits are sold separately from the shelving.

PASSENGER SIDE INSTALL KITS

ALUMINUM						
PART	VEHICLE	WHEELBASE	DESCRIPTION	WEIGHT	INSTALL TIME	QUICKSHIP
6550-BZL	CHEVROLET BRIGHTDROP 600	183"	Shelving install kit	26 lbs	0.5 hr	Yes
6550-BZS	CHEVROLET BRIGHTDROP 400	153"	Shelving install kit	19 lbs	0.5 hr	Yes
6555-FTL	FORD TRANSIT	148"	Shelving install kit, passenger side	8 lbs	0.4 hr	Yes
6555-FTS	FORD TRANSIT	130"	Shelving install kit, passenger side	6 lbs	0.4 hr	Yes
6555-FTX	FORD TRANSIT	148" Ext	Shelving install kit, passenger side	11 lbs	0.4 hr	Yes
6555-PL	RAM PROMASTER	159"	Shelving install kit, passenger side	8 lbs	0.3 hr	Yes
6555-PM	RAM PROMASTER	136"	Shelving install kit, passenger side	6 lbs	0.3 hr	Yes
6555-PS	RAM PROMASTER	118"	Shelving install kit, passenger side	5 lbs	0.3 hr	Yes
6555-PX	RAM PROMASTER	159" Ext	Shelving install kit, passenger side	9 lbs	0.3 hr	Yes

Install kits are sold separately from the shelving.