




Direct-to-Frame Camper Tiedown Systems



By  **HAPPIJAC**
A Division of Lippert Components Inc.

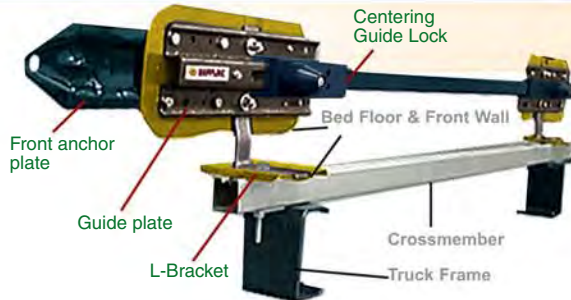

After extensive research Happijac Company has perfected an innovative Frame Mount Tiedown System that is three times stronger than other tiedowns and controls all aspects of securing a camper to a truck. While other tiedowns may "hold your camper down" only Happijac tiedowns prevent camper movement in all directions (forward-backward, up-down, left-right, yaw, pitch and roll). The Happijac Frame Mount System combines the proven design of Happijac Camper Anchor tiedowns with Happijac's patented Direct-to-Frame mount, providing the customer with unsurpassed strength, handling, and ease of use while also featuring quick and simple installation.

The complete Happijac Frame Mount Tiedown System consists of three components:

- (A) FT tiedown kit with centering guide locks (FT-UT9, FT-CG9, FT-CG07, FT-CG07S, FT-DR10, FT-DR8 or FT-DR2).
- (B) Turnbuckles (FM-QLTB or FM-TB)
- (C) Stabilizing Bar (USB-010, SB-080 or SB-020)

DIRECT-TO-FRAME TIEDOWN COMPONENT - (A)

By  **HAPPIJAC**

FT Kit

(now includes centering guides)



CHEVY/GMC - Frame Mount System	Note	Order #	Mfr. #
2007- 2013 Chev/GMC (new body style)(except extended cab), FT-CG07S	1,3	87095	#182905
2007- 2013 Chev/GMC (new body style)(extended cab ONLY), FT-CG07	1,3	86835	#182904
1999- 2007 Chev/GMC Silverado/Sierra Classic, FT-CG9	1	73623	#182906
1988- 2000 C/K Series (old body style), FT-UT9	1	73591	#182910
DODGE - Frame Mount System	Note	Order #	Mfr. #
2010- 2013 Ram 2500, 3500 (except "ram box" or short-bed dually)	5	87573	#236326
2009- 2013 Ram 1500 (except "ram box" or short-bed dually)	5	87573	#236326
2008- 2009 Ram (w/bed fr panel waffle-like pattern)(except 1500), FT-DR8	5	87241	#205220
2003- 2008 Ram (w/bed front panel vertical ribs only) (Including 2002 Ram 1500), FT-DR2	2	75023	#182908
1994- 2002 Ram (except 2002 Ram 1500), FT-UT9	1	73591	#182910
2002 Dodge Ram 1500, FT-DR2	2	75023	#182908
FORD - Frame Mount System	Note	Order #	Mfr. #
2008- 2013 F450 SuperDuty, FT-UT9	1,6	73591	#182910
1997- 2013 F250 SuperDuty & F350, FT-UT9	1,6	73591	#182910
1980- 1996 F Series (all), FT-UT9	1	73591	#182910
TOYOTA	Note	Order #	Mfr. #
2007- 2013 Tundra (6-1/2" Bed Only), DF-TT07	4	87089	#184089

TURNBUCKLE COMPONENT - (B)

By  **HAPPIJAC**



TURNBUCKLE COMPONENT	Order #	Mfr. #
Qwik-Load stainless steel Turnbuckle Set (2 FM-QLTBS & 2 FM-QLTBR), FM-QLTB	86295	#182895
Stainless steel turnbuckle set (2 FM-TBS & 2 FM-TBR), FM-TB	73636	#182898
Qwik-Load Lever Action Turnbuckle Upgrade, FM-QL	85722	#182894

STABILIZING BARS - (C)

By  **HAPPIJAC**



STABILIZING BARS	Order #	Mfr. #
59.25" Stabilizing Bar (use with FT UT9, CG9, CG07 & CG07S), USB-10	73090	#182971
57.375" Stabilizing Bar (use with FT DR2), SB-020	75038	#182928
56.875" Stabilizing Bar (use with FT-DR8 & FT-DR10), SB-080	87240	#205221
66.75" Stabilizing Bar (use with CA-DRL: 1994-02 Dodge Ram), SB-200 ^{LS}	79688	#182931

- 1- Stabilizing Bar USB-010 Required, sold separately. 2- Stabilizing Bar SB-020 Required, sold separately. 3- Includes FM-CBB07.
4- Does not require Stabilizing Bar. 5- Stabilizing Bar SB-080 Required, sold separately. 6- Bumper Brace Recommended, sold separately.

CAMPER TIE DOWNS

RV ACCESSORIES

M

In Section M: Starter Kits Vehicle Items Window & Door Interior Accessories Mats Steps Camper Tie Downs Wheel Chocks Ladders Carriers Winches Levelers Jacks

CAMPER ANCHOR TIEDOWNS

By  **HAPPIJAC**

Happijac continues to offer their time tested Camper Anchor tiedowns. The scientific design of Happijac Camper Anchor tiedowns gives maximum strength while eliminating leverage and stress forces on the truck. Removable rear tiedown coupler rotates to direction of pull, eliminating undesirable torque. Happijac Camper Anchor tiedowns won't bend, twist or fail.

NOTE: Camper Anchor tiedowns do not mount to the frame as do the Happijac Frame Mount tiedowns. Camper Anchor tiedowns are not for use on full-size extended cab, crew cab, 4x4, diesel trucks or with campers over 2500 lbs. These applications require the Happijac Frame mount tiedowns (FT kit).



CHEVY/GMC - Camper Anchor TieDowns	Note	Order #	Mfr. #
1967-1972 C/K Series, CA-FU		S/O	#182862
1973-2013 S-10, S-15, Canyon & Colorado, CA-UR	7	70486	#182866
DODGE - Camper Anchor TieDowns			
1994-2002 Dodge Ram (except 2002 Ram 1500), CA-DRL	9	S/O	#182858
1991-1993 Dodge Ram, CA-FU	8	S/O	#182862
1972-1990 Dodge Ram, CA-FU		S/O	#182862
1987-1996 Dakota, CA-DRL		S/O	#182858
FORD - Camper Anchor TieDowns			
2004-2013 F150, CA-FD4		S/O	#182860
2004 - F150 Heritage, CA-FD7		S/O	#182861
1997-2003 F150 & F250 under 8500 gvw (except crew cab), CA-FD7		S/O	#182861
2013 and earlier Ranger, CA-UR	7	70486	#182866
TOYOTA - Camper Anchor TieDowns			
1989-2013 Toyota (only with campers under 1500 lbs.) (except Tundra), CA-UR	7	70486	#182866
1988 and earlier Toyota, CA-MT		S/O	#182864
ISUZU - Camper Anchor TieDowns			
1989-2008 Isuzu, CA-UR	7	70486	#182866
1988 and earlier Isuzu, CA-MT		S/O	#182864
MAZDA - Camper Anchor TieDowns			
1994-2008 Mazda, CA-UR	7	70486	#182866
1993 and earlier Mazda, CA-MT		S/O	#182864
NISSAN - Camper Anchor TieDowns			
1998-2013 Nissan, CA-UR	7	70486	#182866
1997 and earlier Nissan, CA-MT		S/O	#182864

7- Requires 4 ea, (sold individually). 8- Requires FK-DAK Fit Kit (sold separately).
9- Stabilizing Bar SB-200 recommended, sold separately.

PARTS, FIT KITS & ACCESSORIES

By  **HAPPIJAC**



- 70486** Universal Rear Anchor, CA-UR #182866 1
- 73682** Chrome Anchor Bolt & Hardware, CA-AB #182852 1
- 70487** Chrome Coupler, CA-TC #182865 1
- 77785** *LS US only* Fr Centering Guide Locks (includes 2 Rollers & 2 Bumpers), FM-FGL9 #182892 1
- S/O Front Anchor Plates (Set of 2), FA-UT9 #182876
- S/O Front Anchor Plates (Set of 2), FA-CG9 #182872
- S/O Front Anchor Plates (Set of 2), FA-CG07 #182870
- S/O Front Anchor Plates (Set of 2), FA-CG07S #182871
- S/O Dodge Adapter Kit, FK-DAK #182880
- S/O Centering Guide Lock Spacer Kit for 99+ Ford with tail light - camper interference, FK-GBS #182883
- S/O Replacement Fit Kit for FT-UT9, FK-UT9 #182884
- S/O Replacement Fit Kit for FT-CG9, FK-CG9 #182878
- S/O Replacement Fit Kit for FT-CG07 & FT-CG07S, FK-CG07 #182877
- S/O Bumper Brace (1999- 2007 Ford F-250 SD + F-350), FM-BB9 #182885
- S/O Bumper Brace (2008- 2013 Ford F-250 SD + F-350), FM-BB08 #253561
- S/O Bumper Brace (2007- 2013 Chev/GMC), FM-CBB07 #182887
- S/O Qwik-Load Front Spring-loaded Turnbuckle w/11" threaded hook (1 ea), FM-QLTBS #182897
- 73660** Front Spring-loaded Turnbuckle w/11" threaded hook (1 ea.), FM-TBS #182901 4
- S/O Qwik-Load Rear Stress-guard Turnbuckle w/24" threaded hook (1 ea), FM-QLTBR #182896
- S/O Rear Stress-guard Turnbuckle w/24" threaded hook (1 ea.), FM-TBR #182900
- 87094** *LS US only* Qwik-Load Long Action Spring Loaded w/40" reach (S/2), FM-QLLA #191380 1
- 87093** Long Action Spring-loaded Turnbuckle w/40" reach (Set of 2), FM-TBLA #191431 1
- S/O 11" Threaded hook (zinc plated - 1 ea.), TBH-11 #149813
- S/O 24" Threaded hook (zinc plated - 1 ea.), TBH-24 #149814





Series 2000 Front Tie Downs

TRUE

Frame Mounted Camper Tie Downs Application Guide

Step 1

CHOOSE YOUR FRONT TIE DOWNS

Does the truck have running boards that extend past the cab and onto the bed?

NO

YES

FRONT OR REAR TIEDOWN KITS INCLUDE:

One drivers and one passengers tiedown

Two Quicklinks

Turnbuckles Sold Separately (see page 482 for accessories)

Get the right numbers right now using the online interactive application guide at:

www.torklift.com

Denotes limited supply!

FRONT TIEDOWNS

CATCH PRODUCT VIDEO torklift.com



For Fast and Friendly Tech Support 1-800-246-8132



OVER 35 YEARS OF INNOVATION. QUALITY. SAFETY.

Year	Make/Model	Bed Length	E-Z INSTALL				Notes	Drill Holes
			Order #	Notes	Drill Holes	Notes		
FORD								
97-03	F150/F250 Lt Duty	8'	s/o F2001	0		s/o F4001	4,5	
97-03	F150/F250 Lt Duty	6.5'	39144	4		s/o F4002	4,5	4
99-04	F250/F350 (All)	8'	30667	0		s/o F4006	4,5	0
99-04	F250/F350 (All)	6.75'	39145	0		s/o F4007	4,5	0
04-05	F150 (All/No Step Sd)	6.5'	39874	0		N/A		
05-07	F250/F350 (All)	8'	39113	0		s/o F4006	4,5	0
05-09	F250/F350 (All)	8'	30667	0		s/o F4006	4,5	0
05-07	F250/F350 (All)	6.75'	39145	0		s/o F4007	4,5	0
05-11	F450/F550 (All)	N/A	s/o F2008	7				
06-07	F150 (Super Crew)	5.5'	s/o F2010	0		N/A		
06-12	F150 (All/No Step Sd)	6.5'	s/o F2014	0		N/A		
08-10	F250/F350/F450 (All)	8'	30667	0		N/A		
08-10	F250/F350 (All)	6.75'	30668	0		N/A		
09-12	F150	8'	s/o F2015	0		N/A		
11-12	F250/F350/F450 (All)	8'	31969	0		N/A		
11-12	F250/F350 (All)	6.75'	30668	0		N/A		
08-12	F150 (Super Crew)	5.5'	s/o F2017	0				
DODGE								
94-01	1500 (All)	8'	39115	3	2	s/o D4100	4,5	0
94-01	1500 (All)	6.5'	s/o D2110	0		s/o D4104	4,5	4
94-02	2500/3500 (All)	8'	39115	3	2	s/o D4100	4,5	0
94-02	2500/3500 (All)	6.5'	s/o D2110	0		s/o D4104	4,5	4
04-08	1500 (All)	8'	s/o D2107	2		N/A		
04-08	1500 (Std, Quad)	6.5', 2WD	s/o D2106	0		N/A		
06-08	1500 Mega	6.5', 2WD	s/o D2111	0		N/A		
04-08	1500 (Std, Quad)	6.5', 4WD	s/o D2105	0		N/A		
06-08	1500 Mega	6.5', 4WD	39580	0		N/A		
09-12	1500 (Quad, No Lar.)	6.5', 4WD	s/o D2113	0		N/A		
03-09	2500/3500 HD (All)	8'	39394	0		39397	4,5	0
03-09	2500/3500 HD (All)	6.5', 4WD	39580	0		s/o D4102	4,5	2
03-09	2500/3500 HD (All)	6.5' 2WD	31724	2	2	N/A		
06-09	2500/3500 Mega	6.5' 2WD	s/o D2111	0		N/A		
97-04	Dakota (All)	6'	s/o D2104	0		N/A		
05-10	Dakota (All)	6'	s/o D2109	0		N/A		
07-11	3500/4500/5500 CAB	N/A	s/o D2112	0		N/A		
10-12	2500/3500 HD (All)	8'	31725	0		39397	4,5	0
10-12	2500/3500 Crew/Meg	6.5', 4WD	31971	0		N/A		
10-11	25/3500 Dually-Mega	6.5'	31967	0		N/A		

FOOTNOTES FOR APPLICATION CHART

- (1) SuperHitch Magnum requires the use of R3504.
- (2) Drilling required into **spring hanger** bracket, not into frame of vehicle.
- (3) Drilling may be required - call 800.246.8132 to verify.
- (4) May require modification of running board bracket.
- (5) Additional labor required for install.
- (7) Will not work with running boards on the cab.
- (8) **Will also work on trucks without receiver hitch.**



CAMPER TIE DOWNS

In Section M: Starter Kits Vehicle Items Window & Door Interior Accessories Mats Steps Camper Tie Downs Wheel Chocks Ladders Carriers Winches Levelers Jacks



TRUE

Frame Mounted Camper Tie Downs Application Guide

Step 2

CHOOSE YOUR REAR TIE DOWNS

Does the vehicle have a rear receiver hitch that is:

Factory

SuperHitch

Aftermarket

Step 3

Year	Make/Model	Bed Length	FACTORY			AFTERMARKET			Drill Holes
			Order #	Notes		Notes	Order #	Notes	
FORD									
97-03	F150/F250 Lt Duty	8'	39146	15				39114	12 8
97-03	F150/F250 Lt Duty	6.5'	39146	15				39114	12 8
98-03	F150 Super Crew	5.5	39146	15				39114	12 8
99-04	F250/F350 (All)	8'	39146	15		30771 1,18		39114	12 8
99-04	F250/F350 (All)	6.75'	39146	15		30771 1,18		39114	12 8
05-09	F250/F350 (All)	8'	39921	15		30771 1,18		39114	12 8
05-07	F250/F350 (All)	6.75'	39921	15		30771 1,18		39114	12 8
06-09	F150 (All)	8'	s/o F3005					s/o F3005	
06-07	F150 Super Crew	5.5'	s/o F3005					s/o F3005	
06-12	F150 (No Bed-s-step)	6.5'	s/o F3005					s/o F3005	
08-10	F250/F350/F450 (All)	8'	39921	15		30771 1,18		39114	12 8
08-10	F250/F350 (All)	6.75'	39921	15		30771 1,18		39114	12 8
00-12	Ranger	6'	39921	15				39114	12 8
09-12	F150	8'	s/o F3005					s/o F3005	
11-12	F250/F350/F450 (All)	8'	31970	15		30771 1,18		39114	12 8
11-12	F250/F350 (All)	6.75'	31970	15		30771 1,18		39114	12 8
08-12	F150 (Super Crew)	5.5'	s/o F3005					s/o F3005	
DODGE									
94-01	1500 (All)	8'	39147	15				39114	12 8
94-01	1500 (All)	6.5'	39147	15				39114	12 8
94-02	2500/3500 (All)	8'	39147	15		30771 1,18		39114	12 8
94-02	2500/3500 (All)	6.5'	39147	15		30771 1,18		39114	12 8
04-08	1500 (All)	8'	31726	8,11				39114	12 8
04-08	1500 (Std, Quad)	6.5', 2WD	31726	8,11				39114	12 8
06-08	1500 Mega	6.5', 2WD	31726	8,11				39114	12 8
04-08	1500 (Std, Quad)	6.5', 4WD	31726	8,11				39114	12 8
06-08	1500 Mega	6.5', 4WD	31726	8,11				39114	12 8
09-12	1500 (Quad, No Lar.)	6.5', 4WD	s/o D3107					39114	12 8
03-09	2500/3500 HD (All)	8'	31726	8,11,14		30771 18		39114	12 8
03-09	2500/3500 HD (All)	6.5', 4WD	31726	8,11		30771 18		39114	12 8
03-09	2500/3500 HD (All)	6.5' 2WD	31726	8,11		30771 18		39114	12 8
06-09	2500/3500 Mega	6.5' 2WD	31726	8,11		30771 18		39114	12 8
97-04	Dakota (All)	6'	s/o D3105	15				39114	12 8
05-10	Dakota (All)	6'	s/o D3106					39114	12 8
07-11	35/4500/5500 CAB	N/A	N/A			s/o R3504 18		39114	12 8
10-12	2500/3500 HD (All)	8'	31726	8,14		s/o R3505			
10-12	25/3500 Crew/Meg	6.5', 4WD	31726	8,14		s/o R3505			
10-11	25/35 Dually-Mega	6.5'	31726	8,14		s/o R3505			

CHOOSE YOUR TURNBUCKLES:

See page 482



REAR TIEDOWNS

CATCH PRODUCT VIDEO
torklift.com

FOOTNOTES FOR APPLICATION CHART

- (11) Will work with aftermarket hitches that **do not** have side-plates.
- (12) Will **only** work with aftermarket hitches that have side-plates (4" x 4" mounting footprint required).
- (14) On dually applications rear camper anchor point location may require the use of A7004.
- (15) Requires factory installed receiver w/open crosstube.
- (18) Will not work on welded single piece SuperHitches - use C3201.

(H) Indicates that drilling will be required, and the number following designates the total number of holes drilled for installation (example: H4 = 4 holes drilled).

For Fast and Friendly Tech Support
1-800-246-8132



OVER 35 YEARS OF INNOVATION. QUALITY. SAFETY.



TRUE

Frame Mounted Camper Tie Downs Application Guide

Step 1

CHOOSE YOUR FRONT TIE DOWNS

Does the truck have running boards that extend past the cab and onto the bed?

NO

YES

Series 2000 Front TieDowns

FRONT OR REAR TIEDOWN KITS INCLUDE:

One drivers and one passengers tiedown

Two Quicklinks

Turnbuckles Sold Separately (see page 482 for accessories)

Get the right numbers right now using the online interactive application guide at:

www.torklift.com

FRONT TIEDOWNS

CATCH PRODUCT VIDEO torklift.com



For Fast and Friendly Tech Support 1-800-246-8132



Year	Make/Model	Bed Length	E-Z INSTALL			Notes	Drill Holes
			Order #	Notes	Drill Holes		
CHEV/GMC							
95-00	3500	8'	s/o C2201	4		s/o C4201	4,5 4
99-07	1500/2500 LD Classic	8'	39117	3	2	s/o C4203	4,5 4
99-07	1500/2500 LD Classic	6.5'	39117	3	2	s/o C4203	4,5 4
01-07	1500/2500/3500 HD	8'	30253	10	0	s/o C4203	4,5 4
01-07	1500/2500/3500 HD	6.5'	30254	10	0	s/o C4203	4,5 4
07-10	2500/3500 New Body	8'	30253		0	s/o C4203	4,5 4
07-10	2500/3500 New Body	6.5'	30254		0	s/o C4203	4,5 4
07-10	1500 New Body Std.	6.5'	s/o C2208		0		N/A
07-12	1500 New Body Std.	8'	31723		0		N/A
07-12	1500 New Body Ext.	6.5'	s/o C2207		0		N/A
07-11	1500 New Body Ext.	8'	s/o C2207		0		N/A
04-12	1500 (CrewCab)	5.5'	s/o C2211		0		N/A
11-12	25/3500 HD Crew/EC	6.5'	31964		0		N/A
11-12	25/3500 HD Crew/EC	8'	31965		0		N/A
11-12	25/3500 Reg Cab Onl	8'	31966		0		N/A
TOYOTA							
05-12	Tacoma (4WD Only)	ALL	s/o T2303		0		N/A
05-12	Tacoma (2WD Only)	ALL	s/o T2308		0		N/A
00-06	Tundra Ext.	6.5'	s/o T2301		0		N/A
03-06	Tundra, w/HD tow pkg	6.5'	s/o T2301		0		N/A
05-06	Tundra, (All)	8'	s/o T2302		0		N/A
05-06	Tundra, w/HD tow pkg	8'	s/o T2302		0		N/A
07-11	Tundra (All)	6.5'	30842		0		N/A
07-12	Tundra (All)	8'	s/o T2305		0		N/A
07-12	Tundra (CrewMax)	5.5' (4WD)	s/o T2307		0		N/A
NISSAN							
05-12	Frontier (King/Crew)	6'	s/o N2409		0		N/A
04-09	Titan, King Cab, 2dr	6.5'	s/o N2402		0		N/A
04-12	Titan, Crew Cab, 4dr	5.5'	s/o N2401		0		N/A
2008	Titan, King Cab, 2dr	8'	s/o N2405		0		N/A
2008	Titan, Crew Cab, 4dr	7'	s/o N2406		0		N/A

FOOTNOTES FOR APPLICATION CHART

- (1) SuperHitch Magnum requires the use of R3504.
- (3) Drilling may be required - call 800.246.8132 to verify.
- (4) May require modification of running board bracket.
- (5) Additional labor required for install.
- (8) Will also work on trucks without receiver hitch.
- (9) HD tow pack attaches to side of frame, standard tow pack attaches to bottom of frame only.
- (10) 1500 HD vehicle owners please call 800.246.8132 to verify your correct application fit.
- (*) Only fits the front of a crew cab with the 5.5' bed.

TorkLift True Frame Mounted Camper Tiedowns

TorkLift's unique patented design incorporates four independent tiedown points that bolt directly to the trucks heavy-duty frame (no belly or cross bars). TorkLift tiedowns are engineered to fit tight and secure to your trucks frame with no compromise in ground clearance. Most applications are no drill making installation quick and easy.



CAMPER TIE DOWNS

In Section M: Starter Kits Vehicle Items Window & Door Interior Accessories Mats Steps Camper Tie Downs Wheel Chocks Ladders Carriers Winches Levelers Jacks



TRUE

Step 2

Frame Mounted Camper Tie Downs Application Guide

CHOOSE YOUR REAR TIE DOWNS

Does the vehicle have a rear receiver hitch that is:

Factory

SuperHitch

Aftermarket

Denotes limited supply!

Step 3

Year	Make/Model	Bed Length	FACTORY			AFTERMARKET			Drill Holes
			Order #	Notes		Notes	Order #	Notes	
CHEV/GMC									
95-00	3500	8'	s/o C3202	15		30771	1,18	39114	12 8
99-07	1500/2500 LD Classic	8'	s/o C3204	8		30771	18	39114	12 8
99-07	1500/2500 LD Classic	6.5'	s/o C3203	8				39114	12 8
01-07	1500/2500/3500 HD	8'	39120	8		30771	18	39112	12 8
01-07	1500/2500/3500 HD	6.5'	39153	8		30771	18	39112	12 8
07-10	2500/3500 New Body	8'	30763	15		30771	18	39112	12 8
07-10	2500/3500 New Body	6.5'	30763	15		30770		39112	12 8
07-10	1500 New Body Std.	6.5'	s/o C3203	8				39114	12 8
07-12	1500 New Body Std.	8'	s/o C3204	8				39114	12 8
07-12	1500 New Body Ext.	6.5'	s/o C3203	8				39114	12 8
07-11	1500 New Body Ext.	8'	s/o C3204	8				39114	12 8
04-12	1500 (CrewCab)	5.5'	s/o C3203	8				39114	12 8
11-12	25/3500 HD Crew/EC	6.5'	31963			31963		31963	12 8
11-12	25/3500 HD Crew/EC	8'	31963			31963		31963	12 8
11-12	25/3500 Reg Cab Onl	8'	31963			31963		31963	12 8
TOYOTA									
05-10	Tacoma (4WD)	ALL	s/o T3303					39114	12 8
00-06	Tundra w/std TP, Ext.	6.5'	s/o T3301	8,9				39114	12 8
03-06	Tundra, w/HD tow pkg	6.5'	s/o T3302	9				39114	12 8
05-06	Tundra	8'	s/o T3301	8,9				39114	12 8
05-06	Tundra, w/HD tow pkg	8'	s/o T3302	9				39114	12 8
07-11	Tundra (All)	6.5'	s/o T3304					39114	12 8
07-12	Tundra (All)	8'	s/o T3304					39114	12 8
07-12	Tundra (CrewMax)	5.5'(4WD)	s/o T3304					39114	12 8
NISSAN									
05-12	Frontier (King/Crew)	6'	s/o N3403	13				39114	12 8
04-09	Titan, King Cab, 2dr	6.5'	s/o N3401					39114	12 8
04-12	Titan, Crew Cab, 4dr	5.5'	s/o N3401					39114	12 8
2008	Titan, King Cab, 2dr	8'	s/o N3401					39114	12 8
2008	Titan, Crew Cab, 4dr	7'	s/o N3401					39114	12 8

CHOOSE YOUR TURNBUCKLES:

See page 482



FOOTNOTES FOR APPLICATION CHART

- (12) Will **only** work with aftermarket hitches that have side-plates (4" x 4" mounting footprint required).
- (13) Will only work on truck without hitch.
- (15) Requires factory installed receiver w/open crosstube.
- (18) Will not work on welded single piece SuperHitches - use C3201.

(H) Indicates that drilling will be required, and the number following designates the total number of holes drilled for installation (example: H4 = 4 holes drilled).

Don't settle for almost frame mounted...
Make sure that your Truck Camper is safe and secure with TorkLift True Frame Mounted Camper Tiedowns.



For Fast and Friendly Tech Support
1-800-246-8132



CATCH PRODUCT VIDEO
torklift.com



REAR TIEDOWNS

TORKLIFT STABLE LOAD

Put your Leaf Springs Back to Work

Specifically engineered for For all Towing and Hauling Applications on 85-08 Ford Super Duty and 94-08 Dodge Heavy Duty trucks. Torklift's large Stable Load Spring Pads replace the smaller, inefficient factory rubber bump stop pads, putting the factory springs back to work stabilizing the suspension and the truck's load.

Kit includes: 4 Stable Loads

Features: • Lifetime Warranty • Quick No-Drill Installation • Improved handling • Lower Air Spring pressure • Angled design maximizes spring contact surface • Anti-rotation Key Tabs.



30783 Stable Load Spring Pads, set/4 #A7200 4

TORKLIFT INTERNATIONAL
OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.
TORKLIFT SPRINGLOAD XL



100% Stainless Steel

Designed exclusively for all frame-mounted tiedowns. The 100% Stainless Steel Springload XL turnbuckle gives a custom clean look and an inexpensive upgrade alternative to the basic springload and chain system. The Springload XL incorporates the Lifetime Guarantee FastGun internal springs and Spring Tension Indicators. Sold in sets of two with a reach of 28" to 44".

39579 Long Springloaded Turnbuckle #S9050A 1



TORKLIFT BASIC SPRING LOAD KIT

- Lifetime Warranty • Spring Tension Indicators
- Kit includes 2 Springload Units & 2 Heavy-Duty Forged Steel Turnbuckles



SPRING-LOAD UNITS - Add to any tie down kit to make it spring-loaded

Includes	2 Spring loaded units with 2 heavy duty turnbuckles	39122	
----------	---	--------------	--



ANCHORGUARD TURNBUCKLES

Stainless steel, bed-mounted turnbuckles come with spring tension indicators. Includes four turnbuckles; two front springloaded and two rear cushioned. Designed for bed-mounted tie down systems. Front extends 20" to 24.5" and rear extends 28" to 33". Covered by our lifetime warranty and proudly made in the USA.

30248 Anchor Guard, 100% Stainless Steel #S9013 1



TORKLIFT ACCESSORIES FAST GUN



- 100% Tool Free;
- 100% Lockable;
- 100% Stainless Steel;
- Lifetime Warranty;
- Spring Tension Indicators;
- Fastest on the market.

For front & rear frame mounted and rear bumper mounted tie downs, 25'- 43' reach. Kit Includes: 2 Fastgun Turnbuckles.

- Long Range:
- 39903** Stainless Grey #S9522 1
 - 39904** Stainless White #S9523 1
 - 30245** Stainless Polished #S9526 1
- 4 Pack Keyed Alike Lock Set:
- 30047** Lock Set (4/Pack) #S9500 1

Works only with bed mounted front tie downs, 14.5' - 21.5' reach. Kit includes: 2 fastgunturnbuckles.

“.45”:
30244 Stainless Polished #S9527 1



Tech Support:
1-800-246-8132



LEISURE TIME WHEEL CHOCK

These large wheel chocks are 44% larger and 24% stronger than regular wheel chocks. They measure 4 1/2" H x 8" W x 10 1/2" L.

38728 Large Chock #14079 g