

MAZDA CX-9

2020 MAZDA SCHEDULED MAINTENANCE MENU

EVERY 8,000 KM OR 6 MONTHS (whichever comes first)

- Replace engine oil; Replace oil filter *1
- Inspect brake and clutch fluid, washer fluid, and coolant level
- Inspect air filter
- Inspect function of all lights
- Inspect tire inflation pressure and tire wear
- Lubricate all locks and hinges
- Rotate tires

EVERY 24,000 KM OR 12 MONTHS (whichever comes first)

Includes 8,000 KM service, plus:

• Inspect and clean brake discs and pads, front and rear

EVERY 32,000 KM OR 24 MONTHS (whichever comes first)

Includes 8,000 KM service, plus:

- Inspect fuel lines and hoses *2
- Inspect brake lines, hoses and connections
- Inspect steering operation and linkage
- Inspect front and rear suspension components, ball joints and wheel bearing axial play
- Inspect driveshaft dust boots
- Tighten bolts and nuts on chassis and body

EVERY 40,000 KM OR 24 MONTHS (whichever comes first)

Includes 8,000 KM service, plus:

• Replace cabin air filter

EVERY 48,000 KM OR 24 MONTHS (whichever comes first)

Includes 24,000 KM service, plus:

• Inspect drive belts

EVERY 56,000 KM

Includes 8,000 KM service, plus:

Replace air filter

EVERY 64,000 KM OR 48 MONTHS (whichever comes first)

Includes 32,000 KM service, plus:

- Inspect emission hoses and tubes*2
- Replace spark plugs

EVERY 72,000 KM OR 60 MONTHS (whichever comes first)

Includes 24,000 KM service, plus:

• Inspect exhaust system and heat shields

EVERY 192,000 KM OR 120 MONTHS (whichever comes first)


Replace coolant, after that every 96,000 KM or 60 months *3

ADDITIONAL OPERATIONS

- Inspect flat tire repair kit (if installed) annually and check fluid expiration date
- If Rear Differential has been submerged in water, replace rear differential and transfer oil

At each visit, we'll provide you with an exclusive Vehicle Health Check Report, which shows you the overall condition of your Mazda.

CLICK HERE FOR AN ENLARGED VERSION

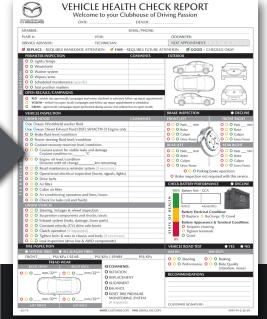

BOOK AN APPOINTMENT

or Owner's Manual for the specific maintenance intervals pertaining to your vehicle.

Scheduled services may vary by year of vehicle. Please consult your factory-trained Service expert

Your Mazda Dealer will provide you with a completed service checklist on every maintenance visit. In addition, your Mazda will be road tested after any servicing relating to brakes, steering or driving performance, to help verify safe functioning. Information listed in this document is accurate at time of publication and is subject to change without notice. Ask your Mazda Dealer for more detailed information. This inspection list/schedule is intended as a guide only and should not be relied upon to ensure vehicle safety. See your Mazda dealer for full details, maintenance and inspection.

Inspect is defined as: inspect and clean, repair, adjust, fill up, or replace if necessary.

- *1 Reset the engine oil data after replacing the engine oil.
- *2 According to state/provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed
 - at the recommended time or mileage/kilometer period to ensure long-term reliability.
- *3 Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.



VEHICLE HEALTH CHECK REPORT

Welcome to your Clubhouse of Driving Passion

| Γ | nazda date: | | DEALER: | | | |
|--|---|--|---|---------------------|--|-------------------------|
| MEMBER: EMAIL/PHONE: | | | | | | |
| | PLATE #: VIN#: | | ODOMETER: | | | |
| - | SERVICE ADVISOR: TEC | HNICIAN: | | NEXT | APPOINTMENT: (D D |) / M M / Y Y) |
| - | Ø REPLACE – REQUIRES IMMEDIATE ATTENTIO | EQUIRES FUTURE ATTENTION Ø GOOD – CHECKED OKAY | | | | |
| | PERIMETER INSPECTION | | COMMENTS | EXTERI | | |
| RECEPTION | O O Lights/lamps | | COMMENTS | EXTERIOR | | |
| | O Windshield | | | | | |
| | O O Washer system | | | | | |
| | O O Wipers/arms | | | | | |
| | O O Scheduled maintenance (specify) | | | | | |
| | O O Seat position markers | | | | | |
| | OPEN RECALLS/CAMPAIGNS | | | | 0000 | |
| | O RED - vehicle has open recall/campaigns and owner de | | Food | | | |
| | YELLOW - vehicle has open recall/campaigns and follow GREEN - open recall/campaigns repair performed durin | | | | | |
| | | nas no open recans | DDAKE | INCRECTION | ● DECUNE | |
| _ | VEHICLE INSPECTION UNDER HOOD | | COMMENTS | | INSPECTION | DECLINE |
| TECHNICIAN | Оок Опитер Windshield washer fluid | | COMMENTS | FRONT | | FRONT RIGHT |
| | OK OFILLED Diesel Exhaust Fluid (DEF) SKYACTIV-D Engine only | | | 000 | Pads mm | O O Pads mm O O O Rotor |
| | O O Brake fluid level/condition | | | 000 | | O O Caliper |
| | O Power steering fluid level/condition | | | | Lines/hoses | O O Lines/hoses |
| | O Coolant recovery reservoir level/condition | | | REAR LE | | REAR RIGHT |
| | ○ ○ Coolant system for visible leaks and damage Coolant condition to:°C | | | | Padsmm | O O Pads mm |
| | | | | 000 | | O O Rotor |
| | ○ ○ O Engine oil level/condition Distance until oil changekm remaining | | | 000 | | O O Caliper |
| | O O Reset maintenance reminder system (if necessary) | | | 000 | Lines/hoses | O O Lines/hoses |
| | O O Operational electrical inspection (horns | | | ○ ○ O Parking brake | | |
| | O O Drive belts | | O Brake inspection not required with this service | | | |
| | ○ ○ O Air filter | | | CHECK | BATTERY PERFORMANC | E ● DECLINE |
| | O O Cabin air filter | | | 100% | Battery Test – CCA | |
| | O O Air conditioning operation and lines/hoses | | | | | |
| | O O Check for leaks (oil and fluids) | | | ЕАЦТН | | mazoa |
| | UNDER VEHICLE | | EA | RATED MEASURED | The state of the s | |
| | O O Steering, linkages & wheel inspection | | | エ | ■ Battery Electrical Condition: | |
| | O O Suspension components and shocks/struts | | | O F | O Replace O Recharg | ge O Good |
| | O O Exhaust system (leaks, damage, loose parts) O O Constant velocity (CV) drive axle boots | | | ATE | Battery Appearance & | Terminal Condition: |
| | O O Clutch operation (if equipped) | | | STA | Requires cleaningTighten terminals | |
| | O O Tighten bolts & nuts to chassis and body (if necessary) | | | S | O Good | |
| | O O Leak inspection (drive line & AWD components) | | | 0% | | |
| Г | TIRE INSPECTION | | VEHIC | LE ROAD TEST | ● YES ● NO | |
| ● WINTER TIRES ● ALL SEASON TIRES | | | | KM IN: | : KM C | OUT: |
| | FRONT PSI/KPa REAR PSI/ | PSI/KPa | 000 | Steering OOO | Braking | |
| TREAD WEAR | | | | | Performance O O O | |
| RIGHT FRONT RIGHT BACK RECOMMEND: | | | : | | | (vibration, noise) |
| O O O mm/32 ^{nds} O O O mm/32 ^{nds} O ROTATION O REPLACEMENT | | | NIT | RECON | MENDATIONS | |
| | | | O REPLACEMENT O ALIGNMENT | | | |
| | | O BALANCE | | | | |
| | | | ET TIRE PRESSURE | | | |
| 0 | $0 \circ 0 = mm/32^{nds}$ $0 \circ 0 = mm/32^{nds}$ | | | | | |

LEFT BACK

CUSTOMER SIGNATURE: