



Mazda CX-5

2017 Mazda SCHEDULED MAINTENANCE MENU

EVERY 8,000 KM OR 6 MONTHS

- Replace engine oil and filter
- Inspect brake and clutch fluid, washer fluid, and coolant level
- Inspect air filter
- Inspect function of all lights
- Inspect all tires - inflation and wear *³
- Lubricate all locks and hinges
- Rotate tires *³

EVERY 24,000 KM OR 12 MONTHS

Includes 8,000 KM inspection, plus:

- Inspect and clean brake discs and pads, front and rear

EVERY 32,000 KM OR 24 MONTHS

Includes 8,000 KM inspection, plus:

- Inspect fuel lines and hoses *²
- Inspect brake lines, hoses and connections
- Inspect steering operation and linkage
- Inspect front and rear suspension components, ball joints and wheel bearing axial play
- Inspect driveshaft dust boots
- Tighten bolts and nuts on chassis and body

EVERY 48,000 KM OR 24 MONTHS

Includes 24,000 KM inspection, plus:

- Replace cabin air filter
- Inspect drive belts

EVERY 56,000 KM OR 36 MONTHS

Includes 8,000 KM inspection, plus:

- Replace air filter

EVERY 64,000 KM OR 48 MONTHS

Includes 32,000 KM inspection, plus:

- Inspect emission hoses and tubes *²

EVERY 72,000 KM OR 60 MONTHS

Includes 24,000 KM inspection, plus:

- Inspect exhaust system and heat shields

EVERY 120,000 KM

- Replace spark plugs


EVERY 192,000 KM OR 10 YEARS

- Replace coolant, after that every 96,000km or 60 months *¹

ADDITIONAL OPERATIONS

- Inspect flat tire repair kit (if installed) annually *⁵
- If Rear Differential or transfer case has been submerged in water, replace oil *⁴

At each visit, we'll provide you with an exclusive Vehicle Inspection Report, which shows you the overall condition of your Mazda.

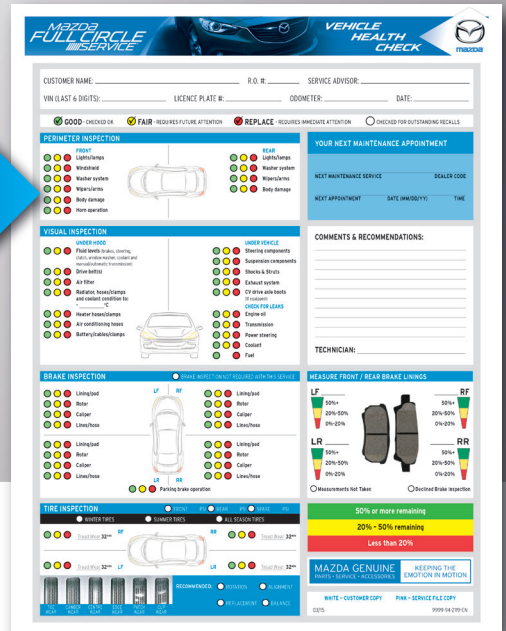

Scheduled services may vary by year of vehicle. Please consult your Service Advisor or Owner's Manual for the specific maintenance intervals pertaining to your vehicle.

TO LEARN MORE, CLICK ON LOGO



Your Mazda Dealer will provide you with a completed service checklist on every maintenance visit. In addition, your Mazda will be road tested after any servicing relating to brakes, steering or driving performance, to help verify safe functioning. Information listed in this document is accurate at time of publication and is subject to change without notice. Ask your Mazda Dealer for more detailed information. This inspection list/schedule is intended as a guide only and should not be relied upon to ensure vehicle safety. See your Mazda dealer for full details, maintenance and inspection.

Inspect is defined as: inspect and clean, repair, adjust, fill up, or replace if necessary.

- *¹ Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.
- *² According to state/provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage/kilometer period to ensure long-term reliability.
- *³ The Tire Pressure Monitoring System (TPMS) initialization must be performed so that the system operates normally (if equipped).
- *⁴ If this component has been submerged in water, the oil should be replaced.
- *⁵ Check the tire repair fluid expiration date every year when performing the periodic maintenance. Replace the tire repair fluid bottle with new one before the expiration date.

CUSTOMER NAME: _____ R.O. #: _____ SERVICE ADVISOR: _____

VIN (LAST 6 DIGITS): _____ LICENCE PLATE #: _____ ODOMETER: _____ DATE: _____

GOOD - CHECKED OK **FAIR** - REQUIRES FUTURE ATTENTION **REPLACE** - REQUIRES IMMEDIATE ATTENTION CHECKED FOR OUTSTANDING RECALLS

PERIMETER INSPECTION

<p>FRONT</p> <ul style="list-style-type: none"> <input type="checkbox"/> Lights/lamps <input type="checkbox"/> Windshield <input type="checkbox"/> Washer system <input type="checkbox"/> Wipers/arms <input type="checkbox"/> Body damage <input type="checkbox"/> Horn operation 		<p>REAR</p> <ul style="list-style-type: none"> <input type="checkbox"/> Lights/lamps <input type="checkbox"/> Washer system <input type="checkbox"/> Wipers/arms <input type="checkbox"/> Body damage
---	--	--

YOUR NEXT MAINTENANCE APPOINTMENT

NEXT MAINTENANCE SERVICE _____ DEALER CODE _____

NEXT APPOINTMENT _____ DATE (MM/DD/YY) _____ TIME _____

VISUAL INSPECTION

<p>UNDER HOOD</p> <ul style="list-style-type: none"> <input type="checkbox"/> Fluid levels (brakes, steering, clutch, window washer, coolant and manual/automatic transmission) <input type="checkbox"/> Drive belt(s) <input type="checkbox"/> Air filter <input type="checkbox"/> Radiator, hoses/clamps and coolant condition to: _____ °C <input type="checkbox"/> Heater hoses/clamps <input type="checkbox"/> Air conditioning hoses <input type="checkbox"/> Battery/cables/clamps 		<p>UNDER VEHICLE</p> <ul style="list-style-type: none"> <input type="checkbox"/> Steering components <input type="checkbox"/> Suspension components <input type="checkbox"/> Shocks & Struts <input type="checkbox"/> Exhaust system <input type="checkbox"/> CV drive axle boots (if equipped) CHECK FOR LEAKS <input type="checkbox"/> Engine oil <input type="checkbox"/> Transmission <input type="checkbox"/> Power steering <input type="checkbox"/> Coolant <input type="checkbox"/> Fuel
---	--	---

COMMENTS & RECOMMENDATIONS:

TECHNICIAN: _____

BRAKE INSPECTION

BRAKE INSPECTION NOT REQUIRED WITH THIS SERVICE

<ul style="list-style-type: none"> <input type="checkbox"/> Lining/pad <input type="checkbox"/> Rotor <input type="checkbox"/> Caliper <input type="checkbox"/> Lines/hose 		<ul style="list-style-type: none"> <input type="checkbox"/> Lining/pad <input type="checkbox"/> Rotor <input type="checkbox"/> Caliper <input type="checkbox"/> Lines/hose
<ul style="list-style-type: none"> <input type="checkbox"/> Lining/pad <input type="checkbox"/> Rotor <input type="checkbox"/> Caliper <input type="checkbox"/> Lines/hose 		<ul style="list-style-type: none"> <input type="checkbox"/> Lining/pad <input type="checkbox"/> Rotor <input type="checkbox"/> Caliper <input type="checkbox"/> Lines/hose

Parking brake operation

MEASURE FRONT / REAR BRAKE LININGS

<p>LF</p>		<p>RF</p>
<p>LR</p>		<p>RR</p>

Measurements Not Taken Declined Brake Inspection

TIRE INSPECTION

FRONT _____ PSI REAR _____ PSI SPARE _____ PSI

WINTER TIRES SUMMER TIRES ALL SEASON TIRES

<ul style="list-style-type: none"> <input type="checkbox"/> Tread Wear <u>32</u>^{nds} RF 		<ul style="list-style-type: none"> <input type="checkbox"/> Tread Wear <u>32</u>^{nds} RR
<ul style="list-style-type: none"> <input type="checkbox"/> Tread Wear <u>32</u>^{nds} LF 		<ul style="list-style-type: none"> <input type="checkbox"/> Tread Wear <u>32</u>^{nds} LR



RECOMMENDED: ROTATION ALIGNMENT

REPLACEMENT BALANCE

50% or more remaining

20% - 50% remaining

Less than 20%

MAZDA GENUINE
PARTS • SERVICE • ACCESSORIES

KEEPING THE
EMOTION IN MOTION

WHITE - CUSTOMER COPY

PINK - SERVICE FILE COPY