



Mazda 5

2012-2015 Mazda SCHEDULED MAINTENANCE MENU

EVERY 8,000 KM OR 4 MONTHS

- Replace engine oil; Replace oil filter
- Inspect function of all lights
- Inspect brake fluid, clutch fluid, power steering fluid, washer fluid and coolant level
- Inspect all tires - inflation and wear
- Lubricate all locks and hinges
- Rotate tires (priced separately)

EVERY 24,000 KM OR 12 MONTHS

Includes 8,000 km service, plus:

- Inspect and clean brake discs and pads, front and rear
- Lubricate caliper rails/pins
- Inspect A/C operation

EVERY 40,000 KM OR 24 MONTHS

Includes 8,000 km service, plus:

- Replace cabin air filter (if equipped)

EVERY 48,000 KM OR 24 MONTHS

Includes 24,000 km service, plus:

- Inspect cooling system, pressure test cap and check system for leaks
- Inspect fuel lines and hoses
- Inspect brake lines, hoses and connections
- Inspect steering operation and linkage
- Inspect front and rear suspension components, ball joints and wheel bearing axial play
- Inspect driveshaft dust boots
- Tighten bolts and nuts on chassis and body

EVERY 56,000 KM

Includes 8,000 km service, plus:

- Inspect drive belts and tensioner
- Replace air cleaner filter

EVERY 72,000 KM OR 36 MONTHS

Includes 24,000 km service, plus:

- Inspect exhaust system and heat shields

EVERY 96,000 KM OR 48 MONTHS

Includes 48,000 km service, plus:

- Inspect emission hoses and tubes
- Replace coolant*, after that every 24 months

EVERY 120,000 KM

Includes 24,000 km service, plus:

- Audible inspection of valve clearance, if noisy, adjust
- Replace spark plugs**

At each visit, we'll provide you with an exclusive Vehicle Inspection Report, which shows you the overall condition of your Mazda.

CLICK HERE FOR AN ENLARGED VERSION

TO LEARN MORE, CLICK ON LOGO



Your Mazda Dealer will provide you with a completed service checklist on every maintenance visit. In addition, your Mazda will be road tested after any servicing relating to brakes, steering or driving performance, to help verify safe functioning. Information listed in this document is accurate at time of publication and is subject to change without notice. Ask your Mazda Dealer for more detailed information. This inspection list/schedule is intended as a guide only and should not be relied upon to ensure vehicle safety. See your Mazda dealer for full details, maintenance and inspection.

* If vehicle equipped with FL22 coolant replace at 192,000 km or 10 years, after that every 96,000 km or 5 years. Use FL22 type coolant in vehicles with the inscription "FL22" on the radiator cap itself or the surrounding area. Use FL22 when replacing the coolant.

** Maintenance intervals may vary based on driving conditions. Please refer to owners manual.

CUSTOMER NAME: _____ R.O. #: _____ SERVICE ADVISOR: _____

VIN (LAST 6 DIGITS): _____ LICENCE PLATE #: _____ ODOMETER: _____ DATE: _____



GOOD - CHECKED OK



FAIR - REQUIRES FUTURE ATTENTION



REPLACE - REQUIRES IMMEDIATE ATTENTION




CHECKED FOR OUTSTANDING RECALLS

PERIMETER INSPECTION

FRONT

- ☐ Lights/lamps
- ☐ Windshield
- ☐ Washer system
- ☐ Wipers/arms
- ☐ Body damage
- ☐ Horn operation

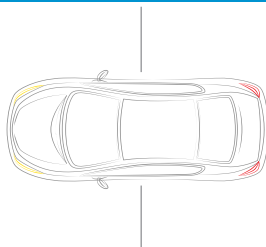


REAR

- ☐ Lights/lamps
- ☐ Washer system
- ☐ Wipers/arms
- ☐ Body damage

VISUAL INSPECTION

UNDER HOOD

- ☐ Fluid levels (brakes, steering, clutch, window washer, coolant and manual/automatic transmission)
- ☐ Drive belt(s)
- ☐ Air filter
- ☐ Radiator, hoses/clamps and coolant condition to: _____ °C
- ☐ Heater hoses/clamps
- ☐ Air conditioning hoses
- ☐ Battery/cables/clamps

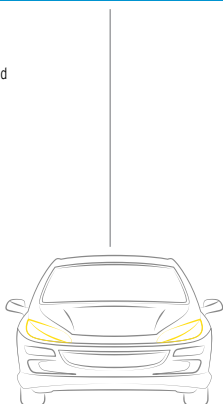

UNDER VEHICLE

- ☐ Steering components
- ☐ Suspension components
- ☐ Shocks & Struts
- ☐ Exhaust system
- ☐ CV drive axle boots (if equipped)
- ☐ CHECK FOR LEAKS
- ☐ Engine oil
- ☐ Transmission
- ☐ Power steering
- ☐ Coolant
- ☐ Fuel

YOUR NEXT MAINTENANCE APPOINTMENT

NEXT MAINTENANCE SERVICE _____ DEALER CODE _____

NEXT APPOINTMENT _____ DATE (MM/DD/YY) _____ TIME _____

COMMENTS & RECOMMENDATIONS:

TECHNICIAN: _____

BRAKE INSPECTION

☐ BRAKE INSPECTION NOT REQUIRED WITH THIS SERVICE

- ☐ Lining/pad
- ☐ Rotor
- ☐ Caliper
- ☐ Lines/hose




- ☐ Lining/pad
- ☐ Rotor
- ☐ Caliper
- ☐ Lines/hose

- ☐ Lining/pad
- ☐ Rotor
- ☐ Caliper
- ☐ Lines/hose

- ☐ Lining/pad
- ☐ Rotor
- ☐ Caliper
- ☐ Lines/hose

☐ Parking brake operation

MEASURE FRONT / REAR BRAKE LININGS

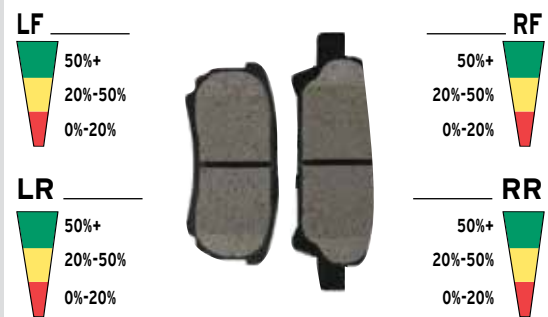

☐ Measurements Not Taken

☐ Declined Brake Inspection

TIRE INSPECTION

☐ FRONT _____ PSI ☐ REAR _____ PSI ☐ SPARE _____ PSI


☐ WINTER TIRES

☐ SUMMER TIRES

☐ ALL SEASON TIRES

- ☐ Tread Wear 32^{nds}

RF

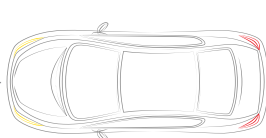

RR

- ☐ Tread Wear 32^{nds}

- ☐ Tread Wear 32^{nds}

LF

LR

- ☐ Tread Wear 32^{nds}



RECOMMENDED: ☐ ROTATION ☐ ALIGNMENT
☐ REPLACEMENT ☐ BALANCE

50% or more remaining

20% - 50% remaining

Less than 20%

MAZDA GENUINE
PARTS • SERVICE • ACCESSORIES

KEEPING THE
EMOTION IN MOTION

WHITE - CUSTOMER COPY

PINK - SERVICE FILE COPY